




HGM6110LT/HGM6120LT

GENSET CONTROLLER

COMMUNICATION PROTOCOL

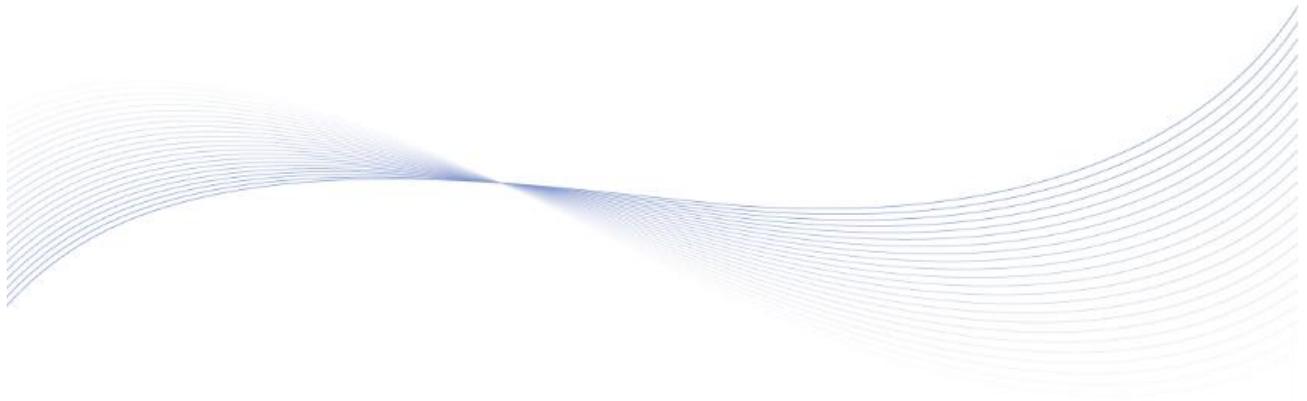

郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

No. 28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: www.smartgen.com.cn/

www.smartgen.cn/

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

| Date | Version | Content |
|------------|---------|---|
| 2024-03-08 | V1.0 | Original release. |
| 2024-07-04 | V1.1 | 1. Update new contents of 03 function code; 2. Add support for HGM6100LT series genset controller. |
| 2024-07-26 | V1.2 | Update new contents of 03 function code (0083 and 0169). |
| 2025-07-03 | V1.3 | 1. Update the content of HGM6100LT 03 function code (70-71 & 105-119); 2. Update the content and ratio of HGM6100LT and HGM6100Z 03 function code. |
| 2025-10-21 | V1.4 | 1. Remove the protocol of HGM6100Z; 2. Modify the description of baud rate and stop bit; 3. Modify some items displayed in 01H function code coil data field. |

CONTENTS

| | |
|---|----|
| 1 DESCRIPTION..... | 4 |
| 2 WIRING DIAGRAM..... | 5 |
| 3 CONTROLLER INTERNAL REGISTER ADDRESS AND DATA..... | 6 |
| 3.1 FUNCTION CODE 01H MAPPING COIL FIELD..... | 6 |
| 3.2 FUNCTION CODE 03H MAPPING DATA FIELD OF PARAMETERS..... | 10 |
| 3.3 FUNCTION CODE 05H MAPPING REMOTE COIL FIELD..... | 15 |
| 3.4 GENSET RUNNING STATUS..... | 16 |
| 3.5 REMOTE START STATUS..... | 16 |
| 3.6 DPF REGENERATION REMINDER..... | 16 |
| 3.7 REGENERATION INHIBIT..... | 16 |
| 3.8 DRIVER ALARM..... | 17 |
| 3.9 REGENERATION STATUS..... | 17 |
| 3.10 DPF STATUS..... | 17 |
| 3.11 DPF CARBON DEPOSIT..... | 17 |
| 3.12 COMMUNICATION PARAMETER VIEWING AND CONFIGURATION..... | 18 |
| 4 FAQ..... | 19 |
| 4.1 GROUNDING OF THE CABLE SHIELD..... | 19 |
| 4.2 TERMINATION RESISTOR..... | 19 |
| 4.3 RS485 TO USB CONVERTER..... | 19 |
| 4.4 EXTEND TRANSMISSION DISTANCE..... | 19 |
| 4.5 SOLUTIONS FOR COMMUNICATION FAILURE..... | 19 |

1 DESCRIPTION

This protocol describes the controller RS485 half-duplex serial port's read and write command format, and the definition of internal information & data for the third-party to develop and use.

There is one RS485 port on the HGM6100LT series genset controller. The controller works as a slave module, and uses Modbus-RTU protocol, but it doesn't support other protocols, such as Modbus-ASCII, etc.

Frame format:

Communication address: 1~254 (Default: 1)

Baud rate: 9600bps

Start bit: 1 bit

Data bit: 8 bits

Parity bit: no bit for no parity, 1 bit for even or odd parity (Default: no parity)

Stop bit: 2 bits

Function code supported: 01H, 03H, 05H, 06H. Function code 01H is used for reading various coil status inside the controller (such as close, open, fault of breaker, auto or manual status, etc.); Function code 03H is used for reading value register inside the controller (value register saves various set value of analog data and parameters); Function code 05H is used for sending remote command; Function code 06H is used for saving a single value into the single register inside the controller.

Error checking method: CRC16.

The register data inside the controller are packed as two bytes per register.

Communication timeout period: over 200ms.

Transmission distance: At a baud rate of 9600bps, the maximum distance can reach up to 1,000 meters with 120-ohm shielded twisted pair cable.

A maximum of 120 registers can be read per request.

It can support the communication of 32 networked controllers.

RS485 cabling must use 120-ohm shielded twisted pair cable, and one end of the shield should be grounded.

2 WIRING DIAGRAM

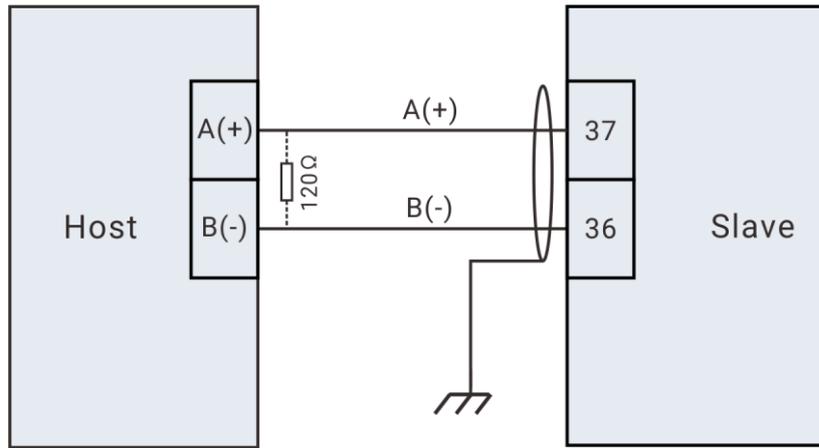


Figure 1 Single Device Communication Wiring Diagram

NOTE 1: The 120Ω resistor at controller side can be set by the matched resistor enable setting. When it is enabled, the internal 120Ω resistor of controller is connected with the RS485A and RS485B in parallel. (default configuration is enabled)

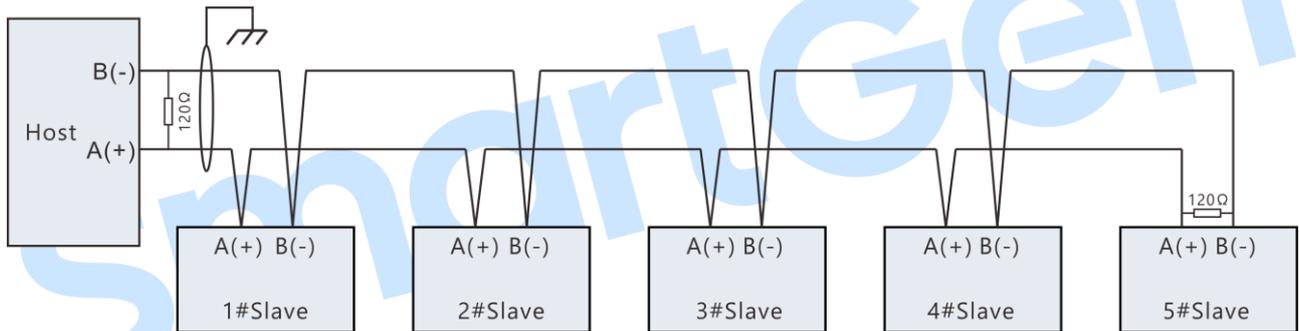


Figure 2 Multiple Devices Communication Wiring Diagram

NOTE 1: Please configure each controller's communication module address before networking. Same module address is not allowed in one network.

NOTE 2: One end of the communication cable shield should be grounded at the host side.

3 CONTROLLER INTERNAL REGISTER ADDRESS AND DATA

3.1 FUNCTION CODE 01H MAPPING COIL FIELD

Table 2 Alarm and Coil Status of Data Field

| Modbus Address | PLC Address | Item | Description |
|----------------|-------------|-------------------------------|---|
| 0000 | 0001 | Common Alarm | "0" means there is no common alarm "1" means there are common alarms The content listed below follows the same rule |
| 0001 | 0002 | Common Warning | 1 as active |
| 0002 | 0003 | Common Shutdown | 1 as active |
| 0003 | 0004 | Remote Mode | 1 as active |
| 0004 | 0005 | Battle Mode | 1 as active |
| 0005 | 0006 | Reserved | 1 as active |
| 0006 | 0007 | Mains On-load | 1 as active |
| 0007 | 0008 | Gen. On-load | 1 as active |
| 0008 | 0009 | Emergency Stop | 1 as active |
| 0009 | 0010 | Overspeed Shutdown | 1 as active |
| 0010 | 0011 | Underspeed Shutdown | 1 as active |
| 0011 | 0012 | Loss of Speed Signal Shutdown | 1 as active |
| 0012 | 0013 | Overfrequency Shutdown | 1 as active |
| 0013 | 0014 | Underfrequency Shutdown | 1 as active |
| 0014 | 0015 | Overvoltage Shutdown | 1 as active |
| 0015 | 0016 | Undervoltage Shutdown | 1 as active |
| 0016 | 0017 | Gen. Overcurrent Shutdown | 1 as active |
| 0017 | 0018 | Crank Failure | 1 as active |
| 0018 | 0019 | High Water Temp. Shutdown | 1 as active |
| 0019 | 0020 | Low Oil Pressure Shutdown | 1 as active |
| 0020 | 0021 | No Gens Shutdown | 1 as active |
| 0021 | 0022 | Input Shutdown | 1 as active |
| 0022 | 0023 | Low Fuel Level Shutdown | 1 as active |
| 0023 | 0024 | Low Coolant Level Shutdown | 1 as active |
| 0024 | 0025 | High Water Temp. Warning | 1 as active |
| 0025 | 0026 | Low Oil Pressure Warning | 1 as active |
| 0026 | 0027 | Gen. Overcurrent Warning | 1 as active |
| 0027 | 0028 | Stop Failure Warning | 1 as active |
| 0028 | 0029 | Low Fuel Level Warning | 1 as active |
| 0029 | 0030 | Charging Failure Warning | 1 as active |
| 0030 | 0031 | Battery Undervoltage Warning | 1 as active |
| 0031 | 0032 | Battery Overvoltage Warning | 1 as active |
| 0032 | 0033 | Input Warning | 1 as active |
| 0033 | 0034 | Loss of Speed Signal Warning | 1 as active |
| 0034 | 0035 | Low Coolant Level Warning | 1 as active |

| Modbus Address | PLC Address | Item | Description |
|----------------|-------------|----------------------------------|-------------|
| 0035 | 0036 | Temp. Sensor Open Warning | 1 as active |
| 0036 | 0037 | OP Sensor Open Warning | 1 as active |
| 0037 | 0038 | Maintenance Due Warning | 1 as active |
| 0038 | 0039 | Charger Failed to Charge Warning | 1 as active |
| 0039 | 0040 | Over Power Warning | 1 as active |
| 0040 | 0041 | In Test Mode | 1 as active |
| 0041 | 0042 | In Auto Mode | 1 as active |
| 0042 | 0043 | In Manual Mode | 1 as active |
| 0043 | 0044 | In Stop Mode | 1 as active |
| 0044 | 0045 | Temp. Sensor Open Shutdown | 1 as active |
| 0045 | 0046 | OP Sensor Open Shutdown | 1 as active |
| 0046 | 0047 | Maintenance Due Shutdown | 1 as active |
| 0047 | 0048 | Over Power Shutdown | 1 as active |
| 0048 | 0049 | Emergency Stop Input | 1 as active |
| 0049 | 0050 | Aux. Input 1 | 1 as active |
| 0050 | 0051 | Aux. Input 2 | 1 as active |
| 0051 | 0052 | Aux. Input 3 | 1 as active |
| 0052 | 0053 | Aux. Input 4 | 1 as active |
| 0053 | 0054 | Aux. Input 5 | 1 as active |
| 0054 | 0055 | Short Circuit Warning | 1 as active |
| 0055 | 0056 | Self-defined Input 1 Warning | 1 as active |
| 0056 | 0057 | Start Relay Output | 1 as active |
| 0057 | 0058 | Fuel Relay Output | 1 as active |
| 0058 | 0059 | Aux. Output 1 | 1 as active |
| 0059 | 0060 | Aux. Output 2 | 1 as active |
| 0060 | 0061 | Aux. Output 3 | 1 as active |
| 0061 | 0062 | Aux. Output 4 | 1 as active |
| 0062 | 0063 | Reserved | 1 as active |
| 0063 | 0064 | Reserved | 1 as active |
| 0064 | 0065 | Mains Abnormal | 1 as active |
| 0065 | 0066 | Mains Normal | 1 as active |
| 0066 | 0067 | Mains Overvoltage | 1 as active |
| 0067 | 0068 | Mains Undervoltage | 1 as active |
| 0068 | 0069 | Mains Phase Loss | 1 as active |
| 0069 | 0070 | Mains Blackout | 1 as active |
| 0070 | 0071 | Fuel Replenishment Fail Warning | 1 as active |
| 0071 | 0072 | Close-Trip Warning | 1 as active |
| 0072 | 0073 | Gen. Normal | 1 as active |
| 0073 | 0074 | Gen. Overvoltage | 1 as active |
| 0074 | 0075 | Gen. Undervoltage | 1 as active |
| 0075 | 0076 | Gen. Overfrequency | 1 as active |
| 0076 | 0077 | Gen. Underfrequency | 1 as active |
| 0077 | 0078 | Gen. Overcurrent Indication | 1 as active |

| Modbus Address | PLC Address | Item | Description |
|----------------|-------------|--|-------------|
| 0078 | 0079 | Scheduled Not Run | 1 as active |
| 0079 | 0080 | ECU Warning | 1 as active |
| 0080 | 0081 | ECU Shutdown | 1 as active |
| 0081 | 0082 | ECU Comm. Failure Alarm | 1 as active |
| 0082 | 0083 | Short Circuit Shutdown | 1 as active |
| 0083 | 0084 | Self-defined Input 2 Warning | 1 as active |
| 0084 | 0085 | Self-defined Input 3 Warning | 1 as active |
| 0085 | 0086 | Self-defined Input 4 Warning | 1 as active |
| 0086 | 0087 | Self-defined Input 5 Warning | 1 as active |
| 0087 | 0088 | Reserved | 1 as active |
| 0088 | 0089 | Self-defined Input 1 Shutdown | 1 as active |
| 0089 | 0090 | Self-defined Input 2 Shutdown | 1 as active |
| 0090 | 0091 | Self-defined Input 3 Shutdown | 1 as active |
| 0091 | 0092 | Self-defined Input 4 Shutdown | 1 as active |
| 0092 | 0093 | Self-defined Input 5 Shutdown | 1 as active |
| 0093 | 0094 | Reserved | 1 as active |
| 0094 | 0095 | Reserved | 1 as active |
| 0095 | 0096 | Reserved | 1 as active |
| 0096 | 0097 | DNOx (Driver Warning) | 1 as active |
| 0097 | 0098 | Water in Fuel | 1 as active |
| 0098 | 0099 | SYS | 1 as active |
| 0099 | 0100 | DPF Soot Accumulation | 1 as active |
| 0100 | 0101 | DPF Regeneration | 1 as active |
| 0101 | 0102 | DPF Regeneration Inhibit | 1 as active |
| 0102 | 0103 | High Exhaust Temp. | 1 as active |
| 0103 | 0104 | DPF Regeneration Required | 1 as active |
| 0104 | 0105 | No Closing or Load during Regeneration | 1 as active |
| 0105 | 0106 | Urea Tank Level Low Warning | 1 as active |
| 0106 | 0107 | High Urea Temp. Warning | 1 as active |
| 0107 | 0108 | Imminent Strict Limit | 1 as active |
| 0108 | 0109 | In Regeneration | 1 as active |
| 0109 | 0110 | Service Required Regeneration | 1 as active |
| 0110 | 0111 | Parking Regeneration | 1 as active |
| 0111 | 0112 | Service Regeneration | 1 as active |
| 0112 | 0113 | Parking Required Regeneration | 1 as active |
| 0113 | 0114 | Reserved | 1 as active |
| 0114 | 0115 | Reserved | 1 as active |
| 0115 | 0116 | Reserved | 1 as active |
| 0116 | 0117 | Reserved | 1 as active |
| 0117 | 0118 | Reserved | 1 as active |
| 0118 | 0119 | Reserved | 1 as active |
| 0119 | 0120 | Reserved | 1 as active |

Example:

If the status of “Emergency Stop” and “Input Warning” needs to be read, check the table above and find their coil addresses are 0008 and 0032, so it needs to read 40 coils.

Assuming the slave (controller) address is 01, the master or host (could be PC) request command is as following:

Table 3 Master (PC) Request Frame

| Slave Address | Function Code | Start Address (0000) | | Request Data Qty. (40) | | CRC 16 | |
|---------------|---------------|----------------------|-----------|------------------------|-----------|-----------|-----------|
| | | MSB | LSB | MSB | LSB | LSB | MSB |
| 01 | 01 | 00 | 00 | 00 | 28 | 3C | 14 |

The slave response is as following:

Table 4 Slave (Controller) Response Frame

| Slave Address | Function Code | Data Qty. (Bytes) | Data | | | | | CRC 16 | |
|---------------|---------------|-------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------|-----------|
| | | | Data of Address 07-00 | Data of Address 15-08 | Data of Address 23-16 | Data of Address 31-17 | Data of Address 39-32 | LSB | MSB |
| 01 | 01 | 05 | 07 | 01 | 00 | 00 | 01 | E4 | AE |

Table 5 Data Analysis

| Address | Data Received (Hex) | Convert to Binary | Meaning |
|-----------------------|---------------------|---------------------|--|
| Data of Address 15-08 | 01H | 0000 0000 0000 0001 | Data of 08 is 1, which means status of “Emergency Stop” is active. |
| Data of Address 39-32 | 01H | 0000 0000 0000 0001 | Data of 32 is 1, which means status of “Input Warning” is active. |

3.2 FUNCTION CODE 03H MAPPING DATA FIELD OF PARAMETERS

Table 6 Data Field of Parameters

| Modbus Address | PLC Address | Item | Range (Decimal) | Ratio | Unit | Description | Remark |
|----------------|-------------|------------------------------|-----------------|-------|------|---------------------------------------|--------|
| 0000 | 40001 | Mains UA | | 1 | V | Unsigned | 2Bytes |
| 0001 | 40002 | Mains UB | | 1 | V | Unsigned | 2Bytes |
| 0002 | 40003 | Mains UC | | 1 | V | Unsigned | 2Bytes |
| 0003 | 40004 | Mains UAB | | 1 | V | Unsigned | 2Bytes |
| 0004 | 40005 | Mains UBC | | 1 | V | Unsigned | 2Bytes |
| 0005 | 40006 | Mains UCA | | 1 | V | Unsigned | 2Bytes |
| 0006 | 40007 | Mains Frequency | | 0.1 | Hz | Unsigned | 2Bytes |
| 0007 | 40008 | Gen. UA | | 1 | V | Unsigned | 2Bytes |
| 0008 | 40009 | Gen. UB | | 1 | V | Unsigned | 2Bytes |
| 0009 | 40010 | Gen. UC | | 1 | V | Unsigned | 2Bytes |
| 0010 | 40011 | Gen. UAB | | 1 | V | Unsigned | 2Bytes |
| 0011 | 40012 | Gen. UBC | | 1 | V | Unsigned | 2Bytes |
| 0012 | 40013 | Gen. UCA | | 1 | V | Unsigned | 2Bytes |
| 0013 | 40014 | Gen. Frequency | | 0.1 | Hz | Unsigned | 2Bytes |
| 0014 | 40015 | Phase A Current | | 1 | A | Unsigned | 2Bytes |
| 0015 | 40016 | Phase B Current | | 1 | A | Unsigned | 2Bytes |
| 0016 | 40017 | Phase C Current | | 1 | A | Unsigned | 2Bytes |
| 0017 | 40018 | Water Temp. Value | | 1 | °C | Unsigned | 2Bytes |
| 0018 | 40019 | Water Temp. Resistance Value | | 0.1 | Ω | Unsigned | 2Bytes |
| 0019 | 40020 | Oil Pressure Value | | 1 | kPa | Unsigned | 2Bytes |
| 0020 | 40021 | OP Resistance Value | | 0.1 | Ω | Unsigned | 2Bytes |
| 0021 | 40022 | Level Value | | 1 | % | Unsigned | 2Bytes |
| 0022 | 40023 | Level Resistance Value | | 0.1 | Ω | Unsigned | 2Bytes |
| 0023 | 40024 | Speed | | 1 | RPM | Unsigned | 2Bytes |
| 0024 | 40025 | Battery Voltage | | 0.1 | V | Unsigned | 2Bytes |
| 0025 | 40026 | D+ Voltage | | 0.1 | V | Unsigned | 2Bytes |
| 0026 | 40027 | Active Power | | 1 | kW | Signed | 2Bytes |
| 0027 | 40028 | Reactive Power | | 1 | kvar | Signed | 2Bytes |
| 0028 | 40029 | Apparent Power | | 1 | kVA | Signed | 2Bytes |
| 0029 | 40030 | Power Factor | | 0.01 | | Signed | 2Bytes |
| 0030 | 40031 | Maintenance Countdown h | | 1 | Hour | Unsigned | 2Bytes |
| 0031 | 40032 | Maintenance Countdown m | 0~59 | 1 | Min. | Unsigned | 2Bytes |
| 0032 | 40033 | Reserved | | | | | 2Bytes |
| 0033 | 40034 | Reserved | | | | | 2Bytes |
| 0034 | 40035 | Controller Running Status | | No. | | Genset Running Status | 2Bytes |

| Modbus Address | PLC Address | Item | Range (Decimal) | Ratio | Unit | Description | Remark |
|----------------|-------------|--|-----------------|-------|------|---|-----------------------------|
| 0035 | 40036 | Delay | | | s | Unsigned | 2Bytes |
| 0036 | 40037 | Auto Running Status: 0-Start 1-Stop 2-No Delay | | | | Remote Start Status | 2Bytes |
| 0037 | 40038 | Delay | | | s | Unsigned | 2Bytes |
| 0038 | 40039 | ATS Running Status: 0-No Delay 1-Transfer Rest | | | | Unsigned | 2Bytes |
| 0039 | 40040 | Delay | | | s | Unsigned | 2Bytes |
| 0040 | 40041 | Mains Status: 0-Normal 1-Abnormal 2-No Delay | | | | Unsigned | 2Bytes |
| 0041 | 40042 | Delay | | | s | Unsigned | 2Bytes |
| 0042 | 40043 | Engine Accumulated Running Time (h) MSB | | 1 | Hour | Unsigned | 2Bytes |
| 0043 | 40044 | Engine Accumulated Running Time (h) LSB | | 1 | Hour | Unsigned | 2Bytes |
| 0044 | 40045 | Engine Accumulated Running Time (min) | 0~59 | 1 | Min. | Unsigned | 2Bytes |
| 0045 | 40046 | Engine Accumulated Running Time (sec) | 0~59 | 1 | Sec. | Unsigned | 2Bytes |
| 0046 | 40047 | Accumulated Start Times MSB | | | | Unsigned | 2Bytes |
| 0047 | 40048 | Accumulated Start Times LSB | | | | Unsigned | 2Bytes |
| 0048 | 40049 | Accumulated Electric Energy MSB | | 1 | kWh | Unsigned | 2Bytes |
| 0049 | 40050 | Accumulated Electric Energy LSB | | 1 | kWh | Unsigned | 2Bytes |
| 0050 | 40051 | Software Version | | 0.1 | | Unsigned | 2Bytes |
| 0051 | 40052 | Hardware Version | | 0.1 | | Unsigned | 2Bytes |
| 0052 | 40053 | Phase A Active Power | | 1 | kW | Signed | 2Bytes |
| 0053 | 40054 | Phase B Active Power | | 1 | kW | Signed | 2Bytes |
| 0054 | 40055 | Phase C Active Power | | 1 | kW | Signed | 2Bytes |
| 0055 | 40056 | Output Load Percentage | | 1 | % | Unsigned | 2Bytes |
| 0056 | 40057 | Reserved | | | | | 2Bytes |
| 0057 | 40058 | Reserved | | | | | 2Bytes |
| 0058 | 40059 | Coolant Level | | 1 | % | Signed | Only support ECU unit |
| 0059 | 40060 | Oil Temp. | | 1 | °C | Signed | |
| 0060 | 40061 | Coolant Pressure | | 1 | kPa | Signed | |
| 0061 | 40062 | Fuel Pressure | | 1 | kPa | Signed | |
| 0062 | 40063 | Fuel Temp. | | 1 | °C | Signed | |
| 0063 | 40064 | Air Inlet Temp. | | 1 | °C | Signed | |
| 0064 | 40065 | Exhaust Outlet Temp. | | 1 | °C | Signed | |

| Modbus Address | PLC Address | Item | Range (Decimal) | Ratio | Unit | Description | Remark |
|----------------|-----------------|------------------------|-----------------|-------|------|-------------|-----------------------|
| 0065 | 40066 | Turbo Pressure | | 1 | kPa | Signed | |
| 0066 | 40067 | Fuel Consumption | | 0.1 | L/h | Signed | |
| 0067 | 40068 | Reserved | | | | | 2Bytes |
| 0068 | 40069 | Total Fuel Consumption | | 1 | L | Signed | Only support ECU Unit |
| 0069 | 40070 | | | | | | |
| 0070 | 40071 | SCM Internal Temp. | | 0.1 | °C | Signed | 2Bytes |
| 0071 | 40072 | Controller Model | | | | Unsigned | 2Bytes |
| 0072 | 40073 | Controller Date: Year | 0~99 | 1 | | Unsigned | 2Bytes |
| 0073 | 40074 | Controller Date: Month | 1~12 | 1 | | Unsigned | 2Bytes |
| 0074 | 40075 | Controller Date: Day | 1~31 | 1 | | Unsigned | 2Bytes |
| 0075 | 40076 | Controller Date: Week | 0~6 | 1 | | Unsigned | 2Bytes |
| 0076 | 40077 | Controller Time: Hour | 0~23 | 1 | | Unsigned | 2Bytes |
| 0077 | 40078 | Controller Time: Min. | 0~59 | 1 | | Unsigned | 2Bytes |
| 0078 | 40079 | Controller Time: Sec. | 0~59 | 1 | | Unsigned | 2Bytes |
| 0079 | 40080 | Release Year | 0~99 | 1 | | Unsigned | 2Bytes |
| 0080 | 40081 | Release Month | 1~12 | 1 | | Unsigned | 2Bytes |
| 0081 | 40082 | Released Day | 1~31 | 1 | | Unsigned | 2Bytes |
| 0082 | 40083 | LCD Temp. | | 1 | °C | Signed | 2Bytes |
| 0083 | 40084 | Urea Level | | 0.1 | % | Unsigned | 2Bytes |
| 0084 | 40085 | ECU Temp. | | 1 | °C | Signed | Only support ECU unit |
| 0085 | 40086 | Ambient Pressure | | 1 | kPa | Signed | |
| 0086 | 40087 | ECU Running Time | | | | Signed | |
| 0087 | 40088 | | | | | | |
| 0088 | 40089 | MTU FC | | 1 | | Unsigned | |
| 0089 | 40090 | MTU Droop | | 0.1 | | Unsigned | |
| 0090 | 40091 | MTU Demand Source | | | | Unsigned | |
| 0091 | 40092 | MTU SSD | | | | Unsigned | |
| 0092 | 40093 | Gen. UA Phase | | 1 | ° | Signed | 2Bytes |
| 0093 | 40094 | Gen. UB Phase | | 1 | ° | Signed | 2Bytes |
| 0094 | 40095 | Gen. UC Phase | | 1 | ° | Signed | 2Bytes |
| 0095 | 40096 | Mains UA Phase | | 1 | ° | Signed | 2Bytes |
| 0096 | 40097 | Mains UB Phase | | 1 | ° | Signed | 2Bytes |
| 0097 | 40098 | Mains UC Phase | | 1 | ° | Signed | 2Bytes |
| 0098 -0127 | 40099 -40128 | DM1 Alarm | | | | | |
| 0128 -0157 | 40129 -40158 | DM2 Alarm | | | | | |
| 0158 | 40159 | ECU Shutdown Times | | | | Unsigned | 2Bytes |
| 0159 | 40160 | ECU Warning Times | | | | Unsigned | 2Bytes |
| 0160 | 40161 | MCU ID H1 | | | | Unsigned | 4Bytes |
| 0161 | 40162 | | | | | | |

| Modbus Address | PLC Address | Item | Range (Decimal) | Ratio | Unit | Description | Remark |
|-------------------------------------|-------------|------------------------------------|-----------------|-------|------|---|--------|
| 0162 | 40163 | MCU ID H2 | | | | Unsigned | 4Bytes |
| 0163 | 40164 | | | | | | |
| 0164 | 40165 | MCU ID L | | | | Unsigned | 4Bytes |
| 0165 | 40166 | | | | | | |
| 0166 | 40167 | Ambient Temp. | | 1 | °C | Signed | 2Bytes |
| 0167 | 40168 | Urea Level | | 0.1 | % | Unsigned | 2Bytes |
| 0168 | 40169 | Urea Temp. | | 1 | °C | Signed | 2Bytes |
| 0169 | 40170 | SCR Temp. | | 1 | °C | Signed | 2Bytes |
| 0170 | 40171 | DPF Regeneration Reminder | | | | DPF Regeneration Reminder | 2Bytes |
| 0171 | 40172 | DPF Regeneration Inhibit | | | | Regeneration Inhibit | 2Bytes |
| 0172 | 40173 | Driver Alarm | | | | Driver Alarm | 2Bytes |
| 0173 | 40174 | DPF Regeneration Status Indication | | | | Regeneration Status | 2Bytes |
| 0174 | 40175 | DPF Status Indication | | | | DPF Status | 2Bytes |
| 0175 | 40176 | DPF Soot Accumulation | | | | DPF Soot Accumulation | 2Bytes |
| 176 | 40177 | PC Software Version High 16-bit | | | | Unsigned | 2Bytes |
| 177 | 40178 | PC Software Version Low 16-bit | | | | Unsigned | 2Bytes |
| Other Addresses of HGM6100LT | | | | | | | |
| 2500 | 42501 | Phase A Current | | 0.1 | A | Unsigned | 4Bytes |
| 2501 | 42502 | | | | | | |
| 2502 | 42503 | Phase B Current | | 0.1 | A | Unsigned | 4Bytes |
| 2503 | 42504 | | | | | | |
| 2504 | 42505 | Phase C Current | | 0.1 | A | Unsigned | 4Bytes |
| 2505 | 42506 | | | | | | |
| 2506 | 42507 | Active Power | | 0.1 | kW | Signed | 4Bytes |
| 2507 | 42508 | | | | | | |
| 2508 | 42509 | Reactive Power | | 0.1 | kvar | Signed | 4Bytes |
| 2509 | 42510 | | | | | | |
| 2510 | 42511 | Apparent Power | | 0.1 | kVA | Signed | 4Bytes |
| 2511 | 42512 | | | | | | |

NOTE 1: Actual value = data received * ratio. Take the Frequency as the example: if the data received is 5000 (1388H), ratio is 0.01Hz, then the actual frequency value is 50.00Hz (5000*0.01Hz).

NOTE 2: If the data has 4 bytes, the actual value = high order bits of data received * 65536 + low order bits of data received.

NOTE 3: Analysis for Accumulated Data (Accumulated Running Time, Start Times, Electric Energy)

Take the Accumulated Running Time (h) as an example: if the MSB of data received is 0x01, and the LSB is 0x04, then the actual running time value is 10004h (1*10000+4=10004).

NOTE 4: If data received is 32766, it means there is no normal data, and “###” will be shown.

NOTE 5: If the high 16-bit of the PC software version read as 0x0601 and the low 16-bit of the PC software version read as 0x0407, then the compatible PC software version number is 6.1.4.7.

NOTE 6: Definition of signed number: Take the data received “8000H” as the example, convert it to binary number “1000 0000 0000 0000b”. The MSB is 1, which means it is negative. The number minus 1 will get its 1’s complement, then inverting it will get the absolute value of the negative number. Finally convert the absolute value to decimal number -32768.

Example:

If “Battery Voltage” and “D+ Voltage” need to be read, check the table above and find its address is 0024 and 0025, so it needs to read two data addresses.

Assuming the slave (controller) address is 01, the master or host (could be PC) request command is as following:

Table 7 Master (PC) Request Command

| Slave Address | Function Code | Start Address (0024) | | Request Data Qty. (2) | | CRC 16 | |
|---------------|---------------|----------------------|-----|-----------------------|-----|--------|-----|
| | | MSB | LSB | MSB | LSB | LSB | MSB |
| 01 | 03 | 00 | 18 | 00 | 02 | 44 | 0C |

The slave response is as following:

Table 8 Slave (Controller) Response Command

| Slave Address | Function Code | Data Length (Bytes) | Data | | | | CRC 16 | |
|---------------|---------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------|-----|
| | | | Data of Address 0024 MSB | Data of Address 0024 LSB | Data of Address 0025 MSB | Data of Address 0025 LSB | LSB | MSB |
| 01 | 03 | 04 | 01 | 12 | 00 | 00 | 5B | CA |

Table 9 Data Analysis

| Address | Data Received (Hex) | Convert to Decimal | Meaning |
|---------|---------------------|--------------------|---|
| 0024 | 0112H | 274 | The ratio is 0.1, so the battery voltage is 27.4V |
| 0025 | 0000H | 0 | The ratio is 0.1, so the D+ voltage is 0V |

3.3 FUNCTION CODE 05H MAPPING REMOTE COIL FIELD

Table 10 Remote Coil Field

| Modbus Address | PLC Address | Item | Description |
|----------------|-------------|--------------------------------|---|
| 0000 | 0001 | Engine in Remote Start Status | Active only when sending 00FFH or FF00H |
| 0001 | 0002 | Engine in Remote Stop Status | Active only when sending 00FFH or FF00H |
| 0003 | 0004 | Engine in Remote Auto Status | Active only when sending 00FFH or FF00H |
| 0004 | 0005 | Engine in Remote Manual Status | Active only when sending 00FFH or FF00H |
| 0005 | 0006 | Remote Gen. Close/Open | Active only when sending 00FFH or FF00H |
| 0006 | 0007 | Remote Mains Close/Open | Active only when sending 00FFH or FF00H |
| 0005 | 0006 | Remote Gen. Open | Active only when sending 00FFH or FF00H |
| 0006 | 0007 | Remote Gen. Close | Active only when sending 00FFH or FF00H |

NOTE: The remote command in the table above only needs to be sent once.

Example:

If the remote controller is in auto mode, check the table first and find its remote address is 0003. Assuming the slave address is 01, the master request command is as following:

Table 11 Master Request Command

| Slave Address | Function Code | Remote Address (0003) | | Remote Data | | CRC 16 | |
|---------------|---------------|-----------------------|-----|-------------|-----|--------|-----|
| | | MSB | LSB | MSB | LSB | LSB | MSB |
| 01 | 05 | 00 | 03 | FF | 00 | 7C | 3A |

The slave response is as following:

Table 12 Slave Response Command

| Slave Address | Function Code | Remote Address (0003) | | Remote Data | | CRC 16 | |
|---------------|---------------|-----------------------|-----|-------------|-----|--------|-----|
| | | MSB | LSB | MSB | LSB | LSB | MSB |
| 01 | 05 | 00 | 03 | FF | 00 | 7C | 3A |

Whether the remote command is active can be checked by sending function code 01H to read the status of address 0041.

3.4 GENSET RUNNING STATUS

Table 13 Genset Running Status

| No. | Content | Description |
|-----|-----------------------|------------------------------|
| 0 | Standby | No delay value in the status |
| 1 | Preheat | |
| 2 | Fuel Output | |
| 3 | Crank | |
| 4 | Crank Rest | |
| 5 | Safety on Delay | |
| 6 | Start Idle | |
| 7 | High Speed Warming up | |
| 8 | Wait for On-load | No delay value in the status |
| 9 | Normal Running | No delay value in the status |
| 10 | Cooling | |
| 11 | Stop Idle | |
| 12 | ETS | |
| 13 | Wait for Stop | |
| 14 | Stop Failure | No delay value in the status |
| 15 | After Stop | |

3.5 REMOTE START STATUS

Table 14 Remote Start Status

| Value (No.) | Content | Description |
|-------------|-------------|------------------------------|
| 0 | No Delay | No delay value in the status |
| 1 | Start Delay | |
| 2 | Stop Delay | |

3.6 DPF REGENERATION REMINDER

Table 15 DPF Regeneration Reminder

| Value (No.) | Content | Description |
|-------------|----------------------|-------------|
| 0 | No icon displayed | |
| 1 | Icon remains on | |
| 2 | Icon flashes slowly | |
| 3 | Icon flashes rapidly | |

3.7 REGENERATION INHIBIT

Table 16 Regeneration Inhibit

| Value (No.) | Content | Description |
|-------------|-------------------|-------------|
| 0 | No icon displayed | |
| 1 | Icon remains on | |

3.8 DRIVER ALARM

Table 17 Driver Alarm

| Value (No.) | Content | Description |
|-------------|-------------------------------------|--|
| 0 | No icon displayed | |
| 1 | Reserved | |
| 2 | Reserved | |
| 3 | Reserved | |
| 4 | Reserved | |
| 5 | Icon remains on | Driver Alarm/Severe limit will be activated soon |
| 6 | Icon flashes | |
| 7 | Alarm exists, but no icon displayed | |

3.9 REGENERATION STATUS

Table 18 Regeneration Status

| Value (No.) | Content | Description |
|-------------|-------------------|-------------|
| 0 | No icon displayed | |
| 1 | Icon remains on | |

3.10 DPF STATUS

Table 19 DPF Status

| Value (No.) | Content | Description |
|-------------|----------------------|-------------|
| 0 | No icon displayed | |
| 1 | Icon remains on | |
| 2 | Icon flashes slowly | |
| 3 | Icon flashes rapidly | |

3.11 DPF SOOT ACCUMULATION

Table 20 DPF Soot Accumulation

| Value (No.) | Content | Description |
|--------------|-------------------|-------------|
| 0~8 | No icon displayed | |
| 9~10 | Icon flashes | |
| 11 and above | Icon remains on | |

3.12 COMMUNICATION PARAMETER VIEWING AND CONFIGURATION

- 1) Press the  key, enter the correct password (**Default: 0318**) to get into the parameter setting menu;
- 2) Select "Module Address" via the  key;
- 3) Press the  key again, the parameter will be in the selected status
- 4) Set the current selected parameter via  and  keys, then press the  key to confirm and end the editing, then the selected status will disappear;
- 5) Press the  key to return the home page.

NOTE: The configuration takes effect once the parameter setting is completed.

SmartGen

4 FAQ

4.1 GROUNDING OF THE CABLE SHIELD

To prevent the coupling of interference on the cable, one end of the cable shield should be grounded.

4.2 TERMINATION RESISTOR

At both ends of the linear network (between the two communication ports furthest apart), two 120-ohm termination resistors need to be installed in parallel. According to the signal transmission theory, the termination resistor can avoid the signal reflections and improve the signal integrity effectively. The value of two termination resistor in parallel is basically equal to the characteristic impedance of the transmission cable.

A standard RS-485 network will usually use the termination resistor. The resistor can be avoided while the cable is too short, or it is a temporary or lab test.

4.3 RS485 TO USB CONVERTER

It can communicate with PC via the SmartGen SG72A converter.

4.4 EXTEND TRANSMISSION DISTANCE

Adding two SmartGen SGCAN300 Repeaters can extend the communication distance to at most 10 kilometers.



Figure 3 SGCAN300 Application Diagram

4.5 SOLUTIONS FOR COMMUNICATION FAILURE

- 1) Check whether the positive and negative of RS485 is connected correctly;
- 2) Check whether the communication parameters setting is correct;
- 3) Check the RS485 converter (if any) is normal;
- 4) Check whether the termination resistors are connected correctly;
- 5) Disconnect the RS485 cables to the controller, test the voltage difference of RS485 Terminal A and B on the controller, if the result is between -200mV and +200mV, it means the communication port is abnormal;
- 6) It is recommended to download third-party communication test software to verify whether the communication is normal, such as modscan32, modbus poll, etc.