

SmartGen

MAKING CONTROL SMARTER

HGM6100Z SERIES (HGM6110Z/6120Z) GENSET CONTROLLER USER MANUAL



郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

SmartGen Registered trademark

No. 28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: www.smartgen.com.cn/

www.smartgen.cn/

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Note
2024-03-06	1.0	Original Release.

CONTENTS

1	OVERVIEW.....	5
2	PERFORMANCE AND CHARACTERISTICS	5
3	SPECIFICATION	8
4	OPERATION.....	10
4.1	KEYS DESCRIPTION.....	10
4.2	CONTROLLER PANEL	11
4.3	ENGINE STATUS INDICATOR DESCRIPTION	12
4.4	AUTOMATIC START/STOP OPERATION	12
4.5	MANUAL START/STOP OPERATION.....	14
4.6	EMERGENCY START.....	14
5	PROTECTION	15
5.1	WARNING	15
5.2	SHUTDOWN ALARM.....	17
6	CONNECTIONS	19
7	PARAMETER RANGE AND DEFINITION	22
7.1	PARAMETER CONTENT AND RANGE.....	22
7.2	DEFINED CONTENTS OF AUXILIARY OUTPUTS 1-4.....	30
7.3	DEFINED CONTENTS OF AUXILIARY INPUTS 1-5	31
7.4	SENSOR SELECTION.....	34
7.5	CONDITIONS OF CRANK DISCONNECT SELECTION	35
8	PARAMETER SETTING	36
9	SENSOR SETTING.....	37
10	COMMISSIONING	38
11	TYPICAL APPLICATION	39
12	INSTALLATION	41
12.1	FIXING CLIPS.....	41
12.2	OVERALL DIMENSION AND PANEL CUTOUT	41
13	CONNECTIONS OF CONTROLLER WITH J1939 ENGINE.....	43
13.1	CUMMINS ISB/ISBE.....	43
13.2	CUMMINS QSL9.....	43
13.3	CUMMINS QSM11 (IMPORT).....	44
13.4	CUMMINS QSX15-CM570	44
13.5	CUMMINS GCS-MODBUS	45
13.6	CUMMINS QSM11.....	45
13.7	CUMMINS QSZ13.....	45
13.8	DETROIT DIESEL DDEC III / IV.....	46
13.9	DEUTZ EMR2.....	46
13.10	JOHN DEERE.....	46
13.11	MTU MDEC.....	47
13.12	MTU ADEC (SMART MODULE)	47
13.13	MTU ADEC (SAM MODULE).....	47

13.14 PERKINS.....	48
13.15 SCANIA.....	48
13.16 VOLVO EDC3.....	48
13.17 VOLVO EDC4.....	49
13.18 VOLVO-EMS2.....	49
13.19 YUCHAI.....	50
13.20 WEICHAI.....	50
14 FAULT FINDING.....	51

SmartGen

1 OVERVIEW

HGM6100Z series genset controller is the localization product that is specially designed for applying to extremely high/low temperature (-40°C~+70°C) environment. It is an automatic control and monitoring system for genset, which integrates digital, intelligent and network techniques. It can reliably work in extreme temperature environment due to its heated LCD and electronic components with good resistance to high and low temperature. Moreover, it carries out functions of automatic start/stop, data measurement, alarm protection and “three remotes” (remote control, remote measuring and remote communication). The controller uses low temperature LCD display, optional display interface including Chinese, English, Spanish, Russian, Portuguese, Turkish, Polish and French with easy and reliable operation.

HGM6100Z series genset controller uses micro-processing technique which can achieve precision measurement, value adjustment, timing and threshold setting etc. All parameters can be configured from front panel or use USB port (or RS485, ENETHERNET) to adjust via PC. It can be widely used in all types of automatic genset control system for its compact structure, simple connections and high reliability.

2 PERFORMANCE AND CHARACTERISTICS

HGM6100Z series controller has two types:

HGM6110Z: It is used for single unit automation, controlling generator to start/stop by remote start signal;

HGM6120Z: Based on **HGM6110Z**, it adds mains electric quantity monitoring and mains/generator automatic switching control (AMF), especially suitable for the automation system composed by mains and genset.

Main characteristics are as below,

- 132*64 LCD display with backlight, heated LCD in low temperature, and optional language interface (Chinese, English, Spanish, Russian, Portuguese, Turkish, Polish and French), push-button operation;
- Hard acrylic screen, improved wear and scratch resistance property. Silicon panel and keys are equipped;
- Widely working temperature (-40°C~+70°C) enables the module working in a place of harsh environmental conditions;
- With RS485 communication port, can achieve “three remotes” functions via MODBUS protocol;
- With ETHERNET communication port;
- With CANBUS port which can be connected to ECU with J1939, it not only can monitor frequently-used data (such as water temperature, oil pressure, speed and fuel consumption, etc.) but also can control start, stop, high speed and low speed (controller with CANBUS port is needed) via CANBUS port.
- Adapt to 3P4W, 3P3W, 1P2W and 2P3W (120V/240V), 50Hz/60Hz power system;
- Can measure and display 3 phase voltage, 3 phase current, frequency, power parameter of

mains/gens;

Mains

Line voltage (Uab, Ubc, and Uca)

Phase voltage (Ua, Ub, and Uc)

Frequency Hz

Phase sequence

Generator

Line voltage (Uab, Ubc, and Uca)

Phase voltage (Ua, Ub, and Uc)

Frequency Hz

Phase sequence

Load

Current IA, IB, IC

Each phase and total active power kW

Reactive power kvar

Apparent power KVA

Power factor PF

Accumulated generator energy kWh

Load output percentage %

- For mains, it has detection functions of over/under voltage and lack of phase; For gen, it has short circuit functions of over/under voltage, over/under frequency, over current and over power;
- Precisely measure parameters about engine,

Temp. (WT)	°C/°F		
Oil pressure (OP)	kPa/psi/bar		
Fuel level (FL)	%	Fuel remains	L
Speed (SPD)	r/min		
Battery voltage (VB)	V		
Charger voltage (VD)	V		
Accumulated running time			
Accumulated start times			
- Control protection: Automatic start/stop of genset, breaker close/open (ATS control) and perfect fault display and protection;
- With ETS, idle control, pre-heat control, speed raise/drop control, all of them are relay outputs;
- Parameter setting: Allow user to modify setting and store them in internal FLASH memory. The parameters cannot be lost even when power off. All of parameters can be set not only from the front panel, but also use USB port (or RS485, ETHERNET) to adjust them via PC;
- Multiple sensors of temperature, pressure and fuel level can be used directly, parameters can be defined by user;
- Multiple conditions of crank disconnect (speed sensor, oil pressure, generator frequency) can be selected;
- With emergency start function;
- With automatic identification function of flywheel teeth numbers;
- Widely power supply range: (8~35)VDC, accommodating to different starting battery voltage environment;
- All parameters use digital modulation, instead of analog modulation using conventional

- potentiometer, improving reliability and stability;
- With maintenance function. Types (date or running time) can be selected and actions (warning or alarm shutdown) can be set when maintenance time out;
- Event log (max.99 pieces), real-time clock, scheduled start & stop (can be set as start unit once a day/week/month whether with load or not);
- Add rubber gasket between shell and controller panel, the protection level can reach IP65;
- Controller is fixed by metal fixing clips;
- Modular design, flame-retardant ABS shell, pluggable terminals, embedded mounting, compact structure and easy installation.

SmartGen

3 SPECIFICATION

Table 2 Technical Parameters

Item	Content
Working Voltage	DC8.0V ~ DC35.0V, DC reverse connection protection Resolution: 0.1V Accuracy: 1%
Power Consumption	LCD without heating: <6W (standby: ≤2W) LCD with heating: <10W (standby: ≤6W)
AC Voltage	Phase voltage Range: AC15V ~ AC360V (ph-N) Resolution: 1V Accuracy: 1%
	Line voltage Range: AC30V ~ AC620V (ph-ph) Resolution: 1V Accuracy: 1%
AC Frequency	Range: 5.0Hz ~ 75.0Hz Resolution: 0.1Hz Accuracy: 0.1Hz
AC Current	Rated: 5A Range: 0A ~ 10A Resolution: 0.1A Accuracy: 1%
Speed Sensor	Voltage: 1.0V to 24V (RMS) Frequency: 5Hz ~ 10,000Hz
Charger (D+) Voltage	Range: DC0V ~ DC60.0V, continuous power supply Resolution: 0V Accuracy: 1%
Analog Sensor	Resistance input Range: 0Ω ~ 6000Ω Resolution: 0.1Ω Accuracy: 1Ω (below 300Ω)
Start Relay Output	16A DC28V supply (relay output)
Fuel Relay Output	16A DC28V supply (relay output)
Auxiliary Relay Output 1	7A DC28V supply (relay output)
Auxiliary Relay Output 2	7A AC250V volt-free output (relay output)
Auxiliary Relay Output 3	16A AC250V volt-free output (relay output)
Auxiliary Relay Output 4	16A AC250V volt-free output (relay output)
USB Device	Type-C USB female port
RS485	Isolated, half-duplex, baud rate can be set, max communication distance can reach 1,000m
ETHERNET	Self-adaption 10/100Mbit
CAN	Isolated, max communication distance can reach 250m, using Belden

Item	Content
	9841 cable or equivalent
CE-EMC Certification	EN 55032, EN 55024
Vibration	5Hz~8Hz: displacement=±7.5mm 8Hz~500Hz: a=±2g IEC 60068-2-6
Shock	50g, 11ms, half-sine, complete shock test from three directions, and 18 times shock for each test IEC 60068-2-27
Bump	20g, 16ms, half-sine IEC 60255-21-2
Safety Requirement	According to EN 61010-1 installation category (over voltage category)III, 300V, pollution class 2, altitude 3, 000m
LCD Display	Under the condition of -40°C, the controller can display normally within 20s after power-on; after 2 minutes, the dynamic display response speed is normal.
Overall Dimensions	209mm x 166mm x 45mm
Panel Cutout	186mm x 141mm
Working Temperature	(-40~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-40~+80)°C
Protection Level	IP65: when water-proof gasket installed between control panel and enclosure.
Insulation Strength	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal. The leakage current is not more than 3mA within 1min.
Compliant Standard	GB/T 37089 Reciprocating internal combustion engine driven alternating current generating sets-Controller
Weight	0.65kg

4 OPERATION

4.1 KEYS DESCRIPTION

Table 3 Keys Description

Icon	Function	Description
	Stop/Reset	Can stop genset under Manual/Auto mode; Can reset shutdown alarm; Press it at least 3s to test panel indicators are OK or not (lamp test); During stopping process, press it again can stop genset quickly.
	Start	Press it will start standby genset under Manual mode; genset will jump to next status if press it in starting process.
	Manual	Pressing it will set the module as Manual mode.
	Auto	Pressing it will set the module as Auto mode.
	Close/Open	Can control breaker close/open in Manual mode. Note: it fits for HGM6120Z controller.
	Close	Can control breaker close/open in Manual mode. Note: it fits for HGM6110Z controller.
	Open	Can control gens to switch off in Manual mode. Note: it fits for HGM6110Z controller.
	Set/Confirm	Press it to enter menu interface; Move cursor to confirm information in parameters setting.
	Up/Increase	Screen scroll; Up cursor and increase value in setting menu.
	Down/Decrease	Screen scroll; Down cursor and decrease value in setting menu.
	Home/Return	Press it to return to homepage in main interface; Exit when press it in parameters setting.

4.2 CONTROLLER PANEL



Fig.1 HGM6110Z Front Panel Indication



Fig.2 HGM6120Z Front Panel Indication

NOTE: Partial indicator states

Alarm Indicator: slowly blink when warning alarms occur; fast blink when shutdown alarms occur; won't illuminate when there is no alarm.

Status Indicator: won't illuminate when genset in standby; blink 1 time per second in start or stop process and always illuminate when runs normally; for ECU units, press start key in auto mode or stop mode, ECU power outputs and status indicator always illuminates.

Auto Mode Indicator: only illuminate in auto mode; blink in auto mode and start delay countdown.

4.3 ENGINE STATUS INDICATOR DESCRIPTION

Table 4 Engine Status Indicator Description

Icon	Description
	Driver alarm
	DPF regeneration inhibit
	Exhaust temperature high warning
	DPF regeneration /DPF regeneration reminder/DPF carbon deposition
	Close with load inhibit in regeneration
	Panel locked

4.4 AUTOMATIC START/STOP OPERATION

Auto mode is activated by pressing the  , indicator beside it is illuminating which confirms this action.

Starting Sequence,

- 1) **HGM6120Z:** When mains power is abnormal (over/under voltage, lack of phase), it enters "Mains Abnormal Delay" and LCD displays count-down time. When delay is over, "Start Delay" begins.
- 2) **HGM6110Z:** When "Remote Start" input is active, it enters into "Start Delay";
- 3) "Start Delay" countdown is displayed in LCD;
- 4) When start delay is over, preheat relay is outputting (if configured), "Preheat Delay XX s" is displayed in LCD;
- 5) When preheat delay is over, fuel relay is outputting for XXs and then start relay outputs; if genset fails to start during "Crank Time", the fuel and start relay stop outputting and it enters "Crank Rest Time" and wait for next cranking;
- 6) If genset fails to start within set start times, the fifth line of LCD will turn black and "Fail to Start" alarm will be displayed;
- 7) Any time to start genset successfully, it will enter "Safety Running". During this period, alarms of low oil pressure, high temperature, under speed, failed to charge and Aux. input (configured) are disabled. As soon as this delay is over, genset will enter into "Start Idle Delay" (if configured);
- 8) During start idle delay, alarms of under speed, under frequency, under voltage are disabled. As soon as this delay is over, genset will enter "Warming Up Delay" (if configured);
- 9) When "Warming Up Delay" is over, the indicator is illuminating if gens normal. If voltage and frequency reach the load requirement, close relay outputs, genset will take load and indicator illuminates; if voltage or frequency is abnormal, controller will alarm and shutdown (LCD displays the alarm information).

Stopping Sequence,

- 1) **HGM6120Z:** During normal running, if mains normal, genset will enter "Mains Normal Delay", when mains indicator illuminates, "Stop Delay" begins;
- 2) **HGM6110Z:** Genset enters "Stop Delay" as soon as "Remote Start" is inactive;
- 3) When "Stop Delay" is over, genset enters "Cooling Delay". Closing relay is disconnected. After switch "Transfer Rest Delay", closing relay is outputting, mains will take load, generator indicator extinguishes while mains indicator illuminates;
- 4) When entering "Stop Idle Delay" (If configured), idle relay is energized to output.;
- 5) When entering "ETS Delay", ETS relay is energized to output, fuel relay output is disconnected;
- 6) When entering "Genset at Rest", it will automatically judge if it has stopped;
- 7) When genset stops, it will enter standby mode; if genset fails to stop, controller will issue alarm ("Fail to Stop" alarm will be displayed in LCD).

SmartGen

4.5 MANUAL START/STOP OPERATION

- 1) **HGM6120Z:** Manual Mode is active when press  and its indicator illuminates. Under this mode, press  to start genset, it can automatically detect crank disconnect and accelerate to high-speed running. If there is high temperature, low oil pressure, over speed and abnormal voltage during genset running, controller can protect genset to stop (detail procedures please refer to No.4~9 of Auto start sequence). Under Manual Mode, switch won't transfer automatically, it is necessary to manually press  to transfer load.
- 2) **HGM6110Z:** Manual Mode is active when pressing , and its indicator is illuminating. Then press  to start genset, it can automatically detect crank disconnect and accelerate to high-speed running. If there is high temperature, low oil pressure, over speed and abnormal voltage during running, controller can protect genset to stop quickly (detail procedures please refer to No.4~9 of Auto start sequence). After genset runs well in high speed, press  and gen takes load.
- 3) Manual stop, pressing  can shut down the running genset (detail procedures please refer to No.3~7 of Auto stop sequence).

4.6 EMERGENCY START

In manual mode, pressing  and  simultaneously can compel genset to start. The controller won't judge whether the controller has started successfully according to disconnect conditions and the disconnection of starter is controlled by operators. When operators observe the genset has started successfully, loose the keys and the controller enters safety delay with start stops to output.

5 PROTECTION

5.1 WARNING

When controller detects the warning signal, genset only sends alarm and not stop. The alarms are displayed in LCD.

Table 5 Warning Alarms

No.	Warning	Description
1	Loss of Speed Signal	When the speed of genset is 0 and speed loss delay is 0, controller will send warning alarm signal and it will be displayed in LCD.
2	Gen Over Current	When the current of genset is higher than threshold and over current action selects "Warn", controller will send warning alarm signal and it will be displayed in LCD.
3	Failed to Stop	When genset cannot stop after the "ETS delay/fail to stop delay" is over, controller will send warning alarm signal and it will be displayed in LCD.
4	Low Fuel Level	When the fuel level of genset is lower than threshold or low fuel level warning is active, controller will send warning alarm signal and it will be displayed in LCD.
5	Failed to Charge	When the voltage difference between B+ and charger D+(WL) is lower than threshold and lasts for 5s, controller will send warning alarm signal and it will be displayed in LCD.
6	Battery Under Voltage	When the battery voltage of genset is lower than threshold, controller will send warning alarm signal and it will be displayed in LCD.
7	Battery Over Voltage	When the battery voltage of genset is higher than threshold, controller will send warning alarm signal and it will be displayed in LCD.
8	Low Coolant Level	When low coolant level input is active, controller will send warning alarm signal and it will be displayed in LCD.
9	Temp. Sensor Open	When sensor is not connected to corresponding port, controller will send warning alarm signal and it will be displayed in LCD.
10	OP Sensor Open	When sensor hasn't is not connected to corresponding port, controller will send warning alarm signal and it will be displayed in LCD.
11	Maintenance Due	Maintenance type is running time. When genset running time is longer than maintenance time of user setting or the maintenance type is date, the current date is over the set value, and the maintenance action is set as warn, controller send warning alarm signal and it will be displayed in LCD.
12	High Temp.	When the water/cylinder temperature of genset is higher than threshold and Enable High Temp. Stop Inhibited or Input High Temp. Stop Inhibited is active, controller will send warning alarm signal and it will be displayed in LCD.
13	Low Oil Pressure	When the oil pressure of genset is less than threshold and Enable Low Oil Pressure Stop Inhibited or Input Low Oil Pressure Stop Inhibited is active, controller will send warning alarm signal and it will be displayed

No.	Warning	Description
		in LCD.
14	Input Warn	When external input is active, controller will send warning alarm signal and it will be displayed in LCD.
15	Failed to Charge IN	When Failed to Charge input is active, controller will send warning alarm signal and it will be displayed in LCD.
16	Over Power	If over power detection is enabled, when the controller detects that the over power value (power is positive) has exceeded the pre-set value and the action selects "Warn", it will initiate a warning alarm.
17	ECU Warn	If an error message is received from ECU via J1939, it will initiate a warning alarm.
18	Short Circuit	When short circuit signal is enabled and the action selects "Warn", after short circuit condition is met, it will initiate a warning alarm.
19	User-define 1	When controller detects that input 1 is configured as "33 User-define", and it is active, the action selects "Warn", active range (non-active) is selected, it will initiate a warning alarm and display in LCD.
20	User-define 2	When controller detects that input 2 is configured as "33 User-define", and it is active, the action selects "Warn", active range (non-active) is selected, it will initiate a warning alarm and display in LCD.
21	User-define 3	When controller detects that input 3 is configured as "33 User-define", and it is active, the action selects "Warn", active range (non-active) is selected, it will initiate a warning alarm and display in LCD.
22	User-define 4	When controller detects that input 4 is configured as "33 User-define", and it is active, the action selects "Warn", active range (non-active) is selected, it will initiate a warning alarm and display in LCD.
23	User-define 5	When controller detects that input 5 is configured as "33 User-define", and it is active, the action selects "Warn", active range (non-active) is selected, it will initiate a warning alarm and display in LCD.
24	Driver Alarm	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and icon.
25	Water in Fuel	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning.
26	SYS	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and.
27	DPF Carbon Deposition	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and icon.
28	DPF Regeneration	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and icon.
29	DPF Regeneration Inhibit	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and icon.
30	Exhaust Temp. High	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and icon.
31	DPF Regeneration	After-treatment ECU. When controller receives the signal, LCD will

No.	Warning	Description
	Reminder	display corresponding warning and icon.
32	Close with Load Inhibit in Regeneration	After-treatment ECU. When controller receives the signal, LCD will display corresponding warning and icon.

5.2 SHUTDOWN ALARM

When controller detects shutdown alarm, it will send signal to open and stop genset. The alarms are displayed in LCD.

Table 6 Shutdown Alarms

No.	Items	Description
1	Emergency Stop	When controller detects emergency stop signal, it will send a shutdown alarm signal and it will be displayed in LCD.
2	High Temp.	When the temperature of water/cylinder is higher than threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
3	Low Oil Pressure	When oil pressure is lower than threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
4	Over Speed	When genset speed is higher than set threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
5	Under Speed	When genset speed is lower than set threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
6	Loss of Speed Signal	When speed is 0 and delay is not 0, controller will send a shutdown alarm signal and it will be displayed in LCD.
7	Gen Over Voltage	When genset voltage is higher than threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
8	Gen Under Voltage	When genset voltage is under set threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
9	Gen Over Current	When genset current is higher than set threshold and delay is not 0, it will send a shutdown alarm signal and it will be displayed in LCD.
10	Failed to Start	Within set start times, if failed to start, controller will send a shutdown alarm signal and it will be displayed in LCD.
11	Gen Over Freq.	When genset frequency is higher than set threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
12	Gen Under Freq.	When genset frequency is lower than set threshold, controller will send a shutdown alarm signal and it will be displayed in LCD.
13	No Gens	When genset frequency is 0, controller will send a shutdown alarm signal and it will be displayed in LCD.
14	Low Fuel Level	When low fuel level input is active, controller will send a shutdown alarm signal and it will be displayed in LCD.
15	Low Coolant Level	When genset coolant level low input is active, controller will send a shutdown alarm signal and it will be displayed in LCD.
16	Temp. Sensor Open	When sensor is not connected to corresponding port, controller will send

No.	Items	Description
		shutdown alarm signal and it will be displayed in LCD.
17	OP Sensor Open	When sensor is not connected to corresponding port, controller will send shutdown alarm signal and it will be displayed in LCD.
18	Maintenance Due	Maintenance type is running time. When genset running time is longer than maintenance time of user setting or the maintenance type is date, the current date is over the set value, and maintenance action is set as shutdown, controller send shutdown alarm signal and it will be displayed in LCD. Maintenance alarm can be reset by setting maintenance parameters with password.
19	Input Shutdown	When external input is active, controller will send shutdown alarm signal and it will be displayed in LCD.
20	Over Power	If over power detection is enabled, when the controller detects that the over power value (power is positive) has exceeded the pre-set value and the action selects "Shutdown", it will initiate a shutdown alarm.
21	ECU Shutdown	If an error message is received from ECU via J1939, it will initiate a shutdown alarm.
22	ECU Comm. Failure	If the module does not detect the ECU data, it will initiate a shutdown alarm.
23	Short Circuit	When short circuit signal is enabled and the action selects "Shutdown", after short circuit condition is met, it will initiate a warning shutdown alarm.
24	User-define 1	When controller detects that input 1 is configured as "33 User-define", and it is active, the action selects "Shutdown", active range (non-active) is selected, it will initiate a shutdown alarm and display in LCD.
25	User-define 2	When controller detects that input 2 is configured as "33 User-define", and it is active, the action selects "Shutdown", active range (non-active) is selected, it will initiate a shutdown alarm and display in LCD.
26	User-define 3	When controller detects that input 3 is configured as "33 User-define", and it is active, the action selects "Shutdown", active range (non-active) is selected, it will initiate a shutdown alarm and display in LCD.
27	User-define 4	When controller detects that input 4 is configured as "33 User-define", and it is active, the action selects "Shutdown", active range (non-active) is selected, it will initiate a shutdown alarm and display in LCD.
28	User-define 5	When controller detects that input 5 is configured as "33 User-define", and it is active, the action selects "Shutdown", active range (non-active) is selected, it will initiate a shutdown alarm and display in LCD.

▲NOTE: ECU warning and shutdown alarm: check engine according to displayed alarm contents; otherwise check engine user manual according to SPN alarm code for gaining information.

6 CONNECTIONS

Compared with HGM6120Z, HGM6110Z lacks a 3-phase input terminal of mains voltage. The back panel of HGM6120Z is as below.

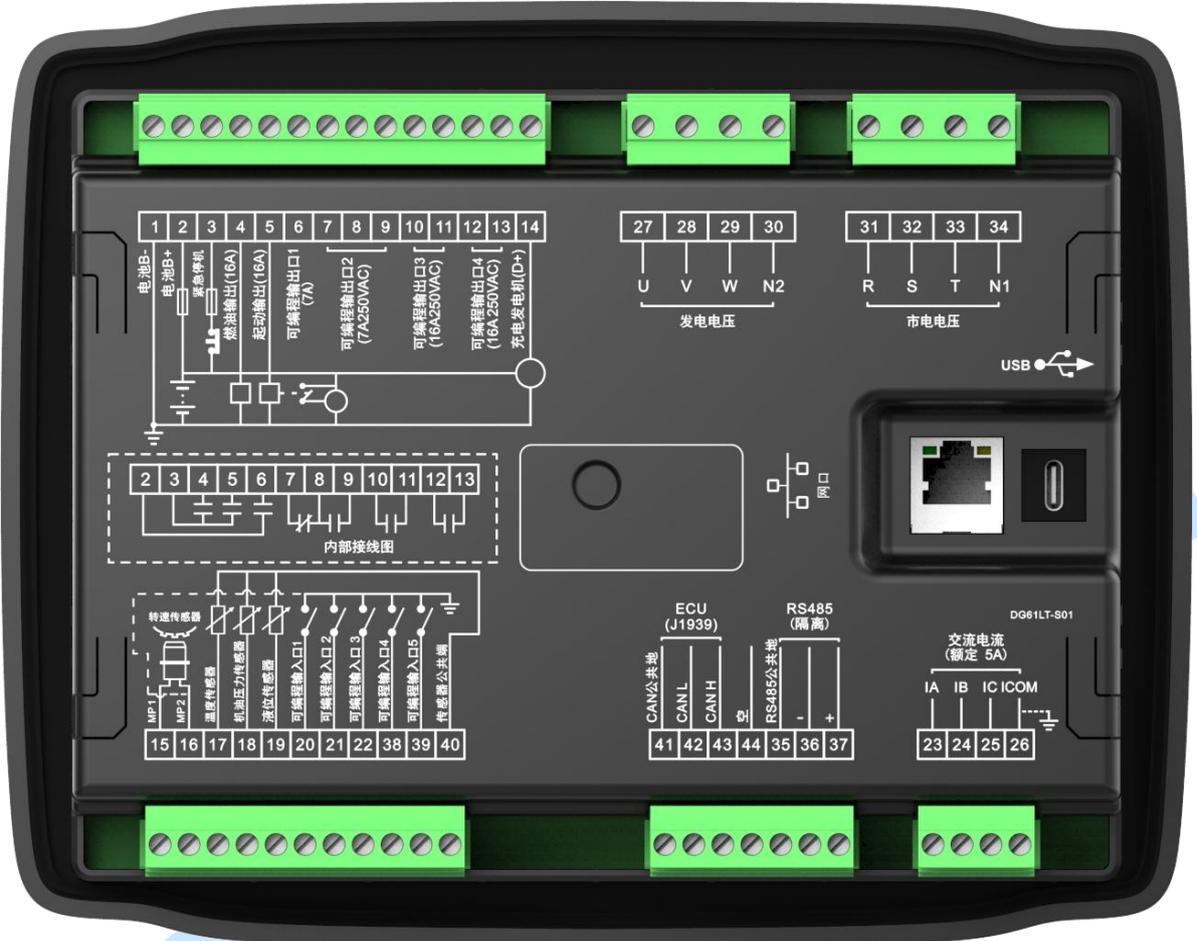


Fig.3 Controller Back Panel Drawing

Table 7 Terminal Connection Description

No.	Function	Cable Size	Description
1	B-	2.5mm ²	Connected to negative of starting battery.
2	B+	2.5mm ²	Connected to positive of starting battery. If wire length is over 30m, better to double wires in parallel. Max. 20A fuse is recommended.
3	Emergency Stop	2.5mm ²	Connected to B+ via emergency stop button.
4	Fuel Relay Output	1.5mm ²	B+ is supplied by 3 points, rated 16A.
5	Start Relay Output	1.5mm ²	B+ is supplied by 3 points, rated 16A. Connect to starter coil.
6	Aux. Relay Output 1	1.5mm ²	B+ is supplied by 2 points, rated 7A.
7	Aux. Relay Output 2	1.5mm ²	Normally close output, 7A rated.
8			Relay common port.
9			Normally open output, 7A rated.
10	Aux. Relay Output 3	2.5mm ²	Relay normally open volt-free contact output. 16A rated.
11			
12	Aux. Relay Output 4	2.5mm ²	16A rated.
13			
14	Charger D+ Input	1.0mm ²	Connect to D+ (WL) terminal. If without, the terminal is not connected.
15	Speed Sensor Input	0.5mm ²	Connected to speed sensor, shielding line is recommended.
16	Speed sensor input, B- is connected.		
17	Temp. Sensor Input	1.0mm ²	Connect to water/cylinder temp. resistance type sensor.
18	Oil Pressure Sensor Input	1.0mm ²	Connect to oil pressure resistance type sensor.
19	Level Sensor Input	1.0mm ²	Connect to level resistance type sensor.
20	Aux. Input 1	1.0mm ²	Ground connected is active (B-).
21	Aux. Input 2	1.0mm ²	Ground connected is active (B-).
22	Aux. Input 3	1.0mm ²	Ground connected is active (B-).
23	CT A Phase Sensing Input	1.5mm ²	External connect CT secondary coil (rated 5A).
24	CT B Phase Sensing Input	1.5mm ²	External connect CT secondary coil (rated 5A).
25	CT C Phase Sensing Input	1.5mm ²	External connect CT secondary coil (rated 5A).
26	CT Common Port	1.5mm ²	Refer to INSTALLATION description.
27	Generator U phase Voltage Sensing Input	1.0mm ²	Connect to U phase output (2A fuse is recommended).
28	Generator V phase Voltage sensing Input	1.0mm ²	Connect to V phase output (2A fuse is recommended).
29	Generator W phase Voltage Sensing Input	1.0mm ²	Connect to W phase output (2A fuse is recommended).
30	Generator N2 Input	1.0mm ²	Connect to generator N-wire.

Reference Table 8.

Reference Table 10.

Reference Table 9.

No.	Function	Cable Size	Description	
31	Mains R phase Voltage Sensing Input	1.0mm ²	Connect to mains R phase (2A fuse is recommended) (HGM6110Z without.)	
32	Mains S phase Voltage Sensing Input	1.0mm ²	Connect to mains S phase (2A fuse is recommended) (HGM6110Z without.)	
33	Mains T phase Voltage Sensing Input	1.0mm ²	Connect to mains T phase, (2A fuse is recommended) (HGM6110Z without.)	
34	Mains N1 Input	1.0mm ²	Connect to mains N-wire. (HGM6110Z without.)	
35	RS485 Common Ground	/	Impedance-120Ω shielding wire is recommended, its single-end connect with ground.	
36	RS485-	0.5mm ²		
37	RS485+	0.5mm ²		
38	Aux. Input 4	1.0mm ²	Ground connected is active (B-).	Reference Table 9.
39	Aux. Input 5	1.0mm ²	Ground connected is active (B-).	
40	Sensor COM	/	Sensor common port.	
41	CAN COM	0.5mm ²	Impedance-120Ω shielding wire is recommended, its single-end connects with ground (connect this port to engine ECU if engine type is not “conventional engine”).	
42	CAN L	0.5mm ²		
43	CAN H	0.5mm ²		
44	NULL			

NOTE 1: USB port in controller rear panel is configurable parameter port; user can directly program via PC.

NOTE 2: ETHERNET port in controller rear panel is network monitoring port; user can directly program via PC.

7 PARAMETER RANGE AND DEFINITION

7.1 PARAMETER CONTENT AND RANGE

Table 8 Parameter Content and Range

No.	Items	Range	Default	Description
1	Mains Normal Delay	(0-3600)s	10	The delay from abnormal to normal or from normal to abnormal. It used for ATS (automatic transfer switch) control.
2	Mains Abnormal Delay	(0-3600)s	5	
3	Mains Under Voltage	(30-60000)V	184	When sampling voltage is under the point, mains under voltage is active. When the value is 30V, mains under voltage is disabled. Return difference is 10V.
4	Mains Over Voltage	(30-60000)V	276	When sampling voltage is greater than the point, mains over voltage is active. When the point is 60000V, mains over voltage is disabled. Return difference is 10V.
5	Transfer Delay	(0-99.9)s	1.0	It's the delay from mains open to generator closed or from generator open to mains closed.
6(1)	Start Delay	(0-3600)s	1	Time from mains abnormal or remote start signal is active to start genset.
7(2)	Stop Delay	(0-3600)s	1	Time from mains normal or remote start signal is inactive to stop genset.
8(3)	Start Attempts	(1-10)times	3	When engine fails to start, it's the maximum cranking times. When setting crank times out, controller sends start failure signal.
9(4)	Preheat Time	(0-300)s	0	Time of pre-powering heat plug before starter is powered up.
10(5)	Cranking Time	(3-60)s	8	Time of starter power up each time.
11(6)	Crank Rest Time	(3-60)s	10	The second waiting time before power up when engine start fails.
12(7)	Safety On Time	(1-60)s	10	Alarm for low oil pressure, high temp, under speed, under frequency/voltage, failed to charge are all inactive.
13(8)	Start Idle Time	(0-3600)s	0	Idle running time of genset when starting.
14(9)	Warming Up Time	(0-3600)s	10	Warming up time between genset switch on and high-speed running.
15(10)	Cooling Time	(3-3600)s	10	Time for cooling before stopping.
16(11)	Stop Idle Time	(0-3600)s	0	Idle running time when genset stop.
17(12)	ETS Solenoid Hold	(0-120)s	20	Stop electromagnet's power on time when genset is stopping.
18(13)	Fail to Stop Delay	(0-120)s	0	If "ETS output time" set as 0, it is the time from end of idle delay to genset at rest; if not

No.	Items	Range	Default	Description
				0, it is from end of ETS solenoid delay to genset at rest.
19(14)	Switch Close Time	(0.0-10.0)s	5.0	Mains' or generator's switch closing pulse width, when it is 0, output is continuous.
20(15)	Flywheel Teeth	(10.0-300.0)	118.0	Number of flywheel teeth, it can detect disconnection conditions and engine speed.
21(16)	Gen Abnormal Delay	(0-20.0)s	10.0	Over or under voltage alarm delay.
22(17)	Gen Over Voltage Shutdown	(30-60000)V	264	When genset voltage is over the point, generator over voltage is active. When the point is 60000V, generator over voltage is disabled.
23(18)	Gen Under Voltage Shutdown	(30-60000)V	196	When generator voltage is under the point, generator under voltage is active. When the point is 30V, generator under voltage is disabled.
24(19)	Gen Under Speed Shutdown	(0-6000)r/min	1200	When the engine speed is under the point for 10s, shutdown alarm signal is sent out.
25(20)	Gen Over Speed Shutdown	(0-6000)r/min	1710	When the engine speed is over the point for 2s, shutdown alarm signal is sent.
26(21)	Gen Under Frequency Shutdown	(0-75.0)Hz	45.0	When generator frequency is lower than the point (not equal to 0) for 10s, shutdown alarm signal is sent.
27(22)	Gen Over Frequency Shutdown	(0-75.0)Hz	57.0	When generator's frequency is over the point and continues for 2s, generator over frequency is active.
28(23)	High Temperature Shutdown	(80-300)°C	98	When external connected temperature sensor value is over this point, it sends out high temp. alarm. This value is only judged for external connected temp. sensor after safety on time is over. When the value is 300, warning alarm won't be sent. (Only suited for temperature sensor, except for high temp. alarm signal inputted by programmable input port.)
29(24)	Low Oil Pressure Shutdown	(0-400)kPa	103	When external connected oil pressure sensor value is under this point, low oil pressure delay is started (judged after safety on time is over). When the value is 0, warning alarm won't be sent. (Only suited for oil pressure sensor, except for low oil pressure alarm signal inputted by programmable input port.)
30(25)	Low Fuel Level Warning Value	(0-100)%	10	When fuel level sensor value under this point and remains for 10s, genset sends out

No.	Items	Range	Default	Description
				warning alarm, only warn but not shutdown.
31(26)	Loss of Speed Signal Delay	(0-20.0)s	5.0	When the delay setting as 0s, it only warns but not shutdown.
32(27)	Charge Alternator Fail Voltage Difference	(0-30.0)V	6.0	During generator is running, when voltage difference between B+ and D+(WL) of charger is higher than this point and remains for 5s, controller will initiate shutdown alarm.
33(28)	Battery Over Voltage	(12.0-40.0)V	33.0	When generator battery voltage is over the point and remains for 20s, battery over voltage signal is active. It only warns but not shutdown.
34(29)	Battery Voltage Under	(4.0-30.0)V	8.0	When generator battery voltage is under the point and remains for 20s, battery under voltage signal is active. It only warns but not shutdown.
35(30)	CT Ratio	(5-6000)/5	500	External connected current transformer ratio.
36(31)	Full Load Current	(5-6000)A	500	Rated current of generator, used for calculating over load current.
37(32)	Over Current PCT	(50-130)%	120	When load current is over the point, the over current delay is initiated.
38(33)	Over Current Delay	(0-3600)s	30	It is definite time. When load current is over the point and remains for preset time, over current signal is sent. When the delay is 0, only warn but not shutdown.
39(34)	Fuel Pump On	(0-100)%	25	When the fuel level is lower than the set value for 2s, send a signal to open fuel pump.
40(35)	Fuel Pump Off	(0-100)%	80	When the fuel level is higher than the set value for 2s, send a signal to close fuel pump.
41(36)	Aux. Output 1 Set	(0-28)	2	Factory default: Energized to stop. See table 8
42(37)	Aux. Output 2 Set	(0-28)	3	Factory default: Idle control. See table 8.
43(38)	Aux. Output 3 Set	(0-28)	5	Factory default: Gen close output. See table 8
44(39)	Aux. Output 4 Set	(0-28)	6	Factory default: Mains close output. See table 8.
45(40)	Aux. Input 1 Set	(0-35)	1	Factory default: High temperature shutdown. See table 9.
46(41)	Aux. Input 1 Active	(0-1)	0	Factory default: close.
47(42)	Aux. Input 1 Delay	(0-20.0)s	2.0	
48(43)	Aux. Input 2 Set	(0-35)	2	Factory default: Low oil pressure shutdown. See table 9.

No.	Items	Range	Default	Description
49(44)	Aux. Input 2 Active	(0-1)	0	Factory default: close.
50(45)	Aux. Input 2 Delay	(0-20.0)s	2.0	
51(46)	Aux. Input 3 Set	(0-35)	10	Factory default: Remote start. See table 9.
52(47)	Aux. Input 3 Active	(0-1)	0	Factory default: close to activate.
53(48)	Aux. Input 3 Delay	(0-20.0)s	2.0	
54(49)	Aux. Input 4 Set	(0-36)	11	Factory default: Low fuel level warn. See table 9.
55(50)	Aux. Input 4 Active	(0-1)	0	Factory default: close.
56(51)	Aux. Input 4 Delay	(0-20.0)s	2.0	
57(52)	Aux. Input 5 Set	(0-35)	12	Factory default: Low coolant level warn. See table 9.
58(53)	Aux. Input 5 Active	(0-1)	0	Factory default: close.
59(54)	Aux. Input 5 Delay	(0-20.0)s	2.0	
60(55)	Power On Mode	(0-2)	0	0: Stop Mode; 1: Manual Mode; 2: Auto Mode
61(56)	Module Address	(1-254)	1	The communication address of controller.
62(57)	Password	(0-9999)	0318	See NOTE 4.
63(58)	Crank Disconnect Condition	(0-6)	2	Conditions of disconnecting starter (generator frequency, magnetic pickup sensor, oil pressure), Each condition can be used alone and simultaneously to separating the start motor and engine as soon as possible.
64(59)	Engine Speed of Crank Disconnect	(0-3000)r/min	360	When engine speed is over this point, starter will disconnect.
65(60)	Frequency of Crank Disconnect	(0.0-30.0)Hz	14.0	When generator frequency is over this point, starter will disconnect.
66(61)	Oil Pressure of Crank Disconnect	(0-400)kPa	200	When the oil pressure is over this point, starter will disconnect.
67(62)	High Temp. Shut Inhibit	(0-1)	0	Default: when temperature is too high, the genset alarms and shuts down. See NOTE2.
68(63)	Low OP Shut Inhibit	(0-1)	0	Default: when oil pressure is too low, it alarms and shuts down. See NOTE3.
69(64)	AC System	(0-3)	0	0: 3P4W 1: 2P3W 2: 1P2W 3: 3P3W
70(65)	Temp. Sensor Curve Type	(0-14)	4	SGD. See table 10.
71(66)	Pressure Sensor Curve Type	(0-14)	4	SGD. See table 10.
72(67)	Fuel Level Sensor Curve Type	(0-7)	3	SGD. See table 10.
73(68)	Generator Poles	(2-64)	4	Number of magnetic poles, used for calculating speed of engine without speed

No.	Items	Range	Default	Description
				sensor.
74(69)	Temp. Sensor Open Circuit Action	(0-2)	1	0: Inactive; 1: Warn; 2: Shutdown
75(70)	Oil Pressure Sensor Open Circuit Action	(0-2)	1	
76(71)	Disconnect Oil Pressure Delay	(0-20.0)s	0.0	When disconnect conditions include oil pressure and engine oil pressure is higher than disconnect oil pressure delay, the genset is regarded as start successfully and starter will disconnect.
77(72)	Scheduled Run	(0-1)	0	0: Disabled; 1: Enabled.
78(73)	Cycle Setting	(0-2)	0	Circulate condition: monthly, weekly and daily can be selected. Start time and duration can be set.
79(74)	Auto Start Inhibit	(0-1)	0	0: Disabled; 1: Enabled.
80(75)	Cycle Setting	(0-2)	0	Circulate condition: monthly, weekly and daily can be selected. Not start time and duration can be set.
81(76)	Over Power	(0-2)	0	0: Inactive; 1: Warn; 2: Shutdown When power is higher than preset value and duration exceeds than delay, over power warning is active. Return and delay value can be set.
82(77)	Start Interface	(0-1)	0	0: Disabled; 1: Enabled. Start interface delay can be set.
83(78)	Maintenance Password	(0-9999)	0	Enter password interface of maintenance configuration.
84(79)	Date/Time	Set the date of controller.		
85(80)	Flexible Sensor Curve Type	(0-2)	0	0: User-defined temperature sensor 1: User-defined pressure sensor 2: User-defined level sensor Choose sensor which need to be set, input every point (8 points need to be input) resistance and corresponding value (or current, voltage) of curve.
86(81)	Engine Type	(0-39)	0	0: Conventional Engine.
87(82)	SPN Alarm Version	(0-3)	0	SPN alarm version.
88(83)	Custom Theme	(0-2)	0	0: Default Theme; 1: OEM Plant Theme; 2: Terminal User Theme
89(84)	Fuel Output Time	(1-60)s	1	It is the time of the genset fuel output during power on.
90(85)	Manual Mode ATS	(0-1)	0	0: Key Switch; 1: Auto Switch.
91(86)	Speed Raise Pulse	(0-20.0)s	0.2	It is the speed-up pulse output time, when

No.	Items	Range	Default	Description
				the unit enters the high-speed warm-up.
92(87)	Speed Drop Pulse	(0-20.0)s	0.2	It is the speed-drop pulse output time, when the unit enters the stop idling.
93(88)	Fuel Level Low Shutdown	(0-100)%	5	When fuel level of external level sensor falls below the setting limit and lasts for 5s, low fuel level shutdown alarm will be initiated; if limit value set as 0, low fuel shutdown alarm will not be initiated.
94(89)	ATS Open Time	(1.0-60.0)s	3.0	ATS open output time.
95(90)	Gen PT Fitted	(0-1)	0	0: Disabled; 1: Enabled. PT primary and secondary voltage can be set.
96(91)	Mains PT Fitted	(0-1)	0	0: Disabled; 1: Enabled. PT primary and secondary voltage can be set. HGM6110LT is reserved and without this setting.
97(92)	Network Communication	(0-1)	1	0: Disabled; 1: Enabled. ETHERNET port is enabled or not.
98(93)	TCP/IP Modbus Setting	(0-1)	1	0: Disabled; 1: Enabled. Controller is allowed to connect with PC software via ETHERNET interface.
99(94)	Auto Obtain IP Address	(0-1)	0	0: Disabled; 1: Enabled. Controller is allowed to use dynamic assigned IP address, and fixed IP is unavailable.
100 (95)	IP Address	192.168.0.100		All Ethernet settings change (e.g. IP address, subnet mask) are valid after re-power on.
101 (96)	Subnet Mask	255.255.255.0		
102 (97)	Default Gateway	192.168.0.2		
103 (98)	DNS Address	211.138.24.66		
104 (99)	Cooling Fan On Temp.	(0-255)	60	Unit: °C
105 (100)	Cooling Fan Off Temp.	(0-255)	40	Unit: °C
106 (101)	Charger Voltage Sampling	(0-1)	0	0: Controller 1: ECU
107 (102)	Speed Sampling Select	(0-1)	1	0: Controller 1: ECU
108 (103)	Temp. Sampling Select	(0-1)	1	0: Controller 1: ECU
109 (104)	Oil Pressure Sampling Select	(0-1)	1	0: Controller 1: ECU

No.	Items	Range	Default	Description
110 (105)	ECU Shutdown Set	(0-1)	1	1: Enabled 0: Disabled
111 (106)	Low Fuel Level Shutdown	(0-1)	0	1: Enabled 0: Disabled
112 (107)	Idling Speed	(0-6000)	750	Unit: RPM
113 (108)	Rated Speed	(0-6000)	1500	Unit: RPM
114 (109)	ECU Address	(0-0xFF)	3	Default: 3
115 (110)	Over Current Action	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
116 (111)	Short Circuit Protection Set	(0-1)	1	1: Enabled 0: Disabled
117 (112)	Short Circuit Protection Action	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
118 (113)	Short Circuit Protection Threshold	(0-1000)	600	Unit: A
119 (114)	Short Circuit Protection Time Rate	(1-36)	10	0: Inactive 1: Warn 2: Shutdown
120 (115)	Input 1 Action Type	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
121 (116)	Input 2 Action Type	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
122 (117)	Input 3 Action Type	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
123 (118)	Input 4 Action Type	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
124 (119)	Input 5 Action Type	(0-2)	1	0: Inactive 1: Warn 2: Shutdown
125 (120)	Input 1 Action Range	(0-3)	1	0: After Safety On 1: From Start 2: Always Active 3: Inactive
126 (121)	Input 2 Action Range	(0-3)	1	0: After Safety On 1: From Start 2: Always Active 3: Inactive
127 (122)	Input 3 Action Range	(0-3)	1	0: After Safety On 1: From Start 2: Always Active 3: Inactive
128	Input 4 Action Range	(0-3)	1	0: After Safety On

No.	Items	Range	Default	Description
(123)				1: From Start 2: Always Active 3: Inactive
129 (124)	Input 5 Action Range	(0-3)	1	0: After Safety On 1: From Start 2: Always Active 3: Inactive
130 (125)	Baud Rate	(0-4)	2	0: 2400bps; 1: 4800bps; 2: 9600bps; 3: 19200bps; 4: 115200bps

NOTE1: The value in first line of "No." column is for HGM6120Z and the value in brackets is for HGM6110Z.

NOTE32: If select high temperature inhibit, or set programmable input as "High Temperature Inhibit" (this input is active), when temperature is higher than pre-setting threshold, controller sends warning signal only and not shutdown.

NOTE3: If select low oil pressure inhibit, or set programmable input as "Low Oil Pressure Inhibit" (this input is active), when low oil pressure is lower than pre-setting threshold, controller sends warning signal only and not shutdown.

NOTE4: If default password (0318) isn't changed, it doesn't need to input when configuring parameters via PC software; if the password is changed for the first time via PC software, it needs to input password in password window.

NOTE5: Between input correct password and LCD back light haven't got dark, input parameter numbers can enter parameter setting interface when enters "Password Input" again.

NOTE6: In teeth configuration interface, if being in teeth configuration status and frequency is larger than 20Hz, press start key for auto calculating teeth numbers and press confirm key for changing teeth numbers.

7.2 DEFINED CONTENTS OF AUXILIARY OUTPUTS 1-4

Table 9 Defined Contents of Auxiliary Outputs 1-4

No.	Items	Description
0	Not Used	Output is disabled when this item is selected.
1	Common Alarm	Including all shutdown alarm and warning alarm. When only warning alarm occurs, the alarm won't self-latch; When a shutdown alarm occurs, the alarm will self-latch until alarm is reset.
2	Energize to Stop	Used for the genset with stop solenoid. Pick-up when idle speed is over while disconnect when ETS delay is over.
3	Idle Control	Used for the genset with idle speed. Pick-up when crank while disconnect when enter into warming up. Pick-up when stop idle while disconnect when genset stop completely.
4	Preheat Control	Close before started and disconnect before powered on.
5	Gen Close Output	When close time is set as 0, it is continuous closing.
6	Mains Close Output	HGM6110Z without.
7	Open Breaker	When close time is set as 0, open breaker is disabled.
8	Raise Speed	Pick-up when enter warming up time. Disconnect when raise speed auxiliary input active.
9	Drop Speed	Pick-up when enter into stop idle or ETS solenoid stop (shutdown alarm). Disconnect when drop speed auxiliary input active.
10	Generator Run	Output when genset is in normal running, disconnect when rotating speed is lower than engine speed after fired.
11	Fuel Pump Control	Pick-up when the fuel level lower than the open threshold or low fuel level warning is active; disconnect when the fuel level over the close threshold and the low fuel level warning input is disabled.
12	High Speed Control	Output when it enters warming up time, and disconnect after cooling.
13	In Auto Mode	The controller is in Auto Mode.
14	Shutdown Alarm	Output when shutdown alarm occurs and open when alarm resets.
15	Audible Alarm	When shutdown alarm and warn alarm occur, audible alarm is set as 300s. In audible alarm output duration, when press panel any key or "alarm mute" input is active, it can remove the alarm.
16	Heater Control	It is controlled by heater of temperature sensor's limited threshold.
17	Fuel Output	Action when genset is starting and disconnect when stop is completed.
18	Crank Output	Genset output in start output status and open in other status.
19	ECU Stop	Used for ECU engine and control its stop.
20	ECU Power	Used for ECU engine and control its power.
21	ECU Warn	Indicate ECU sends a warning signal.
22	ECU Shutdown	Indicate ECU sends a shutdown signal.
23	ECU Comm. Failure	Indicate that controller cannot communicate with ECU.

No.	Items	Description
24	Raise Speed Pulse	Raising speed time is output while the unit entering into hi-speed warming up.
25	Drop Speed Pulse	Dropping speed time is output while the unit entering into stop idling.
26	Oil Pump Control	Engine type select Yuchai-LMB. When unit is standby, pump control output per 30 minutes. If oil pressure is above 100kPa or output delay is more than 1 minute, it will stop output; if unit is in re-heating state, oil pump control will always output.
27	Cooling Fan Output	Cooler control, its actions is controlled by cooler of temperature sensor's limited threshold.
28	ECU Key Switch	Output after fuel outputs 3s.

7.3 DEFINED CONTENTS OF AUXILIARY INPUTS 1-5

Table 10 Defined Contents of Auxiliary Input 1-5 (All GND(B-) Connected Active)

No.	Items	Description
0	Not Used	
1	High Temperature Shutdown	If the signal is active after safety run on delay over, genset will immediately alarm to shut down.
2	Low Oil Pressure Shutdown	
3	External Warn Input	Only warning, not shutdown if input is active.
4	External Shutdown Input	If the signal is active, genset will immediately alarm to shut down.
5	WTH STOP by Cool	During engine running and the input is active, if high temperature occurs, controller will stop after high-speed cooling; when the input is disabled, controller will stop immediately.
6	Generator Close Status	Connect to auxiliary port of gen load breaker.
7	Mains Close Status	Connect to auxiliary port of mains load breaker.
8	Inhibit WTH STOP	When it is active, high temperature stop is inhibited. See NOTE 3 of Table 8 for more information.
9	Inhibit OPL STOP	When it is active, low oil pressure stop is inhibited. See NOTE4 of Table 8 for more information.
10	Remote Start	In Auto mode, when input is active, genset can start and take load after genset is OK; when input is inactive, genset will stop automatically.
11	Low Fuel Level Warn	Connected to sensor digital input. The controller sends a warning alarm signal when active.
12	Low Coolant Level Warn	
13	Low Fuel Level Shutdown	Connected to sensor digital input. The controller sends a shutdown alarm signal when active.
14	Low Coolant Level Shutdown	
15	Auto Start Inhibit	In Auto Mode, when the input is active, no matter mains normal or not, genset won't start. If genset is in normal running, stop process won't be executed. When input is disabled, genset will

No.	Items	Description
		automatically start or stop judged by mains normal or not.
16	Remote Control	All keys in panel are inactive except     and "Remote Mode" is displayed on LCD. Remote module can switch module mode and start/stop operation via panel buttons.
17	Charge Alt Fail IN	Connect to "failed to charge" output of the charger.
18	Panel Lock	All buttons in panel are inactive except     and there is  in the right of fifth row in LCD when input is active.
19	Alarm Mute	Can prohibit "Audible Alarm" output when input is active.
20	Idle Control Mode	In this mode, under voltage, under frequency and under speed are not protected.
21	60Hz Active	It is used for J1939 engine with CANBUS port, when input is active, frequency is 60Hz.
22	Raise Speed Pulse	If engine type is common J1939, when input is active, engine target speed will increase 50r/min.
23	Drop Speed Pulse	If engine type is common J1939, when input is active, engine target speed will decrease 50r/min.
24	Instrument Mode	All outputs are prohibited under this mode.
25	Manual Mode	In manual mode, when the input is active, genset can start automatically; when the input is inactive, genset can stop automatically.
26	Auto Mode	In manual mode, when the input is active, genset can start automatically and take with load after normally running, mains power will take off load; when the input is inactive, mains power will take with load, genset will take off load and stop automatically.
27	Simulate Start Key	Can connect a button (not self-lock) externally to simulate panel key.
28	Simulate Stop Key	Can connect a button (not self-lock) externally to simulate panel key.
29	Simulate Gen C/O Key	Can connect a button (not self-lock) externally to simulate panel key.
30	Simulate Mains C/O Key	Can connect a button (not self-lock) externally to simulate panel key.
31	Battle Mode	All shutdown alarms are prohibited except for emergency stop (i.e. battle mode or override mode).
32	ECU Shutdown Disabled	Enable the input port, controller will not receive ECU shutdown alarm and send shutdown signal.
33	User-define	In the current status, action type, range, delay time of input port can be selected. When the input is active, controller can perform corresponding action according to action range.
34	Regeneration Input	It is used with after-treatment ECU.

No.	Items	Description
35	Regeneration Input Inhibit	It is used with after-treatment ECU.

SmartGen

7.4 SENSOR SELECTION

Table 11 Sensors Selection

No.	Items	Content	Description
1	Temperature Sensor	0 Not used 1 User Configured (Resistance Type) 2 VDO 3 SGH 4SGD 5 CURTIS 6 DATCON 7 VOLVO-EC 8 SGX 9 User Configured (4-20)mA (special order) 10 User Configured (0-5)V (special order) 11 Digital Low Input 12 Digital High Input 13 Reserved 14 Reserved	Defined input resistance range is 0Ω~6000Ω, factory default is SGD sensor.
2	Pressure Sensor	0 Not used 1 User Configured (Resistance Type) 2 VDO 10Bar 3 SGH 4 SGD 5 CURTIS 6 DATCON 10Bar 7 VOLVO-EC 8 SGX 9 User Configured (4-20)mA (special order) 10 User Configured (0-5)V (special order) 11 Digital Low Input 12 Digital High Input 13 VDO 5Bar 14 Reserved	Defined input resistance range is 0Ω~6000Ω, factory default is SGD sensor.
3	Fuel Level Sensor	0 Not used 1 User Configured (Resistance Type) 2 SGH 3 SGD 4 User Configured (4-20)mA (special order)	Defined input resistance range is 0Ω~6000Ω, factory default is SGD sensor.

No.	Items	Content	Description
		5 User Configured (0-5)V (special order) 6 Digital Low Input 7 Digital High Input	

NOTE: It needs special instructions for ordering when the genset uses (4-20)mA or (0-5)V sensor.

7.5 CONDITIONS OF CRANK DISCONNECT SELECTION

Table 12 Crank Disconnect Conditions Selection

No.	Content
0	Speed
1	Generator frequency
2	Speed + Generator frequency
3	Speed + Oil pressure
4	Generator frequency + Oil pressure
5	Generator frequency + Speed + Oil pressure
6	Oil pressure

- 1) There are 3 kinds of crank disconnect conditions. Speed, generator frequency and oil pressure can be used alone. Oil pressure is used with speed and the generator frequency together is recommended, in order to make the starter and the engine disconnect as soon as possible.
- 2) Speed is the signal collected by magnetic sensor, which is installed in the engine for testing flywheel teeth.
- 3) When choosing speed, ensure the number of flywheel teeth is same as the pre-set, otherwise over or under speed shutdown may appear.
- 4) If generator has no magnetic pickup sensor, don't choose speed item; otherwise Fail to Start or Loss of Speed Signal shutdown will occur.
- 5) If the generator has no oil pressure sensor, don't choose corresponding item.
- 6) If generator frequency has not been selected, controller will not measure and display the relative parameters (can be applied to the pump set); if speed has not been selected, the speed will be calculated by the generating signal.

8 PARAMETER SETTING

After controller is powered on, press  to enter the parameters setting menu:

1. Set Parameters
2. Information
3. Set Language
4. Event Log
5. ECU DM2
6. Maintenance

— Parameters Setting

All items in table 8 can be set after inputting password “0318”. When the default password has been changed, it needs to input the same password with controller for parameter setting via PC software. If more parameter items need to be set or password is forgotten, such as voltage and current calibration, please contact with the factory.

▲NOTE:

- 1) **HGM6110Z**, there are no items 1-5 in table 8; auxiliary output 1-4 have no digital outputs about mains.
- 2) Please modify the internal parameters in standby mode (crank conditions, auxiliary input and output configuration, multi delays, etc.) otherwise shutdown alarm or other abnormal conditions may appear.
- 3) The over-voltage threshold must be greater than the under-voltage threshold; otherwise, over-voltage and under-voltage will occur at the same time.
- 4) The over-speed threshold must be greater than under-speed threshold, otherwise over speed and under speed will occur at the same time.
- 5) Set frequency value (after crank disconnect) as low as possible, in order to disconnect starter quickly.
- 6) Auxiliary input 1-5 cannot be set as the same items, otherwise it cannot realize correct function; auxiliary output 1-4 can be set as the same item.
- 7) If need to shut down after cooling, please set any input as “stop after cooling”, then connect this input to ground; or set high temperature stop action as “cooling stop”

— Information

- 1) LCD will display some information of controller, such as software version, issue date.

▲NOTE: Pressing  will display the status of digital inputs and outputs.

- 2) Language

User may select display language as Chinese, English, Spanish, Russian, Portuguese, Turkish, Polish and French.

- 3) LCD contrast

Press  and  (or  and ) can adjust LCD contrast to make LCD characters clearer.

Adjustment range is 0-7.

9 SENSOR SETTING

- When choosing sensor, standard of sensor curve will be needed. If temperature sensor is set as SGH (120°C resistor type), sensor curve should be SGH (120°C resistor type); If it is set as SGD (120°C resistor type), sensor curve should be SGD curve.
- If there is difference between standard sensor curve and chosen sensor curve, select “defined sensor”, and then input defined sensor curve.
- When sensor curve is inputted, X value (resistance) must be in accordance with the order of higher to lower, otherwise errors will occur.
- When sensor is selected as “Not used”, temperature, pressure and fuel level will be display as “- - -” in LCD.
- If there is no pressure sensor, but only has low pressure alarm switch, then you must set pressure sensor as “Not used”, otherwise oil pressure low alarm shutdown may appear.
- Can set several points of forehead or backmost as the same ordinate, as the following picture:

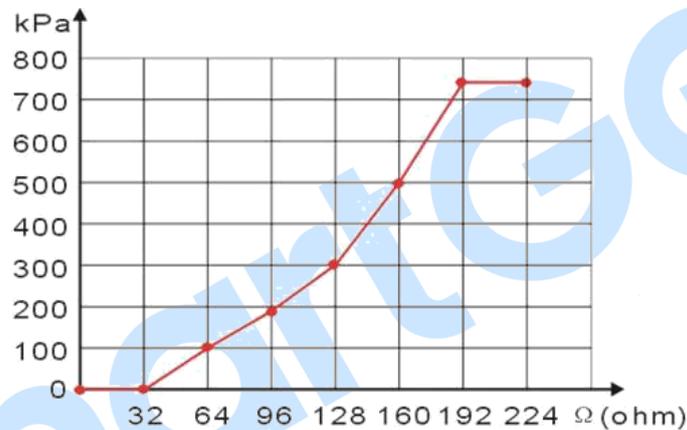


Fig.4 Sensor Curve

Table 13 Conventional Pressure Unit Conversion Table

	N/m ² (pa)	kgf/cm ²	bar	psi
1Pa	1	1.02x10 ⁻⁵	1x10 ⁻⁵	1.45x10 ⁻⁴
1kgf/cm ²	9.8x10 ⁴	1	0.98	14.2
1bar	1x10 ⁵	1.02	1	14.5
1psi	6.89x10 ³	7.03x10 ⁻²	6.89x10 ⁻²	1

10 COMMISSIONING

Before operation, the following checking should be carried out:

- Check and ensure all the connections are correct and wires diameter is suitable.
- Ensure that the controller DC power has fuse; starting battery positive and negative poles are correctly connected.
- Emergence stop input must be connected to positive of starting battery via normally close contact of emergency stop.
- Take proper actions to prevent engine to crank (e. g. Remove the connections of fuel valve). If checking is OK, connect start battery, select Manual Mode, controller will execute the program.
- Set controller as Manual Mode, press “start” button to start genset. If failed within the setting crank times, controller will send “Failed to Start” signal; then press “stop” to reset controller.
- Recover actions of preventing engine to disconnect crank (e. g. Connect wire of fuel valve), press “start” button again, genset will start. If everything goes well, genset will normally run after idle running (if configured). During this period, watch for engine’s running situations and voltage and frequency of alternator. If there is abnormal, stop genset and check all connections according to this manual.
- Select the Auto Mode from front panel, connect to mains signal. After the mains normal delay, controller will transfer ATS (if configured) into mains load. After cooling, controller will stop genset and into standby state until mains abnormal again.
- When mains abnormal again, genset will start automatically and into normal running, send signal to make gens close, transfer ATS and make genset take load. If it not likes this, please check connections of ATS according to this manual.
- If there are any other questions, please contact SmartGen’s service.

11 TYPICAL APPLICATION

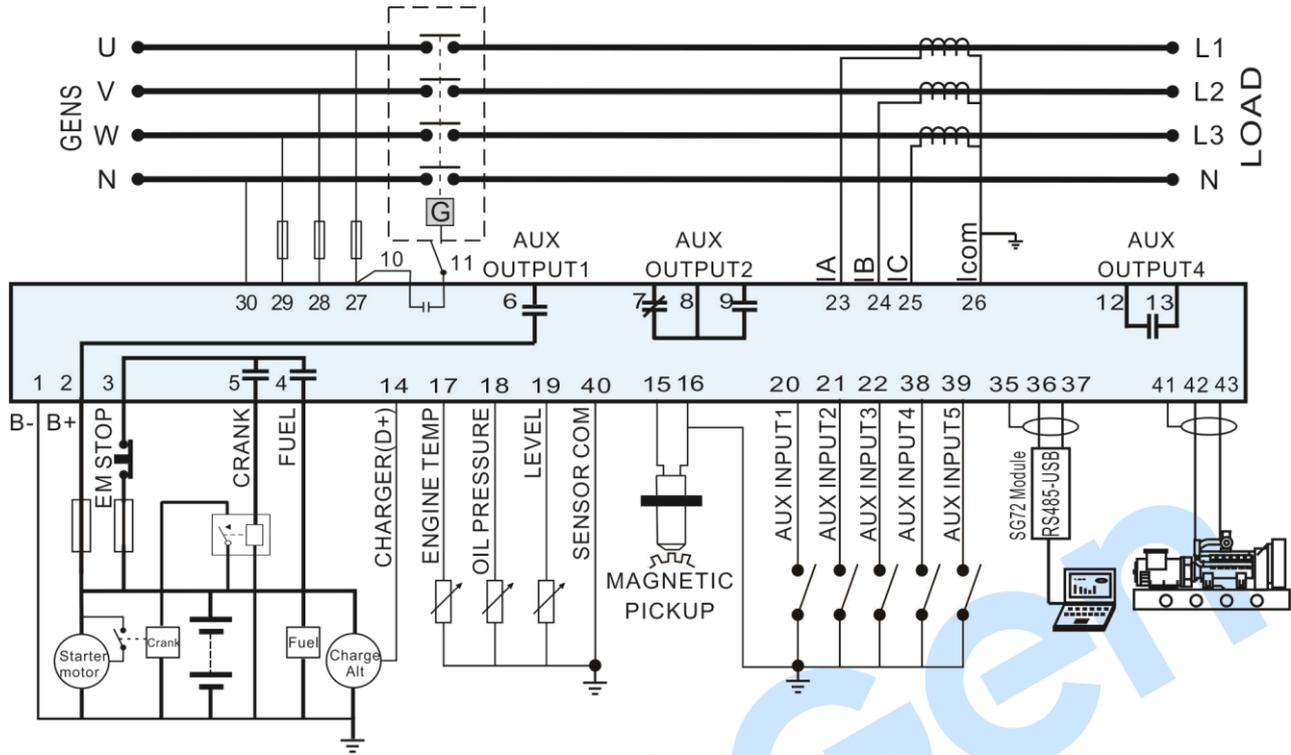


Fig.5 HGM6110Z Typical Application Diagram

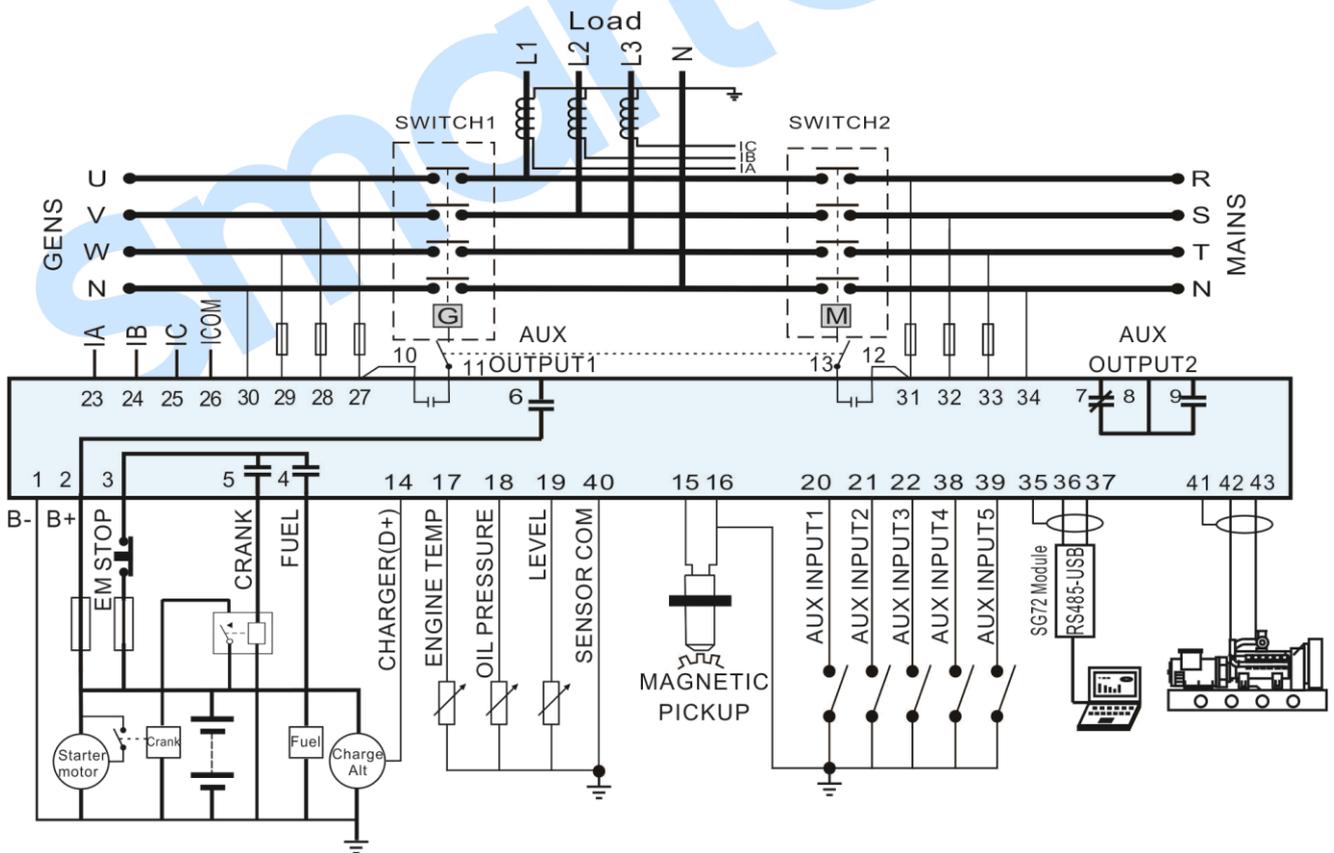


Fig.6 HGM6120Z Typical Application Diagram

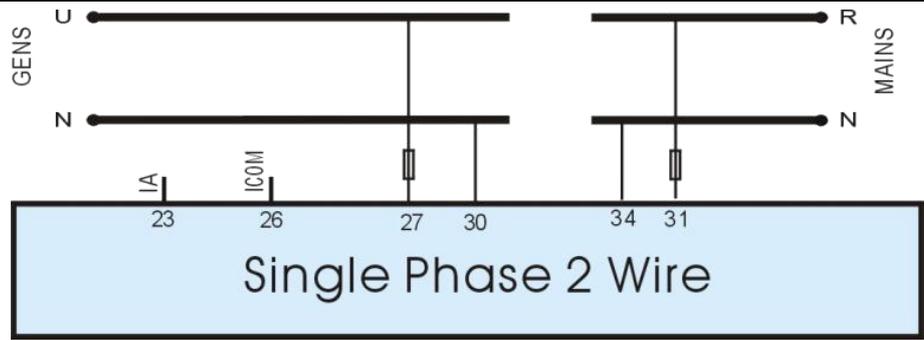


Fig.7 Single Phase 2 Wire Connection Diagram

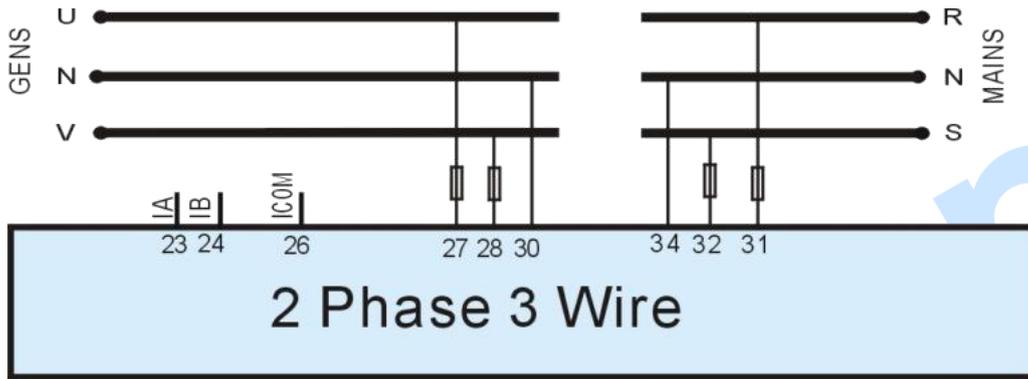


Fig.8 2 Phase 3 Wire Connection Diagram

NOTE: Recommend that the output of crank and fuel expand high-capacity relay.

12 INSTALLATION

12.1 FIXING CLIPS

- The module is panel-mounted design and installed with fixing clips.
- Withdraw the fixing clip screw (turn anticlockwise) until it reaches proper position.
- Pull the fixing clip backwards (towards the back of the module) ensuring four metal clips are inside their allotted slots.
- Turn the fixing clip screws clockwise until they make contact with the panel.

▲NOTE: Care should be taken not to over tighten the screws of metal fixing clips.

12.2 OVERALL DIMENSION AND PANEL CUTOUT

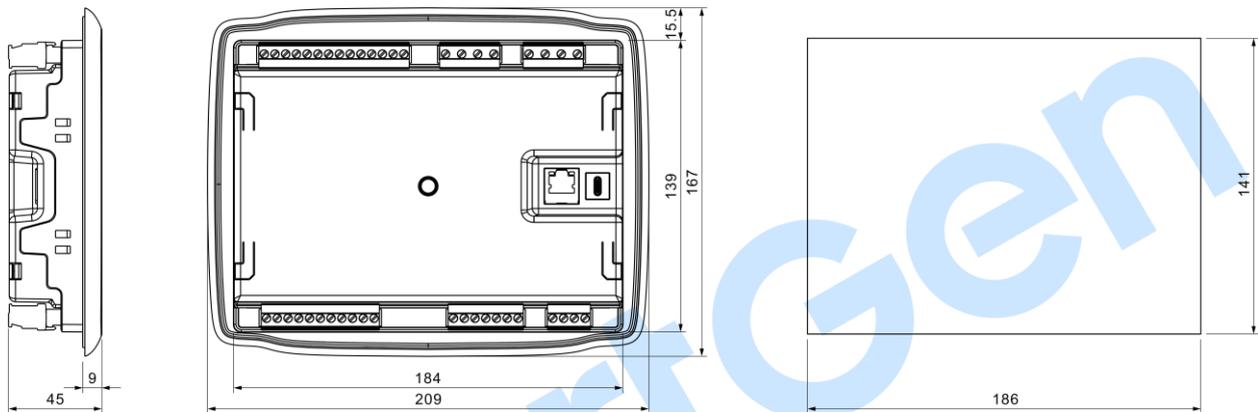


Fig.9 Case and Overall Dimensions (Unit: mm)

HGM6100Z series controller can be applicable to (8~35) VDC battery voltage. Battery negative must be reliably connected to engine shell. The connection between controller power (B+ and B-) and battery (B+ and B-) should not be less than 2.5mm². If a floating charger is fitted, please connect output line of the charger with battery directly, and then connect battery positive and negative to power input of controller separately, in case that charger will interfere with the normal running of controller.

1) Speed Sensor Input

Speed sensor is installed in the engine for testing flywheel teeth. The connection with controller uses 2-core screen, shield layer should be connected to terminal 16 of controller and the other end vacant. The other two signal lines are respectively connected to terminal 15 and terminal 16. At full speed, output voltage range is (1~24) VAC (RMS), 12VAC is recommended (rated speed). During installing, make the speed sensor contact the flywheel firstly, then pour out 1/3 laps, finally lock nut on the sensor.

2) Output and Expansion Relay

All the outputs of controller are relay output. If need to expand relay, please add freewheeling diode in both ends of relay coil (when expansion relay coil links DC), or add RC loop (when expansion relay coil links AC), in case interfering controller or other equipment.

3) AC Input

HGM6100Z series controller must externally connect to current transformer; CT secondary current must be 5A. Besides, the phase of CT and input voltage must be correct, or the sampling current and active power may be incorrect.

- ▲NOTE:** a. Icom must connect to battery cathode of the controller.
b. When there is load current, open circuit is inhibited in the CT secondary side.

5) Withstand Voltage Test

When the controller has been installed in the control panel, during the test please disconnect all the terminals, in case high voltage damages the controller.

SmartGen

13 CONNECTIONS OF CONTROLLER WITH J1939 ENGINE

13.1 CUMMINS ISB/ISBE

Table 14 Connector B

Terminals of controller	Connector B	Remark
Aux. output 1	39	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect with starter coil directly.
Aux. output 2	Expand 30A relay, battery voltage of 01, 07, 12, 13 is supplied by relay.	ECU power; Set programmable output 2 as "ECU power".

Table 15 9 Pins Connector

Terminals of controller	9 pins connector	Remark
CAN_SCR	SAE J1939 shield	CAN communication shielding line (connect to ECU terminal only).
CAN(H)	SAE J1939 signal	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return	Using impedance 120Ω connecting line.

Engine type: Cummins ISB.

13.2 CUMMINS QSL9

Suitable for CM850 engine control module.

Table 16 50 Pins Connector

Terminals of controller	50 pins connector	Remark
Aux. output 1	39	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect to starter coil directly.

Table 17 9 Pins Connector

Terminals of controller	9 pins connector	Remark
CAN_SCR	SAE J1939 shield-E	CAN communication shielding line (connect to ECU terminal only).
CAN(H)	SAE J1939 signal-C	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return-D	Using impedance 120Ω connecting line.

Engine type: Cummins-CM850.

13.3 CUMMINS QSM11 (IMPORT)

It is suitable for CM570 engine control module. Engine type is QSM11 G1, QSM11 G2.

Table 18 C1 Connector

Terminals of controller	C1 connector	Remark
Aux. output 1	5&8	Set aux. output 1 as "Fuel Output". Outside expand relay, when fuel output, making make port 5 and port 8 of C1 be connected.
Starting relay output	-	Connect to starter coil directly.

Table 19 3 Pins Data Link Connector

Terminals of controller	3 pins data link connector	Remark
CAN_SCR	C	CAN communication shielding line (connect to ECU terminal only).
CAN(H)	A	Using impedance 120Ω connecting line.
CAN(L)	B	Using impedance 120Ω connecting line.

Engine type: Cummins ISB.

13.4 CUMMINS QSX15-CM570

It is suitable for CM570 engine control module. Engine type is QSX15.

Table 20 50 Pins Connector

Terminals of controller	50 pins connector	Remark
Aux. output 1	38	Oil spout switch; Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect to starter coil directly

Table 21 9 Pins Connector

Terminals of controller	9 pins connector	Remark
CAN_SCR	SAE J1939 shield-E	CAN communication shielding line (connect to ECU terminal only).
CAN(H)	SAE J1939 signal-C	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return-D	Using impedance 120Ω connecting line.

Engine type: Cummins QSX15-CM570.

13.5 CUMMINS GCS-MODBUS

It is suitable for GCS engine control module. Use RS485-MODBUS to read information of engine. Engine types are QSX15, QST30, QSK23/45/60/78 and so on.

Table 22 D-SUB Connector 6

Terminals of controller	D-SUB connector 06	Remark
Aux. output 1	5&8	Set aux. output 1 as "Fuel Output". Outside expand relay, when fuel output, connect port 06 and 08 of the connector.
Starting relay output	-	Connect to starter coil directly.

Table 23 D-SUB Connector 06

Terminals of controller	D-SUB connector 06	Remark
RS485 GND	20	CAN communication shielding line (connect to ECU terminal only).
RS485+	21	Using impedance 120Ω connecting line.
RS485-	18	Using impedance 120Ω connecting line.

Engine type: Cummins QSK-MODBUS, Cummins QST-MODBUS, Cummins QSX-MODBUS.

13.6 CUMMINS QSM11

Table 24 Engine OEM Connector

Terminals of controller	OEM connector of engine	Remark
Aux. output 1	38	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect with starter coil directly.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	46	Using impedance 120Ω connecting line.
CAN(L)	37	Using impedance 120Ω connecting line.

Engine type: common J1939.

13.7 CUMMINS QSZ13

Table 25 Engine OEM Connector

Terminals of controller	OEM connector of engine	Remark
Aux. output 1	45	
Starting relay output	-	Connect to starter coil directly.
Aux. output 2	16&41	Setting to idle speed control, normally open output. Making 16 connect to 41 during high-speed running of controller via external expansion relay.
Aux. output 3	19&41	Setting to pulse raise speed control, normally open output. Making 19 connect with 41 for 0.1s during high-speed warming of controller via external

Terminals of controller	OEM connector of engine	Remark
		expansion relay.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	1	Using impedance 120Ω connecting line.
CAN(L)	21	Using impedance 120Ω connecting line.

Engine type: Common J1939.

13.8 DETROIT DIESEL DDEC III / IV

Table 26 Engine CAN Port

Terminals of controller	CAN port of engine	Remark
Aux. output 1	Expand 30A relay, battery voltage is supplied by relay.	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect to starter coil directly.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	CAN(H)	Using impedance 120Ω connecting line.
CAN(L)	CAN(L)	Using impedance 120Ω connecting line.

Engine type: common J1939.

13.9 DEUTZ EMR2

Table 27 F Connector

Terminals of controller	F connector	Remark
Aux. output 1	Expand 30A relay, battery voltage is supplied by relay. Fuse is 16A.	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect to starter coil directly.
-	1	Connect to battery negative pole.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	12	Using impedance 120Ω connecting line.
CAN(L)	13	Using impedance 120Ω connecting line.

Engine type: Volvo EDC4.

13.10 JOHN DEERE

Table 28 21 Pins Connector

Terminals of controller	21 pins connector	Remark
Aux. output 1	G, J	Set aux. output 1 as "Fuel Output".
Starting relay output	D	
CAN_SCR	-	CAN communication shielding line.
CAN(H)	V	Using impedance 120Ω connecting line.
CAN(L)	U	Using impedance 120Ω connecting line.

Engine type: John Deere.

13.11 MTU MDEC

Suitable for MTU engines, 2000 series, 4000 series.

Table 29 X1 Connector

Terminals of controller	X1 connector	Remark
Programmable output 1	BE1	Set programmable output 1 as "Fuel Output".
Starting relay output	BE9	
CAN_SCR	E	CAN communication shielding line (connect to one terminal only).
CAN(H)	G	Using impedance 120Ω connecting line.
CAN(L)	F	Using impedance 120Ω connecting line.

Engine type: MTU-MDEC.

13.12 MTU ADEC (SMART MODULE)

It is suitable for MTU engine with ADEC (ECU8) and SMART module.

Table 30 ADEC (X1 port)

Terminals of controller	ADEC (X1 port)	Remark
Aux. output 1	X1 10	Set aux. output 1 as "Fuel Output". X1 Terminal 9 Connected to negative of battery.
Starting relay output	X1 34	X1 Terminal 33 Connected to negative of battery.

Table 31 SMART (X4 port)

Terminals of controller	SMART (X4 port)	Remark
CAN_SCR	X4 3	CAN communication shielding line.
CAN(H)	X4 1	Using impedance 120Ω connecting line.
CAN(L)	X4 2	Using impedance 120Ω connecting line.

Engine type: MTU-ADEC.

13.13 MTU ADEC (SAM MODULE)

It is suitable for MTU engine with ADEC (ECU7) and SAM module.

Table 32 ADEC (X1 port)

Terminals of controller	ADEC (X1 port)	Remark
Aux. output 1	X1 43	Set aux. output 1 as "Fuel Output". X1 Terminal 28 Connected to negative of battery.
Starting relay output	X1 37	X1 Terminal 22 Connected to negative of battery.

Table 33 SAM (X23 port)

Terminals of controller	SAM (X23 port)	Remark
CAN_SCR	X23 3	CAN communication shielding line.
CAN(H)	X23 2	Using impedance 120Ω connecting line.
CAN(L)	X23 1	Using impedance 120Ω connecting line.

Engine type: Common J1939.

13.14 PERKINS

It is suitable for ADEM3/ADEM4 engine control mode. Engine type is 2306, 2506, 1106, and 2806.

Table 34 Connector

Terminals of controller	Connector	Remark
Aux. output 1	1, 10, 15, 33, 34	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect to starter coil directly.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	31	Using impedance 120Ω connecting line.
CAN(L)	32	Using impedance 120Ω connecting line.

Engine type: Perkins.

13.15 SCANIA

It is suitable for S6 engine control mode. Engine type is DC9, DC12, and DC16.

Table 35 B1 Connector

Terminals of controller	B1 connector	Remark
Aux. output 1	3	Set aux. output 1 as "Fuel Output".
Starting relay output	-	Connect to starter coil directly.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	9	Using impedance 120Ω connecting line.
CAN(L)	10	Using impedance 120Ω connecting line.

Engine type: Scania.

13.16 VOLVO EDC3

Suitable engine control model is TAD1240, TAD1241, and TAD1242.

Table 36 "Stand alone" Connector

Terminals of controller	"Stand alone" connector	Remark
Aux. output 1	H	Set aux. output 1 as "Fuel Output".
Starting relay output	E	
Aux. output 2	P	ECU power; Set aux. output 2 as "ECU power".

Table 37 “Data bus” Connector

Terminals of controller	“Data bus” connector	Remark
CAN_SCR	-	CAN communication shielding line.
CAN(H)	1	Using impedance 120Ω connecting line.
CAN(L)	2	Using impedance 120Ω connecting line.

Engine type: Volvo.

▲NOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

13.17 VOLVO EDC4

Suitable engine types are TD520, TAD520 (optional), TD720, TAD720 (optional), TAD721, TAD722, and TAD732.

Table 38 Connector

Terminals of controller	Connector	Remark
Aux. output 1	Expanded 30A relay, and relay offers battery voltage to terminal 14. Fuse is 16A.	Set aux. output 1 as “Fuel Output”.
Starting relay output	-	Connect to starter coil directly.
	1	Connected to negative of battery.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	12	Using impedance 120Ω connecting line.
CAN(L)	13	Using impedance 120Ω connecting line.

Engine type: Volvo EDC4.

13.18 VOLVO-EMS2

Volvo Engine types are TAD734, TAD940, TAD941, TAD1640, TAD1641, and TAD1642.

Table 39 Engine CAN Port

Terminals of controller	Engine’s CAN port	Remark
Aux. output 1	6	ECU stop; Set aux. output 1 as “ECU stop”.
Aux. output 2	5	ECU power; Set aux. output 2 as “ECU power”.
	3	Negative power.
	4	Positive power.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	1(Hi)	Using impedance 120Ω connecting line.
CAN(L)	2(Lo)	Using impedance 120Ω connecting line.

Engine type: Volvo-EMS2.

▲NOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

13.19 YUCHAI

It is suitable for Yuchai BOSCH common rail electronic-controlled engine.

Table 40 Engine 42 Pins Port

Terminals of controller	Engine 42 pins port	Remark
Aux. output 1	1.40	Set aux. output 1 as "Fuel Output"; Connect to engine ignition lock.
Starting relay output	-	Connect to starter coil directly.
CAN_SCR	-	CAN communication shielding line.
CAN(H)	1.35	Using impedance 120Ω connecting line.
CAN(L)	1.34	Using impedance 120Ω connecting line.

Table 41 Engine 2 Pins Port

Battery	Engine 2 pins port	Remark
Battery negative	1	Wire diameter 2.5mm ² .
Battery positive	2	Wire diameter 2.5mm ² .

Engine type: BOSCH.

13.20 WEICHAI

It is suitable for Weichai BOSCH common rail electronic-controlled engine.

Table 42 Engine Port

Terminals of controller	Engine port	Remark
Aux. output 1	1.40	Set aux. output 1 as "Fuel Output"; Connect to engine ignition lock.
Starting relay output	1.61	
CAN_SCR	-	CAN communication shielding line.
CAN(H)	1.35	Using impedance 120Ω connecting line.
CAN(L)	1.34	Using impedance 120Ω connecting line.

Engine type: GTSC1.

▲NOTE: If there is any question of connection between controller and ECU communication, please feel free to contact SmartGen service.

Table 43 Fault Finding

Symptoms	Possible Solutions
Controller No Response with Power	Check starting battery; Check connections of controller; Check the DC fuse.
Genset Shutdown	Check if water/cylinder temperature too high; Check alternator voltage; Check the DC fuse.
Controller Emergency Stop	Check if emergency stop button is fitted; Ensure battery positive is connected to the emergency stop input correctly; Check if wire connection is open circuit.
Low Oil Pressure Alarm (After Crank Disconnect)	Check oil pressure sensor and connections.
High Water Temp. Alarm (After Crank Disconnect)	Check water temperature sensor and connections.
Shutdown Alarm During Running	Check switch and connections according to information on LCD. Check aux. inputs.
Crank Disconnect Failure	Check connections of fuel solenoid; Check starting battery; Check speed sensor and its connections; Refer to engine manual.
Starter No Response	Check connections of starter; Check starting battery.
Genset Running while ATS Not Transfer	Check ATS; Check connections between ATS and controller.
RS485 Communication Failure	Check connections; Check if COM port is correct; Check if A and B of RS485 is connected reversely; Check if PC COM port is damaged; 120Ω resistance between RS485's A and B is recommended.
ECU Communication Failure	Check polarity connections between CAN_H and CAN_L; Check engine type settings; Check connections between controller and engine.