

SmartGen

MAKING CONTROL SMARTER

HAT600PT

ATS CONTROLLER

USER MANUAL



郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

SmartGen Registered trademark

No.28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Email: sales@smartgen.cn

Web: www.smartgen.com.cn

www.smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

n Technology reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Note
2024-04-20	1.0	Original release.
2025-03-27	1.1	Modify the figure of controller's back panel.

SmartGen

Table 2 Symbol Illustration

Symbol	Illustration
 NOTE	Implies or indicate operator to operate rightly.
 CAUTION	Indicates wrong operation may lead to impair apparatus.
 HAZARD	Indicates wrong operation may lead to death, critical personal harm or serious property loss.

SmartGen

CONTENT

1 OVERVIEW.....	6
2 PERFORMANCE AND CHARACTERISTICS.....	7
3 SPECIFICATION	8
4 OPERATING.....	9
4.1 OPERATION PANEL	9
4.2 KEY FUNCTION DESCRIPTION.....	10
5 LCD DISPLAY	11
5.1 MAIN SCREEN	11
5.2 STATUS DESCRIPTION	12
5.3 MAIN MENU INTERFACE	15
6 GENSET START/STOP OPERATION.....	15
6.1 START/STOP GENSET IN MANUAL MODE.....	15
6.1.1 START/STOP GENSET ON PANEL	15
6.1.2 REMOTE START/STOP GENSET	15
6.2 START/STOP GENSET IN AUTO MODE.....	16
6.2.1 START CONDITIONS	16
6.2.2 START/STOP OF TWO GENSETS	16
6.2.3 SCHEDULED GEN START	17
6.2.4 SCHEDULE NOT WORK.....	17
7 PARAMETER SETTINGS.....	18
7.1 ILLUSTRATION	18
7.2 PARAMETER CONFIGURATION LIST.....	18
7.3 DIGITAL INPUT PORT FUNCTION DESCRIPTION	25
7.4 DIGITAL OUTPUT PORT FUNCTION DESCRIPTION.....	27
7.5 DEFINED COMBINATION OUTPUT.....	29
8 HISTORICAL RECORDS	30
9 BLACK BOX RECORDS.....	31
10 HARMONIC ANALYSIS	32
11 AUTO RESTORE TIME SETTING	32
12 SWITCH OPERATION	32
12.1 MANUAL SWITCH OPERATION	32
12.2 AUTOMATIC OPERATION IN MAINS ABNORMAL & LOW VOLTAGE EANBLE.....	33
12.2.1 AUTO TRANSFER AUTO RESTORE.....	33
12.2.2 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP ACTIVE)	34
12.2.3 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP INACTIVE).....	35
12.3 AUTOMATIC OPERATION IN MAINS ABNORMAL & LOW VOLTAGE DISALBE.....	35
12.3.1 AUTO TRANSFER AUTO RESTORE.....	36
12.3.2 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP ACTIVE)	37
12.3.3 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP INACTIVE).....	38
12.4 LOCAL MODE RUNNING	38
13 ATS SUPPLY POWER.....	38
13.1 DC SUPPLY.....	38
13.2 AC SUPPLY	38
14 COMMUNICATION CONFIGURATION	40
14.1 ILLUSTRATION	40
14.2 RS485 COMMUNICATION PORT.....	40

14.3 USB COMMUNICATION PORT	40
15 TERMINAL DESCRIPTION	41
15.1 CONTROLLER TERMINAL DESCRIPTION	41
15.2 CONTROLLER POWER SUPPLY DESCRIPTION.....	43
15.2.1 DC SUPPLY	43
15.2.2 RS485 CONNECTION DESCRIPTION	43
16 TYPICAL APPLICATION WIRING DIAGRAM.....	44
17 INSTALLATION	50
18 FAULT FINDING	51

SmartGen

1 OVERVIEW

HAT600PT Dual Power ATS Controller is an intelligent dual-supply transfer module integrating programmable function, automatic measurement, LCD display, and digital communication. It combines digitalization, intelligence and networking. Automatic measurement and control reduces incorrect operation. It is an ideal option for dual power transfer.

HAT600T Dual Power ATS Controller is made by microprocessor as its core, which can accurately detect 2-way-3-phase voltage, make accurate judgment and output passive control switch for occurred abnormal voltages (over/under voltage, loss of phase, over/under frequency). This controller is applicable for Mains-Mains, Mains-Gen, Gen-Gen power supply system and can be used for transfer switch of PC class, CB class, and CC class after full consideration on various ATS (Automatic Transfer System) applications; Meanwhile it realizes synchronous transfer of two power supplies. It has compact structure, advanced circuits, simple wiring and high reliability, and can be widely used in electric power, telecommunications, petroleum, coal, metallurgy, railways, municipal administration, intelligent building, electrical devices, automatic control and testing system etc.

SmartGen

2 PERFORMANCE AND CHARACTERISTICS

- LCD 132x64 pixel with backlight, multiple language display (Simplified Chinese, English, Other), push button operation;
- LED lamp can directly display current ATS close/open status, power status and whether load is power on;
- System type can be set to: Mains (1#) & Mains (2#), Mains (1#) & Generator (2#), Generator (1#) & Mains (2#), Generator (1#) & Generator (2#);
- S1 master, or S2 master can be set; Auto Transfer Auto Recover and Auto Transfer Non Recover are fitted for master power;
- Measure and display 2-way 3 phase voltage, frequency, and phase sequence status;
- Battery voltage (48V) can be collected, when mains is abnormal and low battery voltage enables, the generator will be started to charging for the battery. The upper/lower limit of battery voltage can be set;
- Display the total closing times;
- Wave distortion rate of each phase voltage of S1/S2, and 3-21 odd times harmonic percentage can be measured;
- Display of current power supply time and S1/S2 continuous power supply time is available;
- For energy saving switch, users can wait for and close the switch until PF (close is ready) signal is active;
- Over/under voltage, over/under frequency, loss of phase, reverse phase sequence monitoring functions are fitted;
- Auto/Manual transfer is fitted, so that breaker can be forced to close or open in manual mode;
- With local mode, the controller only displays data parameter when it is active and the switch needs to be transferred by external operations;
- All parameters can be configured on site; password is used to verify in case of non-professionals wrong operation;
- Custom start screen function is fitted;
- Commissioning can be done manually on site to conduct genset start/stop operations;
- Switch re-close and breakout re-close functions are fitted;
- Close output can be set to pulse or continuous output;
- Applicable for switches of PC class two segments, PC class three segments, CB class and CC class;
- 2 circuit N wire isolated design;
- Real time clock display, and event log function, which can record 200 data circularly;
- Black box function, which can record 5 sets of events of ATS transfer, and 60 detailed data of 50s before one set occurs and 10s after the event;
- Scheduled run/not run function for genset, run for once, run monthly or weekly, and run on load or unload can also be set;
- Two gensets can be controlled and cycle run, master run, and balanced time run can be realized.
- Wide DC supply range, maximum 80V DC input for transient;
- Wide wire terminal space of AC input, maximum 625V voltage input;
- USB port, provides convenience for on-site debugging, and parameter or software upgrade;
- RS485 isolated communication port, makes the controller has remote control, remote communication, remote measuring, remote debugging functions by ModBus-RTU; it can remote control genset start/stop, ATS close and open;
- Suitable for multiple AC system types (3Ph 4W, 3Ph 3W, Single Phase 2W, 2 Ph 3W);
- Master and backup power supply can be set; ATS can normally work if one circuit is normal;
- Controller uses metal clips to fix;
- Modular structure design, anti-flammable ABS shell, pluggable wire terminal, built-in installation method; structure is compact and installation is easy.

3 SPECIFICATION

Table 3 Performance Parameters

Items	Contents	
Operating Voltage	DC 8.0V~35.0V, continuous power supply; DC reverse connection protection;	
Power Consumption	<4W(Standby mode: <2W)	
AC Voltage Input (PT or PT Secondary is not used.)	3P4W (L-L)	(80~625)V
	3P3W (L-L)	(80~625)V
	2P3W (A-B)	(80~625)V
	1P2W (L-N)	(50~360)V
	Voltage resolution: 1V; Accuracy: 1%	
AC Frequency	Rated: 50/60Hz Range: 15Hz-75Hz Resolution: 0.01Hz Accuracy: 0.1Hz	
S1 Close Relay Output	16A AC250V Volt free output	
S2 Close Relay Output	16A AC250V Volt free output	
Programmable Relay Output 1-2	16A AC250V Volt free output	
Programmable Relay Output 3-6	8A AC250V Volt free output	
S1 Close Signal Input	GND connected (B-) is active, low voltage 1.2VDC, high voltage 60VDC	
S2 Close Signal Input		
Digital Input 1-4		
RS485 Port	Isolated, half-duplex, 2400/4800/9600/19200 baud rate can be set, Modbus-RTU communication protocol, farthest communication distance 1000m	
Design Standard	Meets GB/T14048.11-2016 & IEC/EN 60947-6-1	
Safety Requirements	According to EN61010-1 installation type (overvoltage) III, 300V, pollution class 2, altitude 3000m	
Dimensions	198mmx154mmx54mm	
Panel Cutout	186mmx141mm	
Operating Temperature	(-25~+70)°C	
Operating Humidity	(20~93)%RH	
Storage Temperature	(-30~+80)°C	
Protection Rank	Front Panel: IP65, when waterproof gasket is installed between controller and control panel; Back Panel: IP20;	
Insulation Strength	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal and the leakage current is not more than 3mA within 1min.	
Weight	0.7kg	

4 OPERATING

4.1 OPERATION PANEL

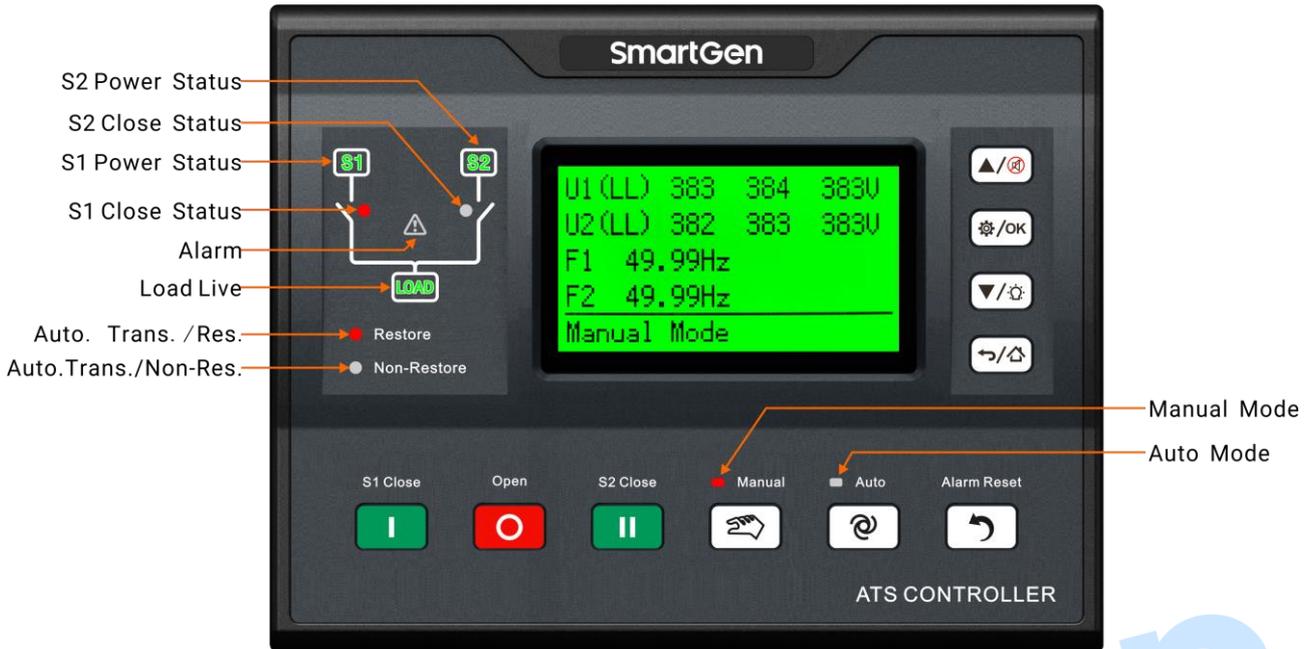


Fig. 2 Front Panel

Table 4 Indicator Description

Indicator	Indicator Description
S1 Power Status Indicator	Lamp On: S1 Power normal; Lamp Flashing: S1 Power abnormal (under/over voltage, under/over frequency, loss of phase, reverse phase sequence); Lamp Off: S1 Power none voltage;
S1 Close Status Indicator	Lamp On: S1 close auxiliary status input is active;
S2 Power Status Indicator	Lamp On: S2 Power normal; Lamp Flashing: S2 Power abnormal (under/over voltage, under/over frequency, loss of phase, reverse phase sequence); Lamp Off: S2 Power none voltage;
S2 Close Status Indicator	Lamp On: S2 close auxiliary status input is active;
Alarm Indicator	Lamp Slow Flashing: flashes when warning alarm occurs (1 time for 1 second); Lamp Fast Flashing: flashes when fault alarm occurs (5 times for 1 second);
Load Live Indicator	Lamp On: S1 close signal input is active, or S2 close signal input is active.
Auto Trans./Auto Res.	Lamp On: Current status is Auto Transfer/Auto Restore.
Auto Trans./Non-Res.	Lamp On: Current status is Auto Transfer/Non Restore.
Manual Mode Indicator	Lamp On: Current mode is Manual mode.
Auto Mode Indicator	Lamp On: Current mode is Auto mode.

4.2 KEY FUNCTION DESCRIPTION

Table 5 Button Description

Icon	Button	Description
	S1 Close Key	Active in manual mode; Press and S1 close outputs, S1 connects to load.
	Open Key	Active in manual mode; Press and load is disconnected.
	S2 Close Key	Active in manual mode; Press and S2 close outputs, S2 connects to load.
	Manual Mode Key	Press and set controller to manual mode.
	Auto Mode Key	Press and set controller to auto mode.
	Alarm Reset Key	Press and enter alarm page; press again to remove fault alarms.
	Up/Mute Key	In main page, press to scroll up screen; After entering menu page, move up cursor or increase the value where the cursor is; Press longer and it can mute alarms.
	Set/Confirm Key	In main page, press to enter menu page. After entering menu page, confirm key can move cursor and confirm the set information.
	Down/Lamp Test Key	In main page, press to scroll down screen; After entering menu page, move down cursor or decrease the value where the cursor is; In main page, pressing longer is lamp test; At lamp test, LCD backlight is on, LCD display is back, and all LEDs on the panel are illuminated.
	Return/Home Key	Press to return to the previous menu in parameter page while it returns to the first page in main screen; Press longer and it immediately returns to the first page of controller main screen.

5 LCD DISPLAY

5.1 MAIN SCREEN

Table 6 Main Screen Display

Display Contents	Display Description
<pre> U1(LL) 380 380 380 V U2(LL) 380 380 380 V F1 50.0Hz [] 48.0V F2 50.0Hz Manual Mode </pre>	<p>S1 Line Voltage (L1-L2, L2-L3, L3-L1) S2 Line Voltage (L1-L2, L2-L3, L3-L1) S1 Frequency and Battery Pack Voltage S2 Frequency Current mode, alarm status, indication information, other status information</p>
<pre> U1(LN) 220 220 220 V U2(LN) 220 220 220 V S1 Phase L1 - L2 - L3 S2 Phase L1 - L2 - L3 Electricity ----- </pre>	<p>S1 Phase Voltage (L1, L2, L3) S2 Phase Voltage (L1, L2, L3) S1 Phase Sequence S2 Phase Sequence Current page content and position, alarm status, indication information, and action countdown.</p>
<pre> RS485 [] USB [] 2024-4-17(3) 09:36:30 Comm. ----- </pre>	<p>RS485 Communication Status USB Communication Status Real Time Clock Current page content and position, alarm status, indication information and action countdown.</p>
<pre> Cont. Power Supply Time 3:25:18 Last Cont. Power Supply 8:15:32 Total ----- </pre>	<p>Continuous Supply Time Hour: Minute: Second Continuous Supply Time (Last Time) Hour: Minute: Second Current page content and position, alarm status, indication information and action countdown.</p>
<pre> S1 Total Supply Time 3:25:18 S2 Total Power Supply 8:15:32 Total ----- </pre>	<p>S1 Accumulated Supply Time Hour: Minute: Second S2 Accumulated Supply Time Hour: Minute: Second Current page content and position, alarm status, indication information and action countdown.</p>
<pre> S1 Total Close Num 8 S2 Total Close Num 10 Total ----- </pre>	<p>S1 Accumulated Close Times S2 Accumulated Close Times Current page content and position, alarm status, indication information and action countdown.</p>
<pre> S1 Available S2 Available S1 On Load Genset Standby Status ----- </pre>	<p>S1 Voltage Status S2 Voltage Status Switch Status Genset Status Current page content and position, alarm status, indication information and action countdown.</p>

Display Contents	Display Description
<p>Alarms 01/05</p> <p>Warn Alarm</p> <p>Sync Failure</p> <p>Fault Alarm</p> <p>S2 Close Failure</p>	<p>Alarm Serial No. and Alarm Number</p> <p>Alarm Type (Warning Alarm, Fault Alarm)</p> <p>Alarm Event</p> <p>Alarm Type (Warning Alarm, Fault Alarm)</p> <p>Alarm Event</p>

5.2 STATUS DESCRIPTION

Table 7 S1 Power Status

No.	Status Name	Description
1	S1 Normal Identify	S1 normal identification delay
2	S1 Abnormal Identify	S1 abnormal identification delay
3	S1 Voltage Normal	Power value is within the specified range.
4	S1 Voltage None	Voltage is 0.
5	S1 Voltage High	Voltage is above the pre-set upper value.
6	S1 Voltage Low	Voltage is below the pre-set lower value.
7	S1 Frequency High	Frequency is above the pre-set upper value.
8	S1 Frequency Low	Frequency is below the pre-set lower value.
9	S1 Loss of Phase	Loss of one or two phase among A, B, C.
10	S1 Reverse Phase Sequence	Wrong phase sequence A-B-C.

Table 8 S2 Power Status

No.	Status Name	Description
1	S2 Normal Identify	S2 normal identification delay
2	S2 Abnormal Identify	S2 abnormal identification delay
3	S2 Voltage Normal	Power value is within the specified range.
4	S2 Voltage None	Voltage is 0.
5	S2 Voltage High	Voltage is above the pre-set upper value.
6	S2 Voltage Low	Voltage is below the pre-set lower value.
7	S2 Frequency High	Frequency is above the pre-set upper value.
8	S2 Frequency Low	Frequency is below the pre-set lower value.
9	S2 Loss of Phase	Loss of one or two phase among A, B, C.
10	S2 Reverse Phase Sequence	Wrong phase sequence A-B-C.

Table 9 Genset Status

No.	Status Name	Description
1	Start Delay	Delay time before genset start.
2	Stop Delay	Delay time before genset stop.
3	Scheduled Not Start	Display Scheduled Not Start lasting time when it is active.
4	Scheduled Start	Display Scheduled Start lasting time when it is active.
5	S1 Cycle Start	S1 Cycle Start finishing countdown when it is active.
6	S2 Cycle Start	S2 Cycle Start finishing countdown when it is active.
7	S1 Genset Start	Only active when system is "S1 Gen S2 Gen".
8	S2 Genset Start	Only active when system is "S1 Gen S2 Gen".
9	Genset Start	Genset start signal outputs.
10	Genset Standby	None genset signal outputs.
11	Battery Charging Time	Display the countdown when the charging time remains 5 minutes.

Table 10 Switch Status

No.	Status Name	Description
1	Ready to Transfer	Enter switch transfer process;
2	S1 Closing	S1 closing delay is in progress;
3	S1 Opening	S1 opening delay is in progress;
4	S2 Closing	S2 closing delay is in progress;
5	S2 Opening	S2 opening delay is in progress;
6	Transfer Rest	Interval time between switch transfers;
7	Closing S1 Again	It is the second closing time when the first S1 opening is not successful;
8	Opening S1 Again	It is the second opening time when the first S1 closing is not successful;
9	Closing S2 Again	It is the second closing time when the first S2 opening is not successful;
10	Closing S2 Again	It is the second opening time when the first S2 closing is not successful;
11	Waiting S1 PF	S1 is waiting for input setting (S1 gets ready/PF) is active before S1 closes;
12	Waiting S2 PF	S2 is waiting for input setting (S2 gets ready/PF) is active before S2 closes;
13	Elevator Delay	Delay time before switch transfer, elevator control outputs;
14	S1 On Load	S1 was already closed and S1 is taking load;
15	S2 On Load	S2 was already closed and S2 is taking load;
16	Offload	Switch was already opened and load is disconnected.

When controller detects warning alarm, warning alarm is active, alarm indicator will flash slowly (1 time 1 second); after warning is recovered, alarm indicator will extinguish. Warning alarm is not latched.

Table 11 Warning Alarms

No.	Status Name	Description
1	Forced Open Warn	It alarms when the forced open (Non-firefighting cutoff input) action is warning, and the forced open input is active;
2	Battery Under Volt	Battery voltage is lower than the set limit value;
3	Battery Over Volt	Battery voltage is higher than the set limit value;
4	Switch Output Voltage Abnormal	Input port is configured to "Output Voltage Abnormal Warn", and when the input is active, warning occurs.
5	Busbar Voltage Abnormal	Input port is configured to "Busbar Voltage Abnormal Warn", and when the input is active, warning occurs.

When controller detects fault alarm, fault alarm is active, alarm indicator will flash fast (5 time per second); Fault alarm is latched and it can be removed until reset it manually.

Table 12 Fault Alarms

No.	Status Name	Description
1	S1 Failed to Close	S1 fails to close when it closes in auto mode;
2	S1 Failed to Open	S1 fails to open when it opens in auto mode;
3	S2 Failed to Close	S2 fails to close when it closes in auto mode;
4	S2 Failed to Open	S2 fails to open when it opens in auto mode;
5	Forced Open Fault	It alarms when the forced open (Non-firefighting cutoff input) action is fault, and the forced open input is active;
6	S1 Genset Fault	S1 cannot start normally when system is S1-Gen S2-Gen;
7	S2 Genset Fault	S2 cannot start normally when system is S1-Gen S2-Gen;
8	Breaker Trip Alarm	Breaker trip alarm input is active.
9	S1/S2 Close At the same time	It alarms when S1 close signal input and S2 close signal input are active at the same time for over 300ms;
10	Switch Output Voltage Abnormal	Input is configured to "Output Voltage Abnormal Fault", and when input is active, fault alarms.

When indication information is active, it disappears after it displays for 2s.

Table 13 Indication Information

No.	Status Name	Description
1	Please reset the alarm	Reminder information for switching to auto mode manually before alarm is removed when fault alarm occurs;
2	S1 was already closed	In manual mode, the indication information for pressing S2 close key when S1 has been closed;
3	S2 was already closed	In manual mode, the indication information for pressing S1 close key when and S2 has been closed;
4	Panel Button Latched	When "panel button latched" input is active, it is the reminder information for pressing panel button (Auto key, Manual key, S1 Close key, S2 Close key, Open key, Alarm Reset key).

Table 14 Other Status Information

No.	Status Name	Description
1	Start Inhibit	Genset start inhibition input is active;
2	Transfer Inhibit Input	In auto mode, it is active and ATS will no longer transfer.
3	S1 Load Inhibit	S1 close inhibition input is active;
4	S2 Load Inhibit	S2 close inhibition input is active;
5	Remote Gen On Load	Remote start with load input is active;
6	Remote Gen Off Load	Remote start without load input is active;
7	Mains Abnormal Gen Start	Genset starts when mains is abnormal;
8	Genset Start	Active when genset starts;
9	Auto Mode	Current status is Auto mode;
10	Manual Mode	Current status is Manual mode.
11	Local Mode	Current status is Local Mode.

5.3 MAIN MENU INTERFACE

In the main screen, press  key and it can enter the main menu interface.

<ol style="list-style-type: none"> 1. Configuration 2. History Records 3. Black Box Records 4. Harmonics Analysis 5. Auto Trans./Restore <ol style="list-style-type: none"> 6. Auto Trans./Restore 7. Start/Stop Genset 8. Language 9. Module Info 10. About 	<p>Press  and  to select different parameter line (backlight), and then press  to enter related display screen.</p>
---	--

NOTE: Input password to enter parameter settings; default password "01234"; operator can change the password to prevent others changing controller configurations randomly. After change please remember clearly; If it is forgotten, please contact company personnel.

6 GENSET START/STOP OPERATION

6.1 START/STOP GENSET IN MANUAL MODE

6.1.1 START/STOP GENSET ON PANEL

In main menu interface, select "6. Start/Stop Genset", and enter genset start operation manually.

When system type is "S1 Mains S2 Gen", "S1 Gen S2 Mains", "S1 Mains S2 Mains", start/stop genset manually.

Menu interface is as below.

<ol style="list-style-type: none"> 1. Return 2. Genset Stop 3. Genset Start 	<p>Press Up/Down key to select different parameter line (backlight), and press Confirm key to confirm.</p>
--	--

Genset Stop: Disconnect the outputted genset start signal, which is to control genset stop. Genset Stop: Disconnect the outputted genset start signal, which is to control genset stop.

Genset Start: Control genset start signal output, which is to control genset start.

For system "S1 Gen S2 Gen", manual genset start/stop menu interface is as below.

<ol style="list-style-type: none"> 1. Return 2. S1 Genset Stop 3. S1 Genset Start 4. S2 Genset Stop 5. S2 Genset Start 	<p>Press Up/Down key to select different parameter line (backlight), and press Confirm key to confirm.</p>
---	--

S1 Genset Stop: Disconnect the outputted S1 genset start signal, which is to control S1 genset stop.

S1 Genset Start: Control S1 genset start signal output, which is to control S1 genset start.

S2 Genset Stop: Disconnect the outputted S2 genset start signal, which is to control S2 genset stop.

S2 Genset Start: Control S2 genset start signal output, which is to control S2 genset start.

6.1.2 REMOTE START/STOP GENSET

Send remote start/stop commands by RS485 port (Modbus-RTU protocol control).

Remote Stop: Disconnect the outputted genset start signal, which is to control genset stop.

Remote Start: Control genset start signal output, which is to control genset start.

6.2 START/STOP GENSET IN AUTO MODE

6.2.1 START CONDITIONS

– Input Port Start

Configure "Remote Start On Load" or "Remote Start Off Load", they cannot be set at the same time.

Remote Start On Load: Genset start outputs, when generating is OK, gen closes; when it is inactive, genset start output signal is disconnected.

Remote Start Off Load: Genset start outputs, when mains is OK, mains closes; when it is inactive, genset start output signal is disconnected.

– Mains Abnormal Start

When mains is abnormal and low battery voltage disables, genset start outputs; when generating is OK, gen closes.

– Mains Abnormal Low Battery Voltage Start

When mains is abnormal and low battery voltage enables, genset start outputs, when generating is OK, gen closes; mains is normal and mains closes, genset stops; when battery voltage is over than the upper limit, genset stops; when charging time reaches the completion time and the battery voltage is over than the lower limit, genset stops.

6.2.2 START/STOP OF TWO GENSETS

System type is "S1-Gen S2-Gen", and input port settings are as below.

Set programmable input port to "Remote Start On Load", or "Remote Start Off Load", and they cannot be set at the same time.

Remote Start On Load: According to start method, judge S1 or S2 start output; when generating is OK, gen closes;

Remote Start Off Load: According to start method, judge S1 or S2 start output; after gensets are started, both gen S1 and S2 don't close.

Start method of two gensets: Cycle Gen Start Mode, Master-Slave Gen Mode, Balance Gen Hours Mode, Not Used.

– Cycle Gen Start

When remote start is active, S1 and S2 will start according to cycle running time. For the first start, controller selects S1 or S2 start based on master status; for example, if S1 is master, then S1 starts first. then countdown starts based on the pre-set S1 cycle running time, and at the same time genset fault identification countdown is initiated. Before the end of fault identification countdown if S1 generating is normal, S1 takes the load as soon as it is normal. After the end of S1 cycle running countdown, S2 starts and S2 cycle running countdown is initiated; at the same time genset fault identification countdown starts; Before the end of fault identification countdown, if S2 generating is OK, it will take the load as soon as it is normal. S1 stops. It goes in this way until remote start is inactive.

In the process of genset start, if genset fault (power supply delay overtime or genset fault input is active), failed to close, load inhibit, occurs, controller will immediately stop the current started genset, and start the other genset.

During the process of cycle running, if it transfers to manual mode, it will keep the current status, and stop the cycle running timing.

– Master-Slave Gen Mode

When remote start is active, master genset starts. In the process of genset start, when genset fault (genset supply delay overtime, or genset fault input), failed to close, load inhibit, occurs, controller will immediately stop the current started genset, and start the other genset. Otherwise master genset continues starting until remote start is inactive.

– Balanced Running Start

When remote start is active, the short accumulated running unit starts, when the current unit fault during the starting process (Gen supply delay or fault input), close failure, inhibit on load, try to stop the current running unit and start another unit, otherwise the current unit will continue to start running until the remote start is inactive.

The following conditions are required to do genset start/stop when system type is "S1-Gen S2-Gen".

- 1) Active in auto mode;
- 2) System type is set to "S1-Gen S2-Gen";
- 3) Output port shall be set to "S1 Genset Working" and "S2 Genset Working";
- 4) Input port shall be set to "S1 Genset Fault Input", "S2 Genset Fault Input", and "Remote Start On Load" or "Remote Start Off Load";
- 5) "Gen-Gen Start Mode" shall be set;
- 6) "Genset Available Time" shall be programmed; if start method is Cycle Start, "S1 Cycle Work Time" and "S2 Cycle Work Time" shall be set.

"S1 Genset Fault Input" and "S2 Genset Fault Input" in the input ports are alternate configurations. Users can also judge whether there is genset fault by "Genset Available Time", without connecting genset status in the input port.

When S1 Gen S2 Gen start method is set to None, there will not any genset start signal output.

For example:

Table 15 Start Example Illustration

System Type	Start Conditions	Start Result
S1 Gen S2 Gen	Input port is active. (Remote Start On Load/Remote Start Off Load)	S1 genset start outputs.
	Master set is set to: S1 Master	

6.2.3 SCHEDULED GEN START

When "Schedule Gen Enable" function is enabled, users can set scheduled gen start time. Controller will issue start signal when the time is up. When scheduled start lasting time is over, start signal is disconnected. Scheduled Run On Load or Off Load can be set.

Scheduled Start On Load: genset start outputs, and when generating is OK, gen closes;

Scheduled Start Off Load: genset start outputs, and when mains is OK, mains close.

Scheduled Start cycle time can be set to start monthly, weekly, or daily.

Schedule Monthly: which month to start, start date and time can be set.

Schedule Weekly: start at the same time for multiple days in a week can be set. For example: Set it from Monday to Friday, start at 8:00 and last 10 hours.

Schedule Daily: start at the same time for each day can be set.

6.2.4 SCHEDULE NOT WORK

After Schedule Not Work function is enabled, users can set scheduled not work time. Controller will disconnect start signal when the scheduled time is due. Start signal is prohibited before the end of Scheduled Not Work lasting time.

Scheduled Not Work cycle time can be set to Not Run Monthly, Weekly, Daily, three methods.

Scheduled Not Work Monthly: Which month to not run can be set, so do not run date and time;

Scheduled Not Work Weekly: Not run for multiple days in a week can be set; For example: Set it from Monday to Friday, not run at 19:00 every day, lasting for 12 hours;

Scheduled Not Work Daily: Not run at the same time every day can be set.

NOTE: Schedule Not Work is prior to Schedule Start Operation.

7 PARAMETER SETTINGS

7.1 ILLUSTRATION

In the first page of the main screen, press  key and enter menu page. Select "1. Configuration", and press  to confirm, so it enters parameter setting password interface. Input correct password to enter parameter main screen. If password is wrong, it directly returns back to main screen. Default factory password: 01234. In parameter configuration screen, press  key to return to the previous directory.

7.2 PARAMETER CONFIGURATION LIST

Table 16 Parameter Setting Items

No.	Item	Range	Default	Description
AC Settings				
1	S1 Available Delay	(0-3600)s	10	The check time for S1 from abnormal to normal;
2	S1 Unavailable Delay	(0-3600)s	5	The check time for S1 from normal to abnormal;
3	S2 Available Delay	(0-3600)s	10	The check time for S2 from abnormal to normal;
4	S2 Unavailable Delay	(0-3600)s	5	The check time for S2 from normal to abnormal;
5	Master-Slave Set	(0~1)	0	0: S1 Master 1: S2 Master
6	System Type Set	(0~3)	0	0: S1 Mains S2 Gen 1: S1 Gen S2 Mains 2: S1 Mains S2 Mains 3: S1 Gen S2 Gen
7	AC System	(0-3)	0	0: 3-Phase 4-Wire 1: 3-Phase 3-Wire 2: 2-Phase 3-Wire 3: Single Phase 2-Wire
8	PT Fitted	(0~1)	0	0: Disable 1: Enable
9	PT Primary Voltage	(30~35000)V	100	Primary voltage of AC PT ratio;
10	PT Secondary Voltage	(30~1000)V	100	Secondary voltage of AC PT ratio;
11	Rated Voltage	(0-35000)V	220	Rated voltage of AC system;
12	Over Volt Set	(0~1)	1	0: Disable 1: Enable
13	Set Value	(0-200)%	120	Upper limit value of voltage; it is abnormal if the value has exceeded the set value.
14	Return Value	(0-200)%	115	Upper limit return value of voltage; it is normal only when the value has fallen below the set value.
15	Under Volt Set	(0~1)	1	0: Disable 1: Enable
16	Set Value	(0-200)%	80	Lower limit value of voltage; it is abnormal if the value has fallen below the set value.
17	Return Value	(0-200)%	85	Lower limit return value of voltage; it is normal only when the value has exceeded the set value.
18	Rated Frequency	(10.0-75.0)Hz	50.0	Rated frequency of AC system

No.	Item	Range	Default	Description
19	Over Frequency Set	(0-1)	1	0: Disable 1: Enable
20	Set Value	(0-200)%	110	Upper limit value of frequency; it is abnormal if the value has exceeded the set value.
21	Return Value	(0- 200)%	104	Upper limit return value of frequency; it is normal only when the value has fallen below the set value.
22	Under Frequency Set	(0-1)	1	0: Disable 1: Enable
23	Set Value	(0- 200)%	90	Lower limit value of frequency; it is abnormal if the value has fallen below the set value.
24	Return Value	(0- 200)%	96	Lower limit return value of frequency; it is normal only when the value has exceeded the set value.
25	Phase Sequence Wrong	(0-1)	1	0: Disable 1: Enable
Switch Settings				
1	ATS Power Type	(0~1)	1	0: DC Power Supply 1: AC Power Supply
2	ATS Power Low Point	(0~200)%	70	Min. AC supply voltage for switch; if it is lower than this value, then switch cannot be transferred;
3	ATS Power High Point	(0~400)%	130	Max. AC supply voltage for switch; if it is higher than this value, then switch cannot be transferred;
4	Definite C/O Time	(0~1)	0	0: Disable 1: Enable Disable: Detect output time according to close status when close/open pulse outputs; longest time is the set time; Enable: close/open pulse output time is the set close/open time;
5	Close Time	(0.1~20.0)s	5.0	Outputted pulse time of close relay;
6	Open Time	(0.1~20.0)s	5.0	Outputted pulse time of open relay;
7	Transfer Time	(0~9999)s	1	Delay time from S1 open to S2 close; or from S2 open to S1 close;
8	Again Close Time	(0-20.0)s	1.0	If the first switch open is not successful, then the second close starts and again close delay starts; when the delay is over, then the second open starts; if the open cannot be conducted, then open failure alarm signal shall be sent out;
9	Again Open Time	(0-20.0)s	1.0	If the first switch close is not successful, then the second open starts and again open delay starts; when the delay is over, then the second close starts; if the close cannot be conducted, then close failure alarm signal shall be sent out;
10	Switch Type	(0~2)	0	0: CB/CC (S1 Open and S2 Open control is needed.) 1: PC Three-stage (For PC switch with neutral, S1 open control is needed.) 2: PC Two-stage (For PC switch

No.	Item	Range	Default	Description
				without neutral)
11	Forced Open Action	(0-1)	0	0: Warn Alarm 1: Fault Alarm
12	Continually Close	(0~1)	0	0: Disable 1: Enable It needs to be enabled when close control is continuous signal and close/open time is inactive at this time;
13	Load SW Transfer Time	(0-9999)s	1	Load switch outputs of 4 circuits are configured by output ports; time interval for each switch output;
14	Load SW Close Time	(0-20)s	5.0	Output time for load switch; when it is set 0, load switch output is continuous output;
15	No Opening Transfer Enabled	(0~1)	0	0: Disable 1: Enable When it enables, the controller will transfer from S1 to S2, and there is no opening control output during the transferring process.
16	S1 PF Input Delay	(0~20.0)s	0	In Auto mode, when S1 ready input is active, S1 PF input delay is over, the switch close/open logic will be executed.
17	S2 PF Input Delay	(0~20.0) s	0	In Auto mode, when S1 ready input is active, S1 PF input delay is over, the switch close/open logic will be executed.
Genset Settings				
1	Genset Start Delay	(0~9999)s	1	When genset prepares to start, delay starts, and when the delay is over, genset starting signal is sent out;
2	Genset Stop Delay	(0~9999)s	5	When genset prepares to stop, delay starts, and when the delay is over, genset starting signal is disconnected;
3	Gen-Gen Start Mode	(0~3)	0	0: Cycle Gens 1: Master-Slave Gens 2: Balance Gens Hours 3: Not Used
4	S1 Cycle Work Time	(0~9999)min	720	The running time of S1 at the mode of Cycle Gens;
5	S2 Cycle Work Time	(0~9999)min	720	The running time of S2 at the mode of Cycle Gens;
6	Genset Available Time	(0~9999)s	120	Time from issuing genset start signal to gen voltage is normal; if delay is over and gen voltage is still abnormal, then genset fault alarm is initiated;
7	Battery Volt Enable	(0~1)	1	0: Disable 1: Enable
8	Battery Under Volt Warn Enable	(0~1)	1	0: Disable 1: Enable
9	Battery Under Volt Warn	(0~100.0)V	45.0	It occurs when battery voltage is lower than the set value;
10	Battery Under Volt Return	(0~100.0)V	46.0	When battery voltage is higher than the set return value, warning is removed;

No.	Item	Range	Default	Description
11	Battery Under Volt Delay	(0-3600)s	2	Delay time for battery volt lower than the warning limit; after delay the under volt warning occurs;
12	Battery Over Volt Warn Enable	(0~1)	1	0: Disable 1: Enable
13	Battery Over Volt Warn	(0~100.0)V	59.0	It occurs when the battery voltage is higher than the set value;
14	Battery Over Volt Return	(0~100.0)V	58.0	It shall be removed if the battery voltage is lower than the set value;
15	Battery Over Volt Delay	(0-3600)s	2	Delay time for battery volt higher than the warning limit, when the delay is over, over volt warning occurs.
16	Mains Abnormal Battery Volt Low	(0~1)	1	0: Disable 1: Enable
17	Battery Volt High	(0~100.0)V	58.0	The voltage when batter charging is finished.
18	Battery Volt Low	(0~100.0)V	46.0	Battery under voltage threshold value, when battery voltage is lower than this value, the generator is allowed to start.
19	Charging Completion Time	(1-6000)Min	720	The max. battery charging time at a time.
Scheduled Start/Stop Settings				
1	Schedule Gen Enable	(0~1)	0	0: Disable 1: Enable
2	Schedule Load	(0~1)	0	0: Off Load 1: On Load
3	Schedule Period	(0~2)	0	0: Monthly 1: Weekly 2: Daily
4	Schedule Monthly	(1~4095)	4095	Bit0: January Bit1: February Bit2: March Bit3: April Bit4: May Bit5: June Bit6: July Bit7: August Bit8: September Bit9: October Bit10: November Bit11: December
5	Schedule Date	(1~31)	1	Date of genset start in every month;
6	Schedule Weekly	(1~127)	1	Bit0: Sunday Bit1: Monday Bit2: Tuesday Bit3: Wednesday Bit4: Thursday Bit5: Friday Bit6: Saturday
7	Schedule Hours	(0~23)h	0	Scheduled start time;
8	Schedule Minutes	(0~59)min	0	
9	Schedule Work Time	(0~30000)min	30	The lasting time for scheduled start running;
10	Gen Inhibit Work	(0~1)	0	0: Disable 1: Enable

No.	Item	Range	Default	Description
11	Inhibit Period	(0~2)	0	0: Monthly 1: Weekly 2: Daily
12	Inhibit Monthly	(1~4095)	4095	Bit0: January Bit1: February Bit2: March Bit3: April Bit4: May Bit5: June Bit6: July Bit7: August Bit8: September Bit9: October Bit10: November Bit11: December
13	Inhibit Date	(1~31)	1	Date of not start in every month;
14	Inhibit Weekly	(1~127)	1	Bit0: Sunday Bit1: Monday Bit2: Tuesday Bit3: Wednesday Bit4: Thursday Bit5: Friday Bit6: Saturday
15	Inhibit Hours	(0~23) h	0	Time for scheduled non-start;
16	Inhibit Minutes	(0~59) min	0	
17	Inhibit Rest Time	(0~30000) min	30	The lasting time for scheduled non-start;
Load Settings				
13	Elevator Enable	(0~1)	0	0: Disable 1: Enable
14	Elevator Delay	(0~300)s	300	Delay time for load power off or before switch transfer; used to control the running elevator stop at the nearest level until switch transfer is finished;
Digital Input Settings				
1	Digital Input 1	(0~39)	1	Forced Open
2	Active Type	(0~1)	0	0: Close to activate; 1: Open to activate
3	Digital Input 2	(0~39)	8	Switch trip input
4	Active Type	(0~1)	0	0: Close to activate; 1: Open to activate
5	Digital Input 3	(0~39)	0	Not Used
6	Active Type	(0~1)	0	0: Close to activate; 1: Open to activate
7	Digital Input 4	(0~39)	0	Not Used
8	Active Type	(0~1)	0	0: Close to activate; 1: Open to activate
Digital Output Settings				
1	Digital Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
2	Digital Output 1	(0~92)	49	ATS power L1
3	Digital Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
4	Digital Output 2	(0~92)	52	ATS power N
5	Digital Output 3	(0~1)	0	0: Output (N/O);

No.	Item	Range	Default	Description
	Active Type			1: Output (N/C)
6	Digital Output 3	(0~92)	35	S1 switch open control
7	Digital Output 4 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
8	Digital Output 4	(0~92)	37	S2 switch open control
9	Digital Output 5 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
10	Digital Output 5	(0~92)	1	Custom output combination 1
11	Digital Output 6 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
12	Digital Output 6	(0~92)	32	Genset start
13	Combined 1 Or Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
14	Combined 1 Or Output 1 Contents	(0~92)	23	S1 voltage is normal;
15	Combined 1 Or Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
16	Combined 1 Or Output 2 Contents	(0~92)	25	S2 voltage is normal;
17	Combined 1 Or Output Active Type	(0~1)	1	0: Output (N/O); 1: Output (N/C)
18	Combined 1 Or Output Contents	(0~92)	0	Not Used
19	Combined 2 or Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
20	Combined 2 or Output 1 Contents	(0~92)	0	Not Used
21	Combined 2 or Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
22	Combined 2 or Output 2 Contents	(0~92)	0	Not Used
23	Combined 2 or Output Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
24	Combined 2 or Output Contents	(0~92)	0	Not Used
25	Combined 3 or Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
26	Combined 3 or Output 1 Contents	(0~92)	0	Not Used
27	Combined 3 or Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
28	Combined 3 or Output 2 Contents	(0~92)	0	Not Used
29	Combined 3 or Output Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
30	Combined 3 or Output Contents	(0~92)	0	Not Used
31	Combined 4 or Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
32	Combined 4 or Output 1 Contents	(0~92)	0	Not Used
33	Combined 4 or Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
34	Combined 4 or Output 2 Contents	(0~92)	0	Not Used

No.	Item	Range	Default	Description
35	Combined 4 or Output Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
36	Combined 4 or Output Contents	(0~92)	0	Not Used
37	Combined 5 or Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
38	Combined 5 or Output 1 Contents	(0~92)	0	Not Used
39	Combined 5 or Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
40	Combined 5 or Output 2 Contents	(0~92)	0	Not Used
41	Combined 5 or Output Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
42	Combined 5 or Output Contents	(0~92)	0	Not Used
43	Combined 6 or Output 1 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
44	Combined 6 or Output 1 Contents	(0~92)	0	Not Used
45	Combined 6 or Output 2 Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
46	Combined 6 or Output 2 Contents	(0~92)	0	Not Used
47	Combined 6 or Output Active Type	(0~1)	0	0: Output (N/O); 1: Output (N/C)
48	Combined 6 or Output Contents	(0~92)	0	Not Used
Module Settings				
1	Power On Mode	(0~2)	0	0: Last Mode (reserved the mode before power off) 1: Manual 2: Auto
2	Language	(0~2)	0	0: Simplified Chinese 1: English 2: Other (Users can self define module language by PC software; default: English.)
3	Password	(00000~65535)	01234	For entering parameter setting
4	Module Address	(1~254)	1	RS485 communication address
5	Com Baud Rate	(0~3)	2	0: 2400 bps 1: 4800 bps 2: 9600 bps 3: 19200 bps
6	Com Stop Bit	(1~2)	2	1/2 bit can be set;
7	Com Parity	(0~2)	0	0: None 1: Odd Parity 2: Even Parity
8	Communication Set	(0~3)	0	0: Enable COM Adj/Ctrl 1: Disable COM Control 2: Disable COM Adjust 3: DisableCOM Adj/Ctrl
9	Date/Time Setting			
10	LCD Backlight Delay	(1-3600)min	5	Enlightened time for LCD backlight;
11	Auto Mode	(0~1)		0: Disable

No.	Item	Range	Default	Description
	Parameter Set Inhibit			1: Enable
12	Controller Information 1	(0-20) characters		Information displayed in ABOUT page; Users can input any character (letter is 1 character; while Chinese character is 2 characters), and it needs to set on PC by software;
13	Controller Information 2	(0-20) characters		
14	Controller Information 3	(0-20) characters		

7.3 DIGITAL INPUT PORT FUNCTION DESCRIPTION

Table 17 Input Port Function Description

No.	Item	Description
0	Not Used	Invalid
1	Forced Open	It (Non-firefighting cutoff input) is only suitable for switches with breaker control; when it is active, switches shall changeover to neutral no matter in manual mode or in auto mode.
2	Remote Start on Load	Genset start outputs, and when mains is normal, close the generating breaker.
3	Remote Start off Load	Genset start outputs, and when mains is normal, gen breaker will not close.
4	Lamp Test	LED indicators are all light; LED backlight is light; LED is all dark.
5	S1 Genset Fault Input	Prohibit S1 genset start when S1 genset has fault (used in circular starting).
6	S2 Genset Fault Input	Prohibit S2 genset start when S2 genset has fault (used in circular starting).
7	Start Inhibit Input	Prohibit genset start signal output; In auto mode, disconnect start signal output when stop delay is over; In manual mode, start is inactive after genset stop when it is stopped manually if it has started;
8	Switch Trip Input	Breaker trip fault input.
9	S1 Close Inhibit	S1 close on load are prohibited; In manual mode, manual close is prohibited; if it is closed, then it needs to open manually; In auto mode, if it is closed then load is disconnected or S2 takes load;
10	S2 Close Inhibit	S2 close on load are prohibited; In manual mode, manual close is prohibited; if it is closed, then it needs to open manually; In auto mode, if it is closed then load is disconnected or S1 takes load;
11	S1 Breaker PF IN	S1 close ready signal input; waiting for S1 PF input is active before S1 close;
12	S2 Breaker PF IN	S2 close ready signal input; waiting for S2 PF input is active before S2 close;
13	Key S1 Close	Same as S1 close key on the panel, and it is needed to select auto reset button.
14	Key S2 Close	Same as S2 close key on the panel, and it is needed to select auto reset button.
15	Alarm Reset	Remove current alarm;
16	Alarm Mute	Stop audible alarm output;
17	Reserved	
18	Reserved	
19	S1 Master Input	Forcibly set S1 switch priority the highest;
20	S2 Master Input	Forcibly set S2 switch priority the highest;
21	Forced Manual Mode	Forcibly set controller mode as manual mode.
22	Forced Auto Mode	Forcibly set controller mode as manual mode.
23	Panel Lock	Panel button operation is prohibited; Up/Down/Set/Return/Alarm Reset can be used;

No.	Item	Description
24	Reserved	
25	Scheduler Inhibit	Scheduled start and scheduled not start functions are inactive;
26	Simulate S1 OK	Simulate S1 power is normal; S1 voltage detection is inactive;
27	Simulate S2 OK	Simulate S2 power is normal; S2 voltage detection is inactive;
28	Open IN	Same as panel open key, used to control switch open, please use auto reset button.
29	Local Mode	In this mode, the controller only displays "Not control".
30	Auto Trans./Restore	After this port is configured, it is Auto Trans./Restore when it is active; it is Auto Trans./Non Restore when it is inactive.
31	Switch Output Voltage Abnormal Fault	After this port is configured, fault alarm occurs when it is active. (HVD100 voltage detection module as signal input is needed.)
32	Switch Output Voltage Abnormal Warn	After this port is configured, warning alarm occurs when it is active. (HVD100 voltage detection module as signal input is needed.)
33	Remote Control Inhibit	When it is active, all remote control commands by communication port are inactive.
34	Transition Inhibit	In Auto mode, after this signal is active, it can inhibit ATS to transfer.
35	Busbar Voltage Abnormal	After this port is configured, warning alarm occurs when it is active.
36	S1 Closing Signal Input	To detect the closing status of S1 switch.
37	S2 Closing Signal Input	To detect the closing status of S2 switch.
38	Reserved	
39	Reserved	
40	Reserved	
41	Reserved	
42	S1 Breaker Trip Input	S1 breaker tripping fault input.
43	S2 Breaker Trip Input	S2 breaker tripping fault input.
44	Battery Under Volt. Input	When mains is abnormal, low battery voltage enables, it is considered as battery under voltage when input is active; in auto mode, when mains is abnormal and low battery voltage enables, the genset will start.
45	Reserved	

7.4 DIGITAL OUTPUT PORT FUNCTION DESCRIPTION


Table 18 Output Port Function Description

No.	Items	Description
0	Not Used	Output port is inactive.
1	Custom Combined 1	
2	Custom Combined 2	
3	Custom Combined 3	
4	Custom Combined 4	
5	Custom Combined 5	
6	Custom Combined 6	
7	Reserved	
8	Reserved	
9	Reserved	
10	Reserved	
11	Common Alarm	It includes fault alarm and warning alarm.
12	Common Fault Alarm	It includes "Transition Fault" alarm, and "Over Current" trip alarm.
13	Common Warn Alarm	It includes reverse phase sequence of S1, reverse phase sequence of S2, load over current and forced open.
14	Transition Fault	It includes "S1 Fail to Close" alarm, "S1 Fail to Open" alarm, "S2 Fail to Close" alarm, "S2 Fail to Open" alarm.
15	Audible Alarm	It can be connected with annunciator externally when common alarm is active. When "alarm mute" input is active or 60s delay has expired, it can remove the alarm.
16	Reserved	
17	Genset Start Delay	Output when genset start delay is initiated;
18	Genset Stop Delay	Output when genset stop delay is initiated;
19	Elevator Control	Output before load is power off or switch transfer; used to control running elevator to stop at the nearest level until transfer is finished;
20	Fire Control Linkage	Output when forced to open (Fire) input signal is active and ATS succeeds to open.
21	Busbar Voltage Abnormal Output	Output when busbar voltage abnormal warning input is active.
22	Reserved	
23	S1 Available	Output when S1 voltage is normal.
24	S1 Unavailable	Output when S1 voltage is abnormal.
25	S2 Available	Output when S2 voltage is normal.
26	S2 Unavailable	Output when S2 voltage is abnormal.
27	Reserved	
28	Reserved	
29	Local Mode	Output when the local mode is active.
30	Auto Mode	Output when the genset is in Auto mode.
31	Manual Mode	Output when the genset is in Manual mode.
32	Genset Start Output	Control the genset starting.
33	Reserved	
34	S1 Close Control	Control the S1 switch to close.
35	S1 Open Control	Control the S1 switch to open.
36	S2 Close Control	Control the S2 switch to close.
37	S2 Open Control	Control the S2 switch to open.
38	Reserved	
39	Reserved	
40	Reserved	
41	Reserved	

No.	Items	Description
42	Reserved	
43	Reserved	
44	Reserved	
45	S1 Closed Status	The closed status of S1;
46	S2 Closed Status	The closed status of S2;
47	S1 Genset Start	Control S1 genset start; used for system S1-Gen S2-Gen;
48	S2 Genset Start	Control S2 genset start; used for system S1-Gen S2-Gen;
49	ATS Power L1	Power supply for ATS.
50	ATS Power L2	
51	ATS Power L3	
52	ATS Power N	
53	Remote Control Output	It is controlled by RS485 communication command.
54	Input 1 Status	Programmable input status;
55	Input 2 Status	
56	Input 3 Status	
57	Input 4 Status	
58	Load 1 Close	Load 1-4 close in order after S1 load supply or S2 load supply; After ATS open, load switch close outputs are all disconnected;
59	Load 2 Close	
60	Load 3 Close	
61	Load 4 Close	
62	Reserved	
63	Reserved	
64	S1 Blackout	S1 power status;
65	S1 Over Volt	
66	S1 Under Volt	
67	S1 Over Freq	
68	S1 Under Freq	
69	S1 Loss Of Phase	
70	S1 Phase Seq Wrong	
71	Reserved	
72	Reserved	
73	S2 Blackout	S2 power status;
74	S2 Over Volt	
75	S2 Under Volt	
76	S2 Over Freq	
77	S2 Under Freq	
78	S2 Loss Of Phase	
79	S2 Phase Seq Wrong	
80	Reserved	
81	Reserved	
82	Reserved	
83	Reserved	
84	Switching	Output in the process of switch transfer;
85	Battery Under Volt	Output at battery under voltage alarm;
86	Battery Over Volt	Output at battery over voltage alarm;
87	Gen Inhibit Work	Output in continuous time for scheduled not start;
88	Scheduler Gen Start	Output in continuous time for scheduled start;
89	Close Fault of Two Circuits at the same time	Output when the two circuits close at the same time;
90	Reserved	
91	Unload Output	When S1 Mains and S2 Gen, S1 Gen and S2 Mains, unload outputs when mains is offload.
92	Reserved	

7.5 DEFINED COMBINATION OUTPUT

Defined combination output is composed by 3 parts: OR condition output SW1/SW2 and AND condition output SW3.

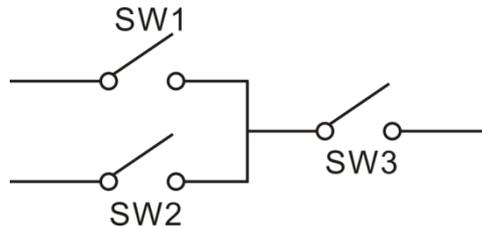

SW1 or SW2 is **TRUE**, and SW3 is **TRUE**, defined combination output is outputting;

SW1 and SW2 are **FALSE**, or SW3 is **FALSE**, defined combination output is not outputting.

ΔNOTE 1: SW1, SW2, SW3 can be set as any contents except for “defined combination output” in the output settings.

ΔNOTE 2: 3 parts of defined combination output (SW1, SW2, SW3) couldn’t include or recursively include themselves.

For example:

Contents of OR condition output SW1: Input port 1 is active;

Close when OR condition output SW1 is active /inactive: close when active (disconnect when inactive);

Contents of OR condition output SW2, input port 2 is active;

Close when OR condition output SW2 is active /inactive: close when active (disconnect when inactive);

Contents of AND condition output SW3: Input port 3 is active;

Close when AND condition output SW3 is active /inactive: close when active (disconnect when inactive);

Output result is as below:

When input port 1 active or input port 2 is active, if input port 3 is active, defined combination output is outputting; If input port 3 is inactive, defined combination output is not outputting;

When input port 1 is inactive and input port 2 is inactive, whatever input port 3 is active or not, defined combination output is not outputting.

8 HISTORICAL RECORDS

In menu interface, select "2. Historical Records", press  key to enter historical record interface.

Enter historical record page, press  and  to check every record.	
Action Event	010/200
Closing S2	
S1 Blackout	
S2 Available	
2024-10-24	09:18:26
Record type, serial No./total record number; Record event; S1 power status; S2 power status; Record date and time;	
Press  to check the detailed information of current records.	
Action Event	010/200
Closing S2	
U1 (LN)	0 0 0V
U2 (LN)	220 221 219V
F1	0.00Hz F2 50.00Hz
Record type, serial No./total record number; Record event; S1 phase voltage; S1 phase voltage; S1 frequency, S2 frequency;	

9 BLACK BOX RECORDS

In main menu interface, select "3. Black Box Records", press  to enter black box records interface.

Enter black box record interface, press  and  to check every record; press  to return main menu interface.	
1: 2024-04-17 09:25:30	Record time of the first data;
2: 2024-03-28 10:07:18	Record time of the second data;
3: 2024-03-05 10:13:56	Record time of the third data;
4: 2024-02-06 11:45:20	Record time of the four data;
Close S2	Current selected event;
Press  to check one data of the current records; Press  and  to check every data of current records; Press  to return back to black box record interface.	
Closing S2	Record event;
24-03-28 10:07:18 +10s	Record time (60 time points between 50s before record event and 10s after the event occur)
S1 Available	S1 power status;
U1 (LN) 220 221 219V	S1 phase voltage;
F1 50.00Hz	S1 frequency;
Press  and  key to check S1 Voltage, S2 Voltage of current time point. Press  or  to exit the detailed data interface.	
Closing S2	Record event;
24-03-28 10:07:18 +10s	Record time point;
S1 Available	S1 power status;
U1 (LN) 220 221 219V	S1 phase voltage;
F1 50.00Hz	S1 frequency;
Closing S2	Record event;
24-03-28 10:07:18 +10s	Record time point;
S2 Available	S2 power status;
U2 (LN) 220 221 219V	S2 phase voltage;
F2 50.00Hz	S2 frequency;

Black box records max. 5 items. Every event records the status information during the 60s before and after the event occur. It records once per second. When record items is up to 5, new item will cover the newest record. The first item is the newest. Users can check each record by Confirm key and check the 60 detailed data status in each item by Up and Down key.

Record type: Action events during the close and open transfer in Auto mode.

Table 19 Action Events are Ones at Below Time

No.	Action Event	Description
1	Opening	Opening in Auto mode;
2	Closing S1	S1 close in Auto mode;
3	Closing S2	S2 close in Auto mode;

10 HARMONIC ANALYSIS

Controller has harmonic analysis function for voltage and current, which can monitor harmonic distortion rate and 3-21 times harmonic component of voltage/current of all phases.

In main menu interface, select "4. Harmonic Analysis", and press  key to enter harmonic analysis interface.

Enter harmonic analysis page, press  and  key to select the voltage needed to analyze; press  to return main menu screen.			
>U1 Volt. Harmonic		Harmonic analysis of S1 power 3 phases;	
>U2 Volt. Harmonic		Harmonic analysis of S2 power 3 phases;	
Press  to check harmonic analysis data of current phase; press  and  to check data of next phase; press  to return the previous menu.			
THDu-U1-A	0%	Harmonic distortion rate of U1 A phase voltage;	
3-7	0 0	3-7 times harmonic display of U1 A phase voltage;	
9-13	0 0	9-13 times harmonic display of U1 A phase voltage;	
15-19	0 0	15-19 times harmonic display of U1 A phase voltage;	
21	0%	21 times harmonic display of U1 A phase voltage;	

11 AUTO RESTORE TIME SETTING

In menu page, select "6 Auto Restore Time Set", press  to enter the setting interface.

When auto trans./auto restore and the voltage of main power is normal: Auto restore delay is due, the current time is greater than or equal to the start time but less than the stop time, the process of auto restore is performed. Auto restore delay is due, the auto restore process is performed when start time and stop time are equal.	
Waiting Time	Auto restore delay time (min): 00000min (0-30000) min
Start Time	Start time (h): 0~23h, min: 0~59m
Stop Time	Stop time (h): 0~23h, min: 0~59m

12 SWITCH OPERATION

12.1 MANUAL SWITCH OPERATION

Press  key, and manual status indicator is illuminated. Controller is in manual mode.

Table 20 Manual Transfer Key

Icon	Function	Description
	S1 Close Key	Press and if load is disconnected, then S1 closes and load is supplied by S1.
	S2 Close Key	Press and if load is disconnected, then S2 closes and load is supplied by S2.
	Open Key	Press and load is disconnected.

12.2 AUTOMATIC OPERATION IN MAINS ABNORMAL & LOW VOLTAGE EANBLE

When mains is abnormal and low battery voltage enables, press  key, and auto mode indicator becomes light and the controller is in the auto mode.

Under auto mode, the controller will switch automatically to ensure power supply for loading according to S1&S2 status, battery voltage status, switch priority and Auto Trans./Restore status. The following illustrates the control logics by the example of "S1 Master", "S1 Mains S2 Gen".

12.2.1 AUTO TRANSFER AUTO RESTORE

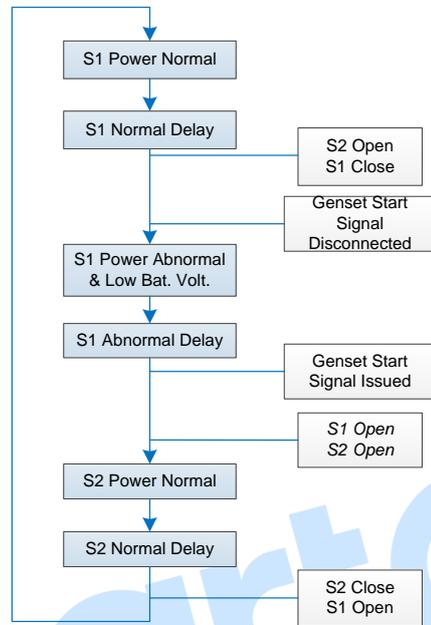


Fig. 2 Auto Trans./Restore Diagram

12.2.2 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP ACTIVE)

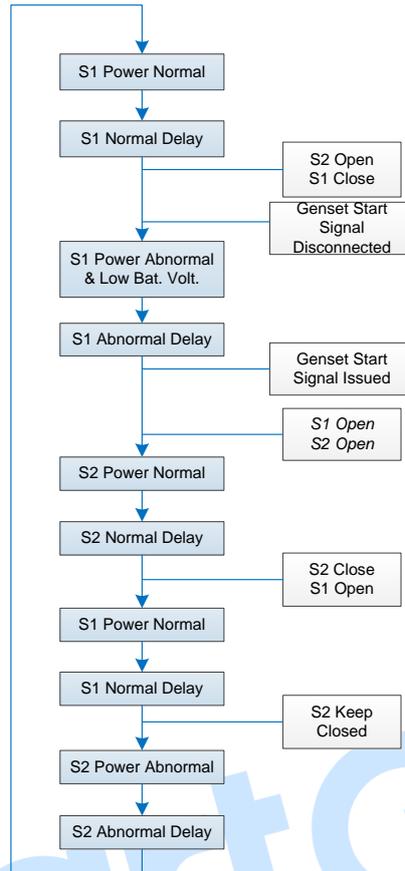


Fig. 3 Auto Transfer Non Restore Diagram (Mutual Backup Active)

12.2.3 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP INACTIVE)

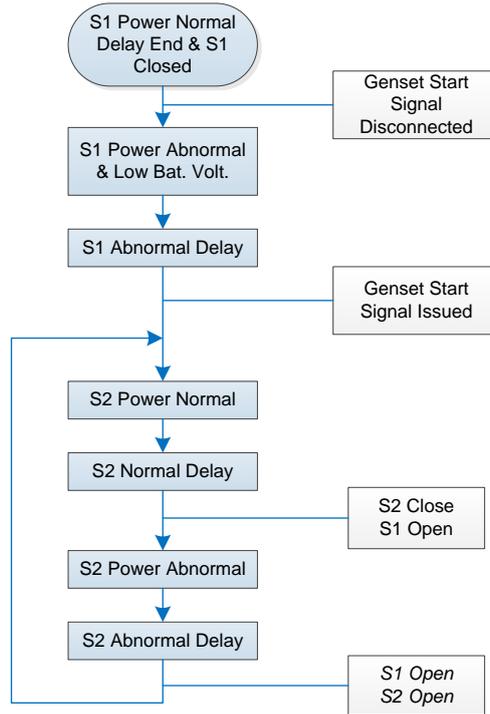


Fig. 4 Auto Transfer Non Restore Diagram (Mutual Backup Inactive)

NOTE: Master power (S1) close needs to transfer to manual mode by close operation key, otherwise, in auto mode switch only transfers at the position of open and backup power (S2).

12.3 AUTOMATIC OPERATION IN MAINS ABNORMAL & LOW VOLTAGE DISALBE

When mains is abnormal and low battery voltage disbles, press  key, and auto mode indicator becomes light and the controller is in the auto mode.

Under auto mode, the controller will switch automatically to ensure power supply for loading according to S1&S2 status, switch priority and Auto Trans./Restore status. The following illustrates the control logics by the example of "S1 Master", "S1 Mains S2 Gen".

12.3.1 AUTO TRANSFER AUTO RESTORE

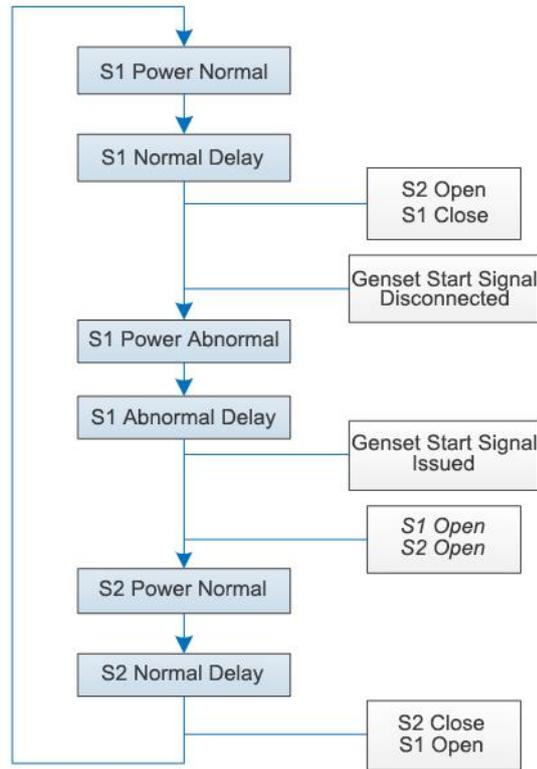


Fig.5 Auto Trans./Restore Diagram

12.3.2 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP ACTIVE)

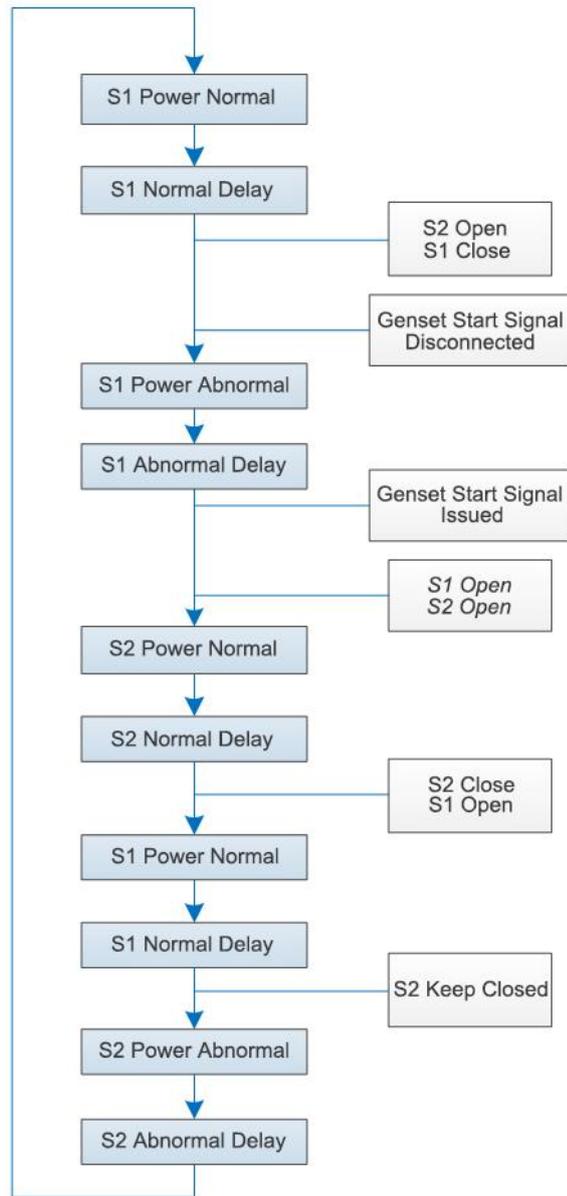


Fig. 6 Auto Transfer Non Restore Diagram (Mutual Backup Active)

12.3.3 AUTO TRANSFER NON RESTORE (MUTUAL BACKUP INACTIVE)

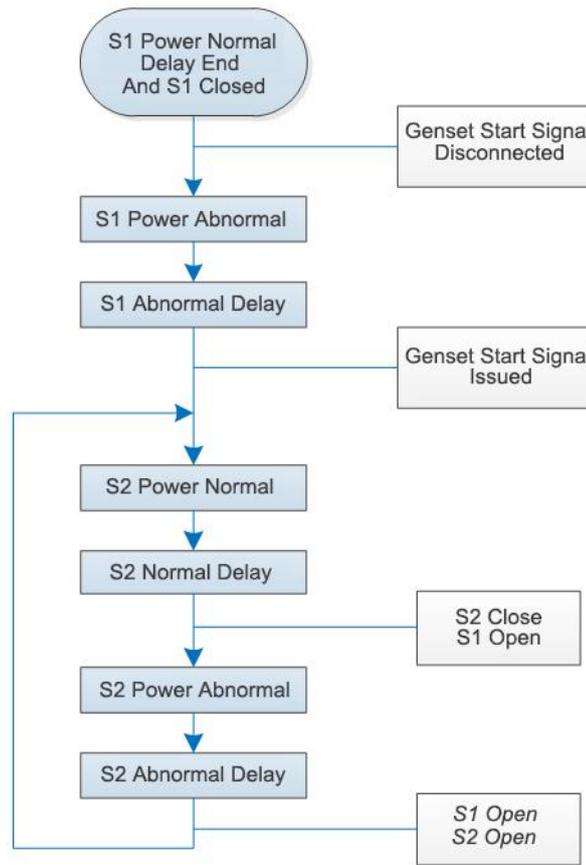


Fig. 7 Auto Transfer Non Restore Diagram (Mutual Backup Inactive)

NOTE: Master power (S1) close needs to transfer to manual mode by close operation key, otherwise, in auto mode switch only transfers at the position of open and backup power (S2).

12.4 LOCAL MODE RUNNING

The local mode is controlled by the programmable input port (external knob). When the local mode is active, the controller only displays “not control”.

13 ATS SUPPLY POWER

13.1 DC SUPPLY

Configure switch power supply to DC supply. When switch is DC supply, it is considered that switch can be transferred at any time, including the time of S1/S2 power off.

13.2 AC SUPPLY

If AC supply is used, ATS power is supplied by controller smartly. If there is only one voltage normal, it can ensure ATS power supply normal and make it normally transfer.

Please confirm the following parameters when AC supply is used:

- Switch supply type is AC supply;
- The upper and lower thresholds of AC supply voltage meet requirements;
- ATS supply power of output port setting is phase voltage or line voltage.

For example: taking ATS power supply as phase voltage (A-N):

Set AC supply rated voltage to 220V, and set AC supply voltage lower limit to 70% rated, upper limit to 130% rated. Set configurable output 1 to "ATS power L1", and set configurable output 2 to "ATS power N".

Connect phase voltage L1 of S1 and S2 to N/C terminal 5 and N/O terminal 7 of configurable output 1,

connect phase N of S1 and S2 to N/C terminal 8 and N/O terminal 10 of configurable output 2, and then connect COM of output 1 and output 2 to ATS supply power. Connecting method is as below:

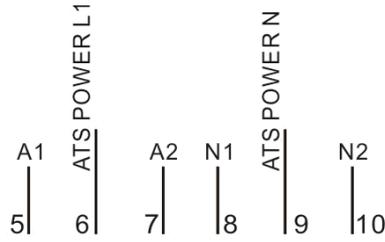


Fig. 8 ATS Power Phase Voltage Supply

When ATS power is line voltage supply, the setting method is as above. The only thing needs to do is change N phase to line voltage. Change configurable output 2 based on the setting. Reset upper and lower limits of AC supply voltage based on rated voltage. Connecting method is as below:

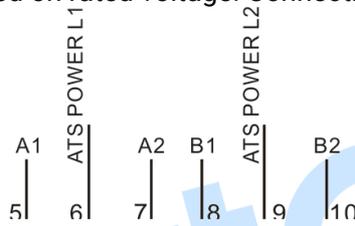


Fig. 9 ATS Power Line Voltage Supply

NOTE 1: N/C terminal voltage must be S1 voltage.

NOTE 2: Only when controller detects ATS power normal, can it issue switch close/open actions. If output port is not set for ATS power, system default is to make L1-N supply for ATS power.

14 COMMUNICATION CONFIGURATION

14.1 ILLUSTRATION

HAT600PT series controller has RS485 serial port, USB communication port, ETHERNET communication port. Among them RS485 and ETHERNET communication port are allowed to connect the local area network openly. They both use Modbus protocol via PC or system software of data collecting, which provides a simple and practical dual power switching management to factories, telecom, industrial and civil buildings, which achieves “remote control, remote measuring, remote communication” functions.

More information of Communication Protocol, refer to “HAT600PT Communication Protocol”.

14.2 RS485 COMMUNICATION PORT

Communication Protocol: Modbus-RTU

Communication Parameters,

Module address	1 (range: 1-254)
Baud rate	9600 bps(2400/4800/9600/19200bps)
Data bit	8bit
Parity bit	None (None, Odd Parity, Even Parity)
Stop bit	2bit (1 bit or 2-bits)

14.3 USB COMMUNICATION PORT

D form USB communication port can be used to connect PC test software to configure parameters and at the same time it can be used to module software upgrade.

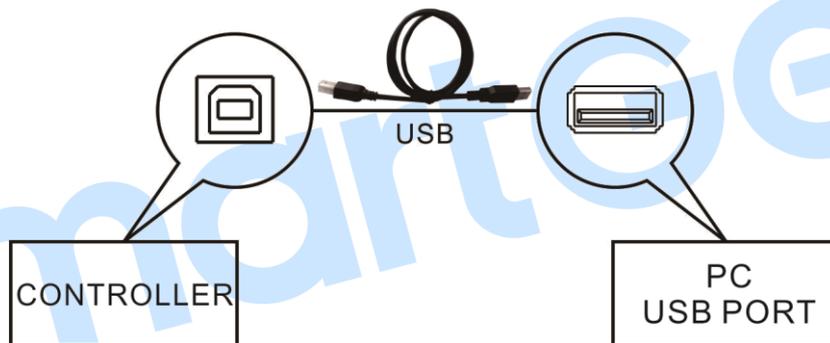


Fig. 10 USB Connection

15 TERMINAL DESCRIPTION

15.1 CONTROLLER TERMINAL DESCRIPTION

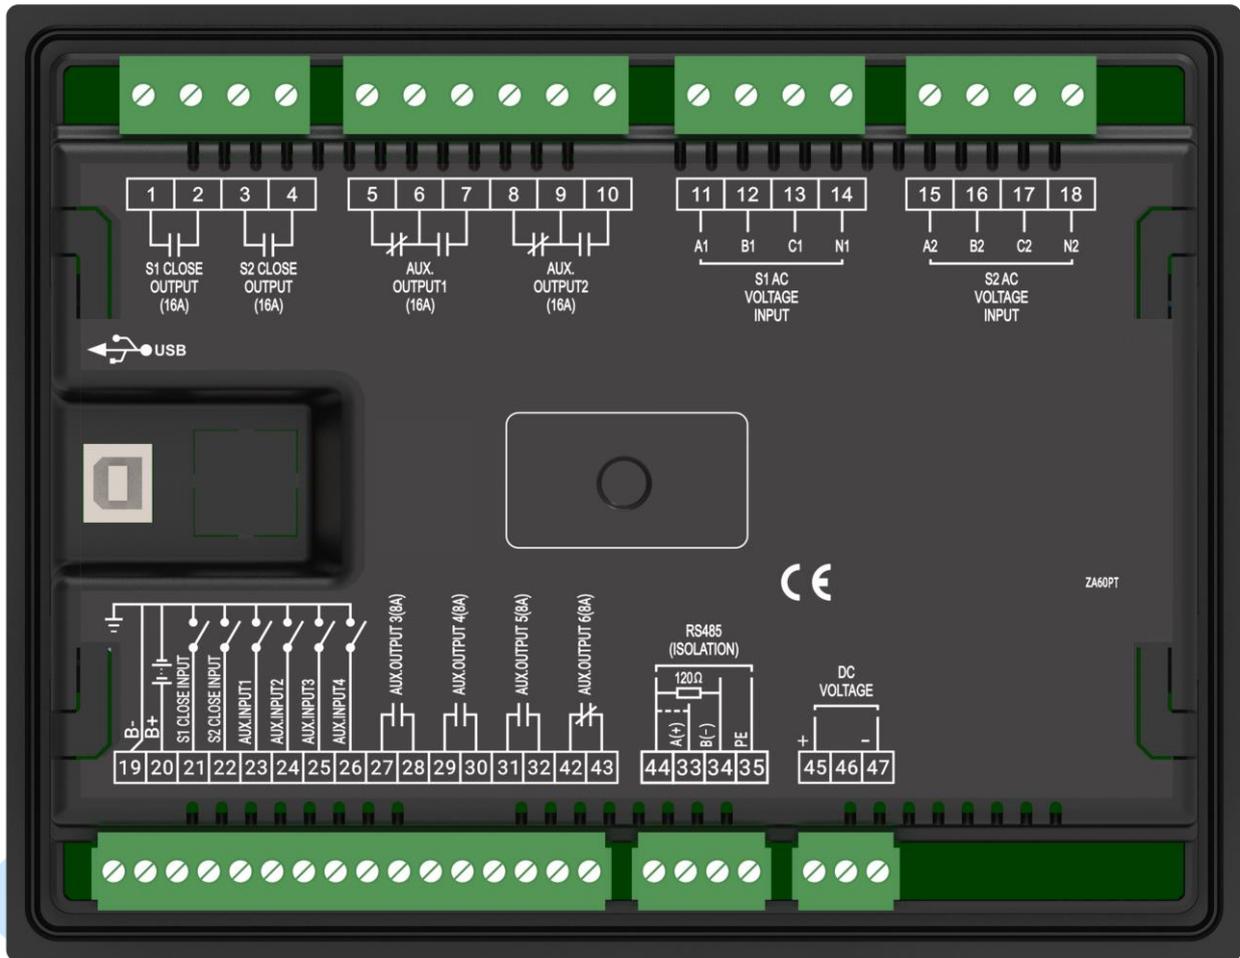


Fig. 11 Controller Back Panel

Pin	Items	Description	Notes
1	S1 close output	Volt-free relay N/O output	250VAC 16A (capacity)
2			
3	S2 close output	Volt-free relay N/O output	250VAC16A (capacity)
4			
5	Aux. output 1	N/C	Default: ATS power of L1 output.
6		Common	
7		N/O	
8	Aux. output 2	N/C	Default: ATS power of N output.
9		Common	
10		N/O	
11	A1	S1 AC 3-phase 4 wire voltage input	For single phase, only connect A1, N1
12	B1		
13	C1		
14	N1		
15	A2	S2 AC 3-phase 4 wire voltage input	For single phase, only connect A2, N2
16	B2		
17	C2		
18	N2		
19	B-	Connects genset start battery	Module GND connected terminal

Pin	Items	Description	Notes
		negative;	
20	B+	Connects genset start battery positive when genset is started;	DC positive input (8-35)V, controller power
21	S1 close input	Detection of S1 switch closing state, voltage free contact input	GND connected is active;
22	S2 close input	Detection of S2 switch closing state, voltage free contact input	GND connected is active;
23	Aux. input 1	User defined	Default: Forced Open GND connected is active;
24	Aux. input 2		Default: Breaker Trip Input GND connected is active;
25	Aux. input 3		Default: Not Used GND connected is active;
26	Aux. input 4		Default: Not Used GND connected is active;
27 28	Aux. output 3	Voltage free relay N/O output	Default: S1 open control Capacity 8A 250VAC
29 30	Aux. output 4	Voltage free relay N/O output	Default: S2 open control Capacity 8A 250VAC
31 32	Aux. output 5	Voltage free relay N/O output	Default: self-defined combination output 1; Capacity 8A 250VAC
42 43	Aux. output 6	Voltage free relay N/C output	Default: genset start output Capacity 8A 250VAC
44	120Ω Resistor	Match resistor for RS485 resistance	Users need to connect this terminal with terminal 33 based on the on-site situation to connect this 120 Ω resistor into the controller.
33 34	RS485A + RS485 B-	RS485 communication port	
35	PE	GND Connected terminal for communication port	
45 47	DC VOLTAGE + DC VOLTAGE -	Battery voltage input	48V battery voltage input.
USB	USB	D form USB communication port	Able to connect PC to configure parameters and software upgrade;

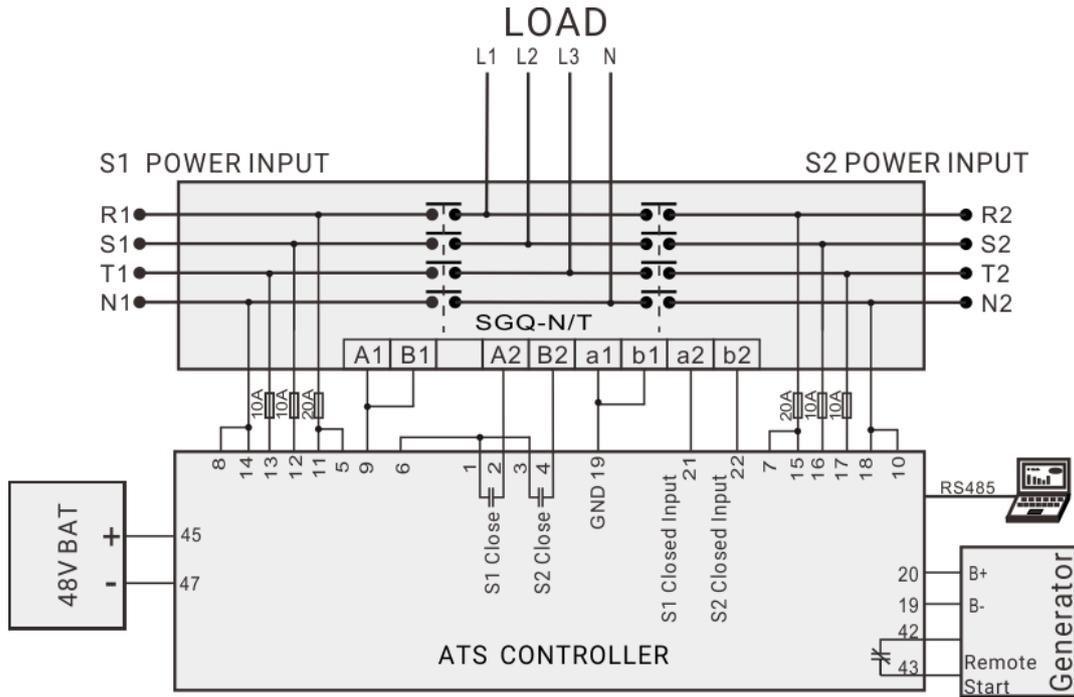


Fig. 14 SGQ-N/T Application Diagram

Table 21 Related Settings

Part of Parameter Settings	
Switch Type Setting	PC two-stage
Aux. Output 1	ATS Power L
Aux. Output 2	ATS Power N
Aux. Output 6	Genset Start Output

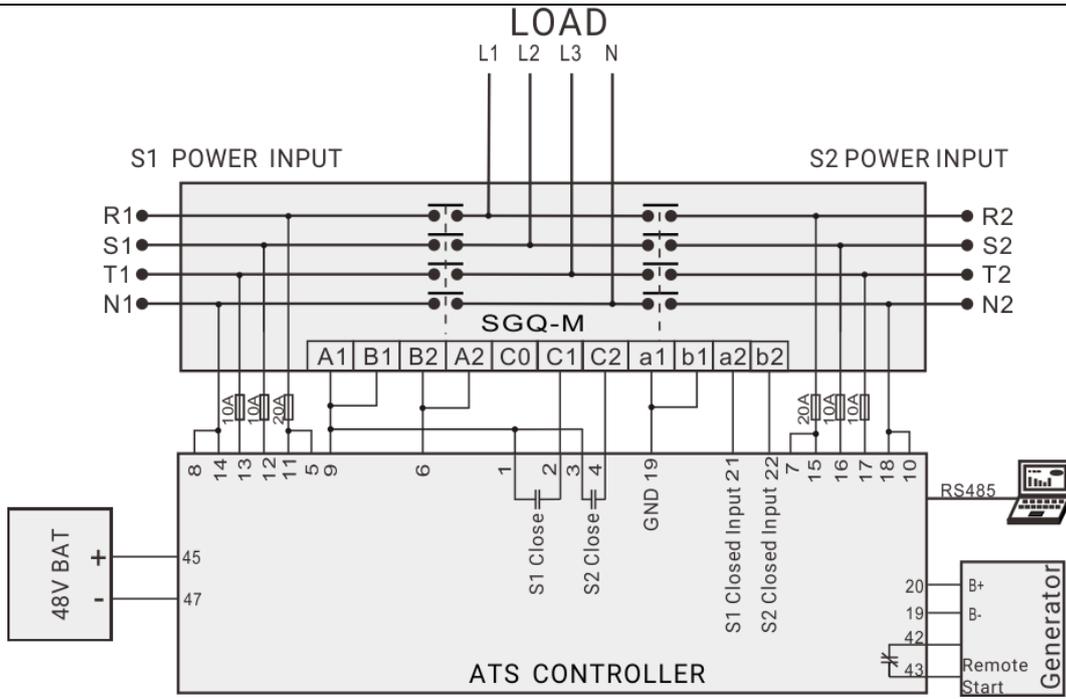


Fig. 15 SGQ-M Application Diagram

Table 22 Related Settings

Part of Parameter Settings	
Switch Type Setting	PC two-stage
Aux. Output 1	ATS Power L
Aux. Output 2	ATS Power N
Aux. Output 6	Genset Start Output

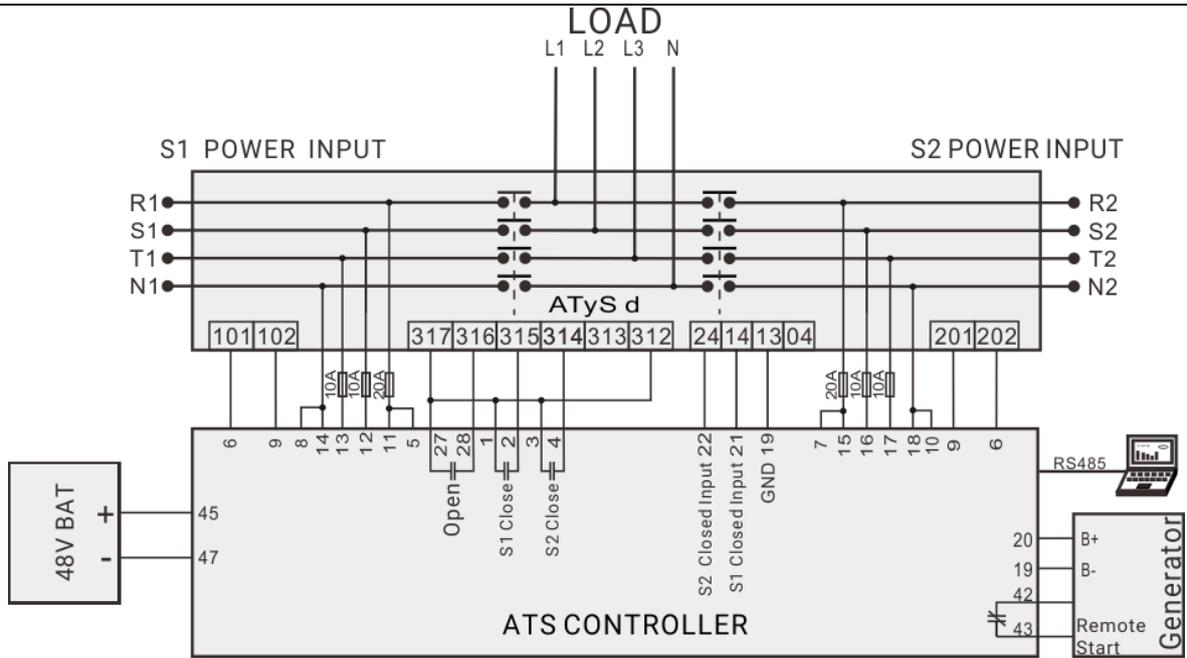


Fig. 16 AtyS d Application Diagram

Table 23 Related Settings

Part of Parameter Settings	
Switch Type Setting	PC three-stage
Aux. Output 1	ATS Power L
Aux. Output 2	ATS Power N
Aux. Output 3	S1 Open Output
Aux. Output 6	Genset Start Output

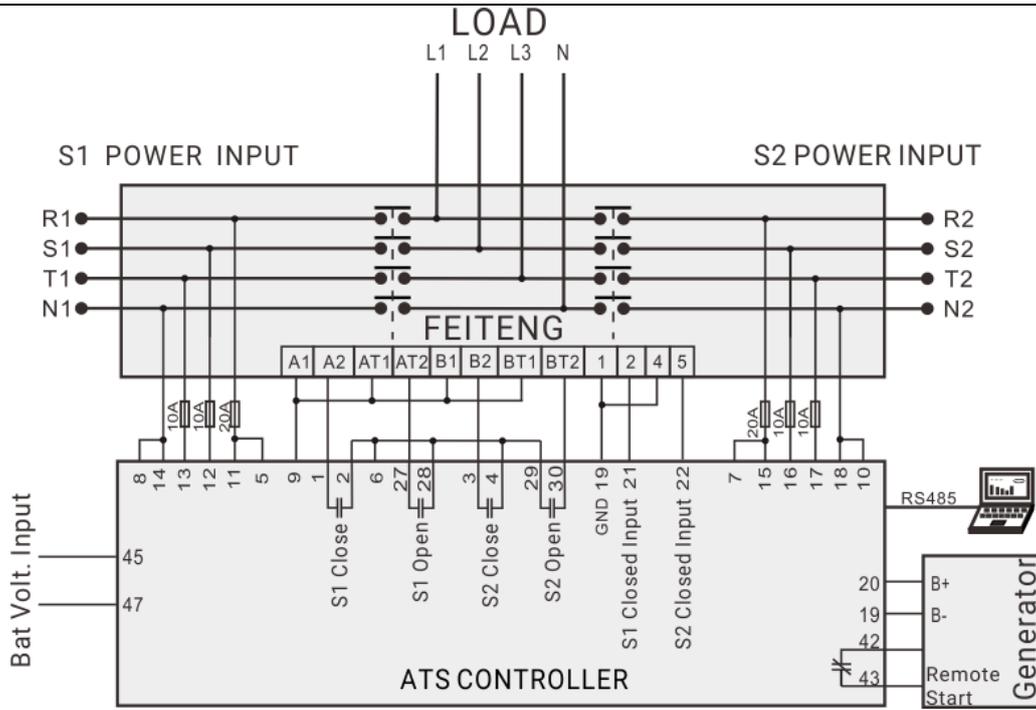


Fig. 17 Feiteng Application Diagram

Table 24 Related Settings

Part of Parameter Settings	
Switch Type Setting	CB Class/CC Class
Aux. Output 1	ATS Power L
Aux. Output 2	ATS Power N
Aux. Output 3	S1 Open Output
Aux. Output 4	S2 Open Output
Aux. Output 6	Genset Start Output

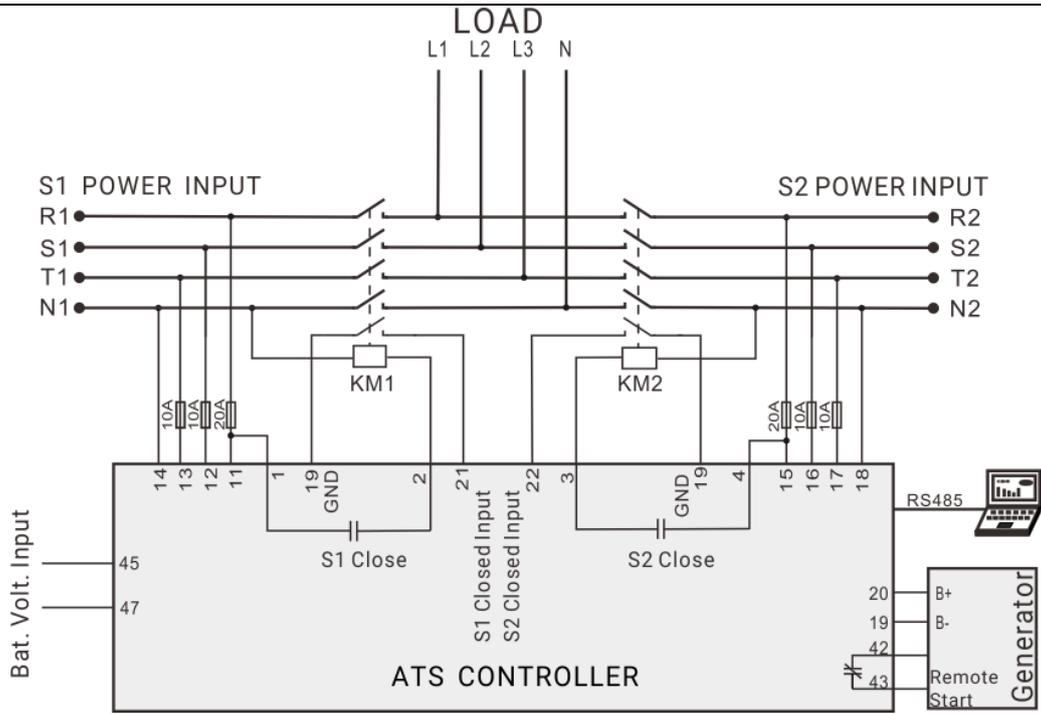


Fig. 18 Contactor Application Diagram

Table 25 Related Settings

Part of Parameter Settings	
Switch Type Setting	CB Class/CC Class
Aux. Output 6	Genset Start Output
Close Continue Output Enable	Enable

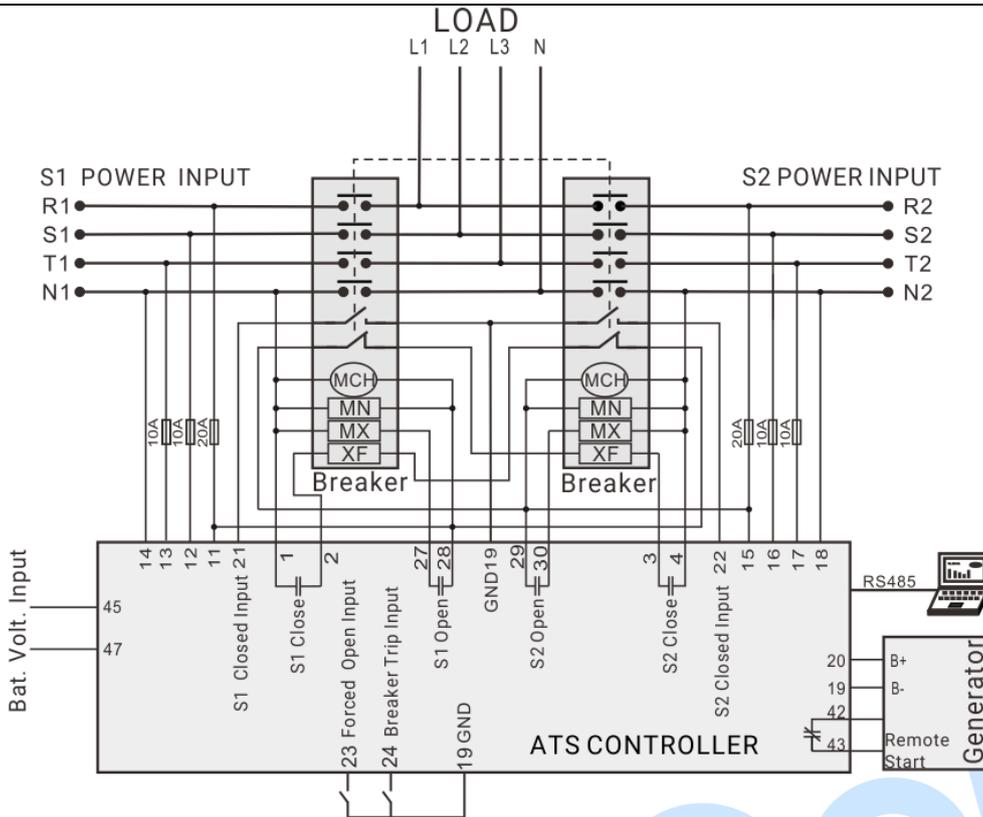


Fig. 19 Breaker Application Diagram

Table 26 Related Settings

MCH: Energy-save Motor; MN: Undervolt Trip; MX: Open Coil; XF: Close Coil;

Part of Parameter Settings	
Switch Type Setting	CB Class/CC Class
Aux. Output 1	Forced Open Input
Aux. Output 2	Breaker Trip Input
Aux. Output 3	S1 Open Output
Aux. Output 4	S2 Open Output
Aux. Output 6	Genset Start Output

NOTE: Aux. Output 6 default setting is Genset Start Output (N/O), Aux. Output 6 only has N/C contact; when controller is power off, it can also start genset with N/C contact; If controller uses DC supply, Genset Start Output can also be changed to other N/O configurable output.

17 INSTALLATION

The controller is panel installation designed and needs to fix by clips.

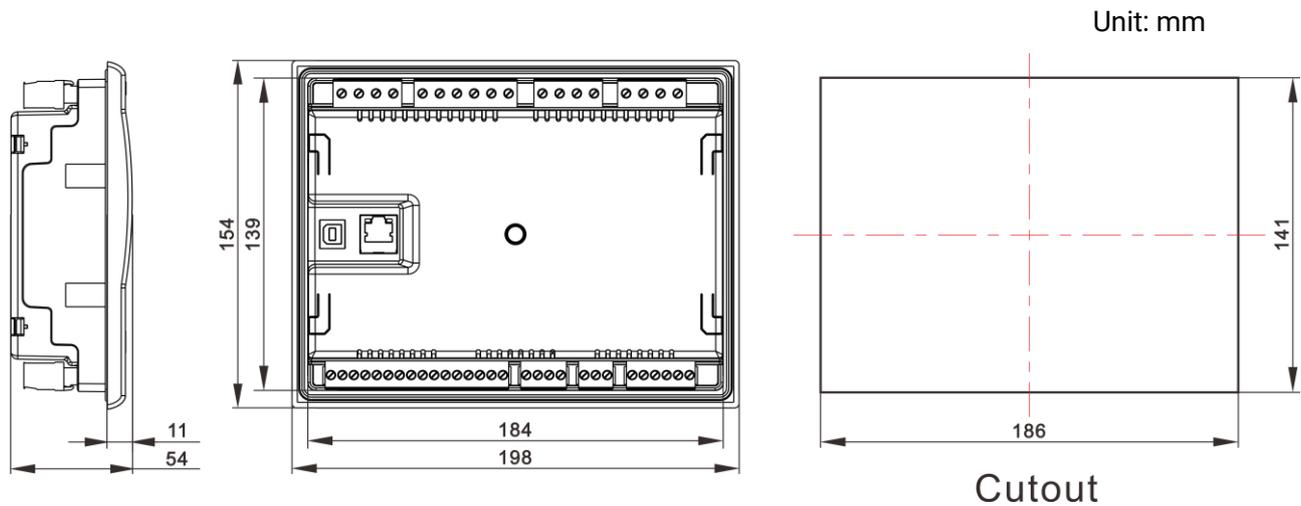


Fig. 20 Case Dimensions and Cutout

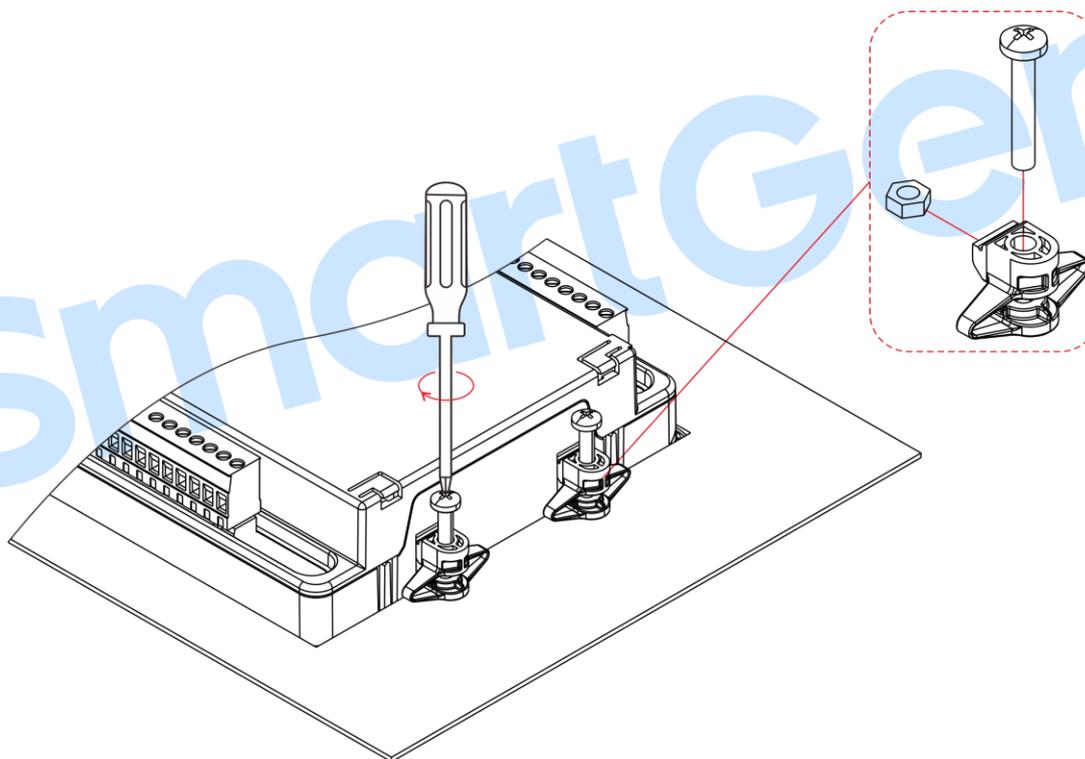


Fig. 21 Clip Installation Illustration

NOTES:

CAUTION: Risk of electric shock. Please cut off the power of the controller before maintenance.

WARNING: Risk of electric shock. Do not remove the rear shell of the controller. There are no parts inside the controller for maintenance.

Table 29 Fault Finding

Fault Symptom	Possible Remedy
Controller no response	Check DC supply voltage; Check DC fuse; Check AC power;
RS485 communication failure	Check whether the RS485 is wrong connected between negative and positive. Check whether the RS485 adapter is abnormal. Check whether the parameter settings in the module addresses are incorrect. If the above methods are not applicable, put 120Ω resistor inside the controller connected between RS485 and AB wire;
Programmable output error	Check programmable output connections, pay attention to Normally opened and closed; Check the output parameters settings and output types;
Programmable input abnormal	Check whether the input ports are GND connected when they are active; Ensure they are hung up when they are inactive; (NOTE: The input will be possibly destroyed when connected with over high voltage.) Check the input function settings and input active types in the parameter settings;
ATS transfer abnormal	Check ATS; Check the connection wire between controller and switch; Check whether switch type setting is in accordance with switch; Check ATS power settings and connection wires;
Genset start control abnormal	Check system type settings; Check output function settings and output types; Check start/stop function settings of all items.