

SmartGen

MAKING CONTROL SMARTER

HGM9510N/HGM9530N PARALLELED GENSET CONTROLLER USER MANUAL



郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

SmartGen Registered trademark

No. 28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951/67981000 (overseas)

Fax: +86-371-67992952

Web: www.smartgen.com.cn www.smartgen.cn

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.



Table 1 Software Version

Date	Version	Note
2018-11-12	1.0	Original release.
2019-08-22	1.1	Fixed typical wiring diagram.
2019-11-04	1.2	Added HGM9510N model.
2020-03-06	1.3	Fixed a translation.
2020-12-22	1.4	Added UL certification parameters; modified part description mistakes.
2021-08-04	1.5	Changed the "Power Management Logic Diagram" of Fig.10.
2022-04-28	1.6	Updated company logo, change GOV SW2 and AVR SW2 description.
2023-06-29	1.7	<ol style="list-style-type: none">1. Modified the parameter setting of dual 485 module address, stop bit and baud rate, which can be configured by the controller panel;2. Added selections of charger voltage, speed, & temperature of engine, oil pressure, and idle speed, speed-up time of parameters setting;3. Modified parameter configuration range of GOV SW1, AVR SW1;4. Added network setting, which includes automatic IP setting and cloud monitoring communication enabled configuration;5. Added cloud monitoring setting;6. Added sensor selection configuration (which can be set as input port);7. Added custom weekly set for cycle selection of scheduled run.
2024-05-25	1.8	<ol style="list-style-type: none">1. Added number and contents of event log, data analysis description;2. Added the fuel output time in timer setting;3. Modified the default value of cloud monitoring communication as "Disable";4. Updated the definable configuration of input ports: 01 "Mains Switch

Date	Version	Note
		Not Control", "55 Mains Split Transfer to Island Mode";
2025-06-16	1.9	<ol style="list-style-type: none"> 1. Added alarms related to the AIN8 sensor; 2. Updated the parameter range for active/reactive power adjustment via analog signals; 3. Added mains power setting option: Mains Voltage Transformer Enable; 4. Added output port definitions, including configurations such as "31 Mains Closing Output," "32 Mains Opening Output," "125 No Mains Power," "126 Mains Overfrequency," "127 Mains Overvoltage," "128 Mains Underfrequency," "129 Mains Undervoltage," "130 Mains Phase Sequence Wrong," and "131 Mains Loss of Phase"; 5. Added input port definitions, including descriptions such as "15 Mains Closing Status Input," "16 Mains Load Inhibit," "23 Non-Parallel Mode," "25 Power Management (No on-off Control)," "32 Remote Start (Island Mode)," "35 Louver Closed," "45 Simulate Mains Normal," "46 Simulate Mains Abnormal," "66 Inhibit Alarm Stop," "67 Louver Open," "70 M-Breaker None FDBK," "71 Grid-Tied Track," and "72 Island Parallel Mode."



This manual only suits for HGM9510N/HGM9530N paralleled genset controller.

Table 2 Symbol Instruction

Symbol	Instruction
 NOTE	Highlights an essential element of a procedure to ensure correctness.
 CAUTION	Indicates a procedure or practice, which, if not strictly observed, could result in damage or destruction of equipment.
 WARNING	Indicates a procedure or practice, which could result in injury to personnel or loss of life if not followed correctly.

SmartGen

CONTENTS

1	OVERVIEW.....	7
2	PERFORMANCE AND CHARACTERISTICS.....	8
3	SPECIFICATION	10
4	OPERATION.....	13
4.1	INDICATORS.....	13
4.2	PUSHBUTTONS	14
4.3	LCD DISPLAY	15
4.3.1	MAIN DISPLAY.....	15
4.3.2	USER MENU AND PARAMETER SETTING.....	17
4.4	DATA ANALYSIS.....	17
4.5	AUTO START/STOP OPERATION.....	17
4.6	MANUAL START/STOP OPERATION.....	18
4.7	SWITCH CONTROL PROCEDURES	20
4.7.1	MANUAL CONTROL PROCEDURES.....	20
4.7.2	AUTOMATIC CONTROL PROCEDURES.....	20
5	PROTECTIONS.....	20
5.1	CONTROLLER ALARM TYPES.....	20
5.2	WARNING ALARMS.....	21
5.3	BLOCK ALARMS	27
5.4	SAFETY TRIP ALARMS.....	32
5.5	SAFETY TRIP AND STOP ALARMS.....	36
5.6	TRIP ALARMS.....	42
5.7	TRIP AND STOP ALARM.....	48
5.8	SHUTDOWN ALARMS	54
6	WIRING CONNECTION.....	60
7	SCOPES AND DEFINITIONS OF PROGRAMMABLE PARAMETERS.....	63
7.1	CONTENTS AND SCOPES OF PARAMETERS.....	63
7.2	DEFINED CONTENTS OF DIGITAL OUTPUT PORTS	86
7.2.1	DEFINED CONTENTS OF DIGITAL OUTPUT PORTS.....	86
7.2.2	DEFINED PERIOD OUTPUT.....	94
7.2.3	DEFINED COMBINATION OUTPUT	94
7.3	DEFINED CONTENTS OF DIGITAL INPUT PORTS.....	95
7.4	SELECTION OF SENSORS	99
7.5	CONDITIONS OF CRANK DISCONNECT SELECTION.....	100
8	PARAMETERS SETTING.....	100
9	SENSOR SETTING.....	101
10	COMMISSIONING	102
10.1	STEP 1: SINGLE UNIT DEBUGGING.....	102
10.2	STEP 2: MANUAL PARALLEL OPERATION OFF-LOAD	102
10.3	STEP 3: MANUAL PARALLEL OPERATION ON-LOAD	102

10.4	STEP 4: AUTOMATIC PARALLEL OPERATION	103
11	TYPICAL APPLICATION	104
12	POWER MANAGEMENT MODE.....	106
13	NEL TRIP DESCRIPTION.....	107
14	DUMMY LOAD CONNECTION	108
15	GROUND BREAKER CONTROL DESCRIPTION	109
16	PRIORITY RUNNING AND BALANCED RUNNING TIME DESCRIPTION.....	110
17	ECONOMICAL FUEL CONSUMPTION DESCRIPTION	111
18	STATIC PARALLEL CONNECTION.....	112
19	HEAVY LOAD REQUEST.....	113
20	CONTROLLER REDUNDANCY	114
21	INSTALLATION	116
22	CONNECTIONS OF CONTROLLER AND J1939 ENGINE.....	118
22.1	CUMMINS ISB/ISBE	118
22.2	CUMMINS QSL9	118
22.3	CUMMINS QSM11 (IMPORT)	119
22.4	CUMMINS QSX15-CM570	119
22.5	CUMMINS GCS-MODBUS	119
22.6	CUMMINS QSM11	120
22.7	CUMMINS QSZ13.....	120
22.8	DETROIT DIESEL DDEC III/IV	121
22.9	DEUTZ EMR2	121
22.10	JOHN DEERE	121
22.11	MTU ADEC (SMART MODULE)	122
22.12	MTU ADEC (SAM MODULE).....	122
22.13	PERKINS	122
22.14	SCANIA	123
22.15	VOLVO EDC3	123
22.16	VOLVO EDC4	124
22.17	VOLVO-EMS2.....	124
22.18	YUCHAI	125
22.19	WEICHAI	125
23	FAULT FINDING	126

1 OVERVIEW

HGM9510N/HGM9530N paralleled genset controller is designed for gensets manual/auto parallel system with similar or different capacities. Additionally, it is suitable for single unit constant power output and mains paralleling to realize automatic start/stop, parallel running, data measurement, alarm protection as well as remote control, remote measurement and remote communication functions. It fits with large LCD display, optional Chinese, English and other languages interface, and it is reliable and easy to use.

HGM9510N/HGM9530N paralleled genset controller has GOV and AVR control function, which can synchronize and share load automatically to parallel with gensets equipped with HGM9510N/9530N controller. Controller can precisely monitor all running status of gensets, and when abnormal occasions occur, gensets can parallel off from the bus and stop, in which process, fault status will be displayed on the LCD. Controller has SAE J1939 port, and can communicate with various ECU (Engine Control Unit) with J1939.

HGM9510N/HGM9530N paralleled genset controller can handle complex applications due to its controller redundancy function (not for HGM9510N), MSC redundancy function (not for HGM9510N), comprehensive fault protection function and flexible scheduled start/stop functions. It can be widely used in all types of automatic genset control system with compact structure, advanced circuits, simple connections and high reliability.

2 PERFORMANCE AND CHARACTERISTICS

Main characteristics are as bellow:

- With ARM-based 32-bit SCM, high integration of hardware and more reliable;
- 240x128 LCD with backlight, multilingual interface (including English, Chinese or other languages) which can be chosen on site, making commissioning convenient for factory personnel;
- Improved LCD wear-resistance and scratch resistance due to hard screen acrylic;
- Silicon panel and pushbuttons for better operation in high/low temperature environment;
- Two RS485 communication ports enable remote control, remote measuring, remote communication via MODBUS protocol;
- Fitted with CANBUS port and can communicate with ECU equipped with J1939. Not only can you monitor frequently-used data (such as water temperature, oil pressure, engine speed, fuel consumption and so on) of ECU machine, but also control start, stop, raising speed and dropping speed via CANBUS port;
- Suitable for 3-phase 4-wire, 3-phase 3-wire, single phase 2-wire, and 2-phase 3-wire systems with voltage 120/240V and frequency 50/60Hz;
- Collects and shows 3-phase voltage of Bus/Gen, Bus/Gen frequency, Gen 3-phase current, Gen power and Gen voltage harmonic parameters;
- For Bus, controller has loss of phase and reverse phase sequence detection functions; For generator, controller has over voltage, under voltage, over frequency, under frequency, high unbalanced voltage, high total harmonic distortion, over current, earth fault, high unbalanced current, low power factor, over power, reverse power, loss of excitation, loss of phase, reverse phase sequence detection functions;
- Synchronous parameters: voltage difference between bus and gen, frequency difference between bus and gen, phase angle difference between bus and gen;
- Multiple running modes in auto state: on load running, off load running, demand parallel running;
- Ramp on and ramp off function in paralleling/splitting;
- 3 fixed analogue sensor inputs (temperature, oil pressure and fuel level);
- 2 configurable analogue sensor inputs can be set as sensors of temperature, oil pressure or level;
- Oil pressure sensor and configurable sensor input 1 can directly connect with resistive/current/voltage sensors, while other sensor inputs can directly connect with resistive sensors, and for connecting voltage/current sensors, please make it clear before the order;
- More kinds of curves of temperature, oil pressure, fuel level sensors can be used directly and users can define the sensor curves by themselves;
- Precisely collect various engine parameters, including temperature, engine oil pressure, fuel level, speed, battery voltage, charger voltage, accumulated running time and accumulated start times etc.;

- Control and protection function: automatic start/stop of the diesel genset, ATS (Auto Transfer Switch) control and perfect 2-class fault indication and protection function etc.;
- Parameter setting function: parameters can be modified by users and stored in internal EEPROM memory, and cannot be lost even in case of power outage; most of them can be adjusted from the front panel of the controller and all of them can be modified on PC by RS485 ports;
- Multiple crank disconnect conditions (speed, engine oil pressure, generator frequency) are optional;
- Wide power supply range DC(8~35)V, suitable for different starting battery voltage environment;
- Event log (max.999 items) , real-time clock, scheduled start & stop function (allowing to start the genset once a day/week/month with load or not);
- Alarm data record function, which allows to record the genset data of 5 alarms;
- Accumulated run time of A and B and accumulated electric energy of A and B; Users can reset them and start afresh, providing convenience for users;
- Heater, cooler and fuel pump control functions;
- Maintenance function; maintenance time due actions can be set;
- All parameters apply digital adjustment, getting rid of conventional analogue modulation with normal potentiometer, and improving genset reliability and stability;
- IP65 waterproof level is achieved with the help of rubber-ring gasket between shell and control panel;
- Metal fixing clips employed to fix the controller and make it perform better under high temperature environment;
- Modular structure design, anti-flaming ABS plastic enclosure, pluggable terminal, built-in mounting, compact structure with easy installation;

3 SPECIFICATION

Table 3 Technical Specification

Parameter	Details
Working Voltage	Range: DC8V - DC35V continuous, limit voltage DC80V, DC reverse connection protection Resolution: 0.1V Accuracy: 1%
	Range: DC12V-DC30V continuous (UL certified product)
Overall Consumption	<7W (Standby mode: ≤2.5W)
AC Voltage	Phase voltage Range: AC15V - AC360V (ph-N) Resolution: 0.1V Accuracy: 0.5%
	Wire voltage Range: AC30V - AC620V (ph-ph) Resolution: 0.1V Accuracy: 0.5%
AC Frequency	Range: 5Hz -75Hz Resolution: 0.01Hz Accuracy: 0.1Hz
AC Current	Rated: 5A Range: 0A - 10A Resolution: 0.1A Accuracy: 0.5%
Speed Sensor	Voltage Range: 1.0V - 24V (RMS) Frequency Range: 5Hz - 10,000Hz
Charger(D+) Voltage	Range: DC0V - DC60V continuous Resolution: 0.1V Accuracy: 1%
Analog Sensor	Resistor Input Range: 0Ω - 6000Ω Resolution: 0.1 Accuracy: 1Ω (below 300Ω)
	Voltage Input Range: 0V - 5V Resolution: 0.001V Accuracy: 1%
	Current Input Range: 0mA - 20mA Resolution: 0.01mA Accuracy: 1%

Parameter	Details
Fuel Output	16A DC24V DC power supply output (relay output)
	3A DC12V/30V power supply output (relay output) (UL certified product)
Crank Output	16A DC24V DC power supply output (relay output)
	3A DC12V/30V power supply output (relay output) (UL certified product)
Digital Output 1	8A DC30V power supply output (relay output)
	5A DC24V power supply output (relay output) (UL certified product)
Digital Output 2	8A DC30V power supply output (relay output)
	5A DC24V power supply output (relay output) (UL certified product)
Digital Output 3	8A DC30V power supply output (relay output)
	5A DC24V power supply output (relay output) (UL certified product)
Digital Output 4	8A AC250V volt-free output (relay output)
	5A AC250V volt-free output (relay output) (UL certified product)
Digital Output 5	8A AC250V volt-free output (relay output)
	5A AC150V volt-free output (relay output) (UL certified product)
Digital Output 6	8A AC250V volt-free output (relay output)
	5A AC150V volt-free output (relay output) (UL certified product)
Digital Output 7	1A DC30V power supply output (transistor output)
	1A DC30V/12V power supply output (transistor output) (UL certified product)
Digital Output 8	1A DC30V power supply output (transistor output)
	1A DC30V/12V power supply output (transistor output) (UL certified product)
Digital Input 1-10	Low limit voltage is 1.2V, high limit voltage is 60V
RS485	Isolated, half-duplex, 9600 baud rate, maximum communication length 1000m
Ethernet	Self-adapting 10/100Mbit
MSC CAN	Isolated, maximum communication length 250m; applying Belden 9841 cable or the equivalence;
EMC/CE Certification	EN 61326-1:2013
Vibration Test	5 - 8 Hz: ± 7.5 mm
	8 - 500 Hz: 2g
	IEC 60068-2-6
Shock Test	50g, 11ms, half-sine, complete shock test from three directions, and 18 times shock for each test
	IEC 60068-2-27
Bump Test	25g, 16ms, half-sine
	IEC 60255-21-2
Safety Requirements	According to EN 61010-1 installation category (over voltage category) III, 300V, pollution class 2, altitude 3000m
Case Dimensions	242mm x 186mm x 49mm

Parameter	Details
Panel Cutout	214mm x 160mm
Working Temperature	(-25~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-30~+80)°C
Protection Level	Front Enclosure: IP65 when rubber-ring gasket is installed between the enclosure and the control panel Rear Enclosure: IP20
Insulation Intensity	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal and the leakage current is not more than 3mA within 1min.
Weight	1.1kg

SmartGen

4 OPERATION

4.1 INDICATORS



Fig.1 HGM9510N/HGM9530N Front Panel Indication

NOTE: Description for parts of indicators.

Table 4 Alarm Indicator Description

 
 
Alarm Type	Alarm Indicator
Warning	Slow flashing (1 time per second)
Block	Slow flashing (1 time per second)
Safety Trip	Fast flashing (5 times per second)
Safety Trip and Stop	Fast flashing (5 times per second)
Trip	Fast flashing (5 times per second)
Trip and Stop	Fast flashing (5 times per second)
Shutdown	Fast flashing (5 times per second)
No Alarm	Extinguished

Running indicator: is normally illuminated after crank disconnection and before ETS stop and extinguished for other periods;

Gen normal indicator: is normally illuminated when the generator is normal; flashing when generator state is abnormal; extinguished when there is no generating power.

4.2 PUSHBUTTONS

Table 5 Button Function Description

Icons	Buttons	Description
	Stop	Stop the running generator in Auto/Manual mode; Reset alarm in stop mode; Lamp test (press at least 3 seconds); During stopping process, press this button again to stop the generator immediately.
	Start	Start the genset in Manual mode.
	Manual Mode	Press this key and the controller goes in Manual mode.
	Auto Mode	Press this key and controller goes in Auto mode.
	Mute/Reset Alarm	Remove the alarm sound; Remove the alarm by pressing for over 3s.
	Fn	Shortcut button by making groups with other buttons; or other function button (power button, stop button etc.) by setting.
	Close	Close the breaker in manual mode.
	Open	Open the breaker in manual mode.
	Up/Increase	1) Screen scroll; 2) Move up the cursor and increase value in setting menu.
	Down/Decrease	1) Screen scroll; 2) Move down the cursor and decrease value in setting menu.
	Left	1) Page scroll; 2) Left move the cursor in setting menu.
	Right	1) Page scroll; 2) Right move the cursor in setting menu.
	Set/Confirm	1) Enter setting screen; 2) Return to previous menu in setting menu.
	Exit	1) Return to main menu; 2) Return to previous menu in setting menu.

NOTE: Press  and  simultaneously in manual mode and it can force the generator to crank. At this time the controller shall not judge whether the genset start is successful or not according to the starting conditions. It is controlled by the operator. When operator observes that the genset has started, he/she should release the button and the start output will be deactivated. Safety on delay will be initiated.

NOTE: Regarding ECU genset, in Stop/Auto mode, Press  button and it shall power on the ECU (fuel output and ECU power output are active.).

CAUTION: Factory default password is "00318", and users can change it in case others change the advanced parameter settings. Please clearly remember the password after changing. If you forget it, please contact SmartGen services and send the PD information in the controller page of "ABOUT" to the service personnel.

4.3 LCD DISPLAY

4.3.1 MAIN DISPLAY

Paging is applied for the main screen;   is used for page scroll and   for screen scroll.

Main Screen includes the following contents:

Gen: voltage, frequency, current, active power, reactive power;

Bus: voltage, frequency;

Engine: speed, temperature, engine oil pressure, battery voltage;

Part of status displays.

Status page includes the following contents:

Genset status, and ATS status.

Engine page includes the following contents:

Engine speed, engine temperature, engine oil pressure, fuel level, configurable analog 1, configurable analog 2, battery voltage, charger voltage, accumulated running time, accumulated start times.

NOTE: If CAN BUS is connected and engine information is read from J1939, this page also includes: coolant pressure, coolant level, fuel temperature, fuel pressure, inlet temperature, exhaust temperature, turbo pressure, fuel consumption, total fuel consumption and so on. (Different engines have different parameters.)

Generator page includes the following contents:

Phase voltage, wire voltage, frequency, phase sequence, current, active power of different phases, total active power and percentage, reactive power of different phases, total reactive power and percentage, apparent power of different phases, total apparent power, power factor of different phases, average power factor, accumulated electric power, total power of multi-genset; ground current and percentage, unbalanced current and percentage, unbalanced voltage and percentage, voltage harmonic parameter.

NOTE:

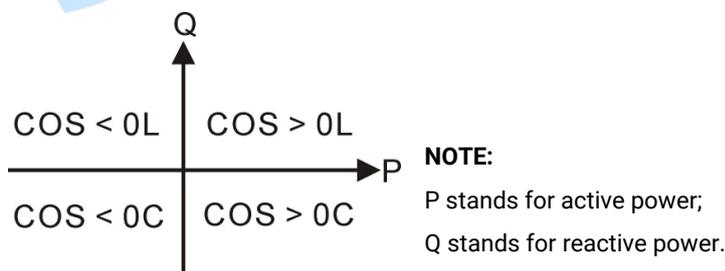


Fig. 2 Power Factor Display Description

Table 6 Power Factor Display Description

Power Factor	Conditions	Active Power	Reactive Power	Remark
COS>0L	P>0,Q>0	Input	Input	Load is resistive induction.
COS>0C	P>0,Q<0	Input	Output	Load is resistive capacitance.
COS<0L	P<0,Q>0	Output	Input	Load equals an under excitation generator.
COS<0C	P<0,Q<0	Output	Output	Load equals an over excitation generator.

NOTES:

1. Input active power, and generator sends electricity to load.
2. Output active power, and load supplies electricity to generator.
3. Input reactive power, and generator sends reactive power to load.
4. Output reactive power, and load sends reactive power to generator.

Bus page includes the following contents:

Phase voltage, wire voltage, frequency, phase sequence; available power.

Sync. page includes the following contents:

Voltage difference, frequency difference, phase difference, active power output and target percentage, reactive power output and target percentage, GOV voltage output percentage, AVR voltage output percentage and MSC status.

Alarm page:

Current alarm information.

NOTE: For ECU alarms and shutdown alarms, if the alarm information is displayed, check the engine according to it. Otherwise, please check the engine manual according to SPN alarm code.

Event log page:

Make records about all start/stop events (alarm events except warnings, manual start/stop events, ECU alarm (warning)) and the real time when events occur;

Table 7 Event Log

Event Types	Items	Remark
Start/Stop	Manual Start	
	Manual Stop	
	Auto Stop	
	Remote off-load Start	
	Remote On-load Start	
	Mains Abnormal Start of Input Port	
	Mains Abnormal Start	
	Scheduled Off-load Start	
	Scheduled On-load Start	
	Demand Start	
	Island Start	
Alarm	Alarm Events Except Warnings	SPN, FMI alarm code for ECU alarm records.
	ECU Alarm (Warning)	

Others page includes the following contents:

Time and date, maintenance countdown (if configured), input/output port status, communication indication and Ethernet configuration (if configured).

About page includes the following contents:

Release software version, hardware version, and product PD number.

4.3.2 USER MENU AND PARAMETER SETTING

Press  key for more than 1s and it enters user menu.

- Parameter Setting

After inputting the correct password (factory default password is 00318) you can enter the parameter setting screen.

- Language

Optional Simplified Chinese, English and others.

- Commissioning

On load, off load and users-defined commissioning are optional. Defined commissioning can be configured regarding load on or load off, commissioning time, and which mode it shall return after commissioning (manual mode, auto mode and stop mode).

- Clear users' accumulation

It can clear accumulated running time A and B, accumulated electric energy A and B.

- Main/Redundancy Controller (Not for HGM9510N)

It is optional as to whether main controller is active or redundancy controller is active.

4.4 DATA ANALYSIS

5 alarms of genset data (except warnings) can be recorded, and the interval of alarm data can be set. 50 items before alarm and 10 items after, a total of 60 real-time data can be recorded and read by PC data analysis.

Real-time Data:

Bus phase voltage/line voltage, bus frequency, Gen phase voltage/line voltage, Gen frequency, current, water temperature, oil pressure, fuel level, speed, battery voltage, active power/reactive power.

4.5 AUTO START/STOP OPERATION

Press the  button and the indicator beside is illuminated, which means the genset is at Auto Start Mode.

Automatic Start Sequence:

- 1) When remote start (on-load) is active, "start delay" timer is initiated;
- 2) "Start Delay" countdown will be displayed on genset status page;
- 3) When start delay is over, preheating relay is energized (if configured), "preheat delay XX s" information will be displayed on genset status page;
- 4) After the above delay, the fuel relay is energized, and then one second later, the starting relay is engaged. During the "start time", if the genset does not start, then fuel relay and starting relay stops outputting, and enter "crank rest time", waiting for next crank;
- 5) Should the start beyond the set attempts, the controller issues "start failure" and stops the genset and at the same time alarm page on LCD displays "start failure alarm";

- 6) If it starts during the attempts, it enters “safety on time”, and during this period low oil pressure, high temperature, under speed and charge alternator failure alarms are all inactive; After “safety on time”, it enters “start idle delay” (if configured);
- 7) During “start idle delay”, under speed, under frequency, under voltage alarms are inhibited. When this delay is over, “warming up delay” is initiated (if configured);
- 8) When single genset is running and “warming up delay” is over, if generator status is normal, its indicator will be illuminated. If generator voltage and frequency have reached on-load requirements, then the generator close relay will be energized; the genset will take load and generator power indicator will be illuminated, and generator will enter normal running status. If voltage or frequency is abnormal, the controller will initiate alarm (alarm information will be displayed on LCD);
- 9) When the gensets is running in parallel and warming up delay is over:
 - a) If bus has no voltage signal, then the controller will issue a close status signal to other gensets waiting for combination in parallel. Then generator close relay will output, avoiding to close the breaker at the same time;
 - b) If bus has voltage or other gensets are already closed, the controller will adjust speed and voltage through GOV and AVR to synchronize the gensets to the bus; when synchronization requirements have been achieved, breaker close signal will be initiated and the genset will be paralleled with the bus. Once they are paralleled, the controller will control the generator to gradually accelerate and share load with other paralleled gensets.

NOTE: When remote start is applied to start (off load), the procedure is the same as the above. But generator close relay is deactivated, and moreover, genset is off load. When remote start is used to start, the genset will start based on the set priority sequence, and then synchronize, put them in parallel and share the load in the bus automatically.

Automatic Stop Sequence:

- 1) When the remote start signal is removed, the “stop delay” is initiated;
- 2) Once this “stop delay” has expired, the controller will ramp the load from the generator to other sets and issue breaker open signal. The “cooling delay” is then initiated. During this time if the remote start signal is active again, then the controller enters paralleled status again; When “cooling delay” is over, it the genset enters “stop idle delay”;
- 3) During “stop idle delay” (if configured), the idle relay is energized;
- 4) “ETS solenoid hold” begins, ETS relay is energized while fuel relay is de-energized, and complete stop is detected automatically;
- 5) “Fail to stop delay” begins, and complete stop is detected automatically;
- 6) When generator is stopped completely, “after stop delay” will be initiated. Otherwise, “fail to stop” alarm is initiated and the corresponding alarm information is displayed on LCD. (If generator stops successfully after “fail to stop” alarm has initiated, “after stop delay” will be initiated and the alarm will be removed.);
- 7) Generator is placed into its standby mode after its “after stop delay”;

4.6 MANUAL START/STOP OPERATION

- 1) **MANUAL START:** Manual mode is selected by pressing the  button; a LED beside the button will be illuminated to confirm the operation; then press  button to start the genset; it can detect crank disconnect condition and generator accelerates to high-speed running automatically. With high

temperature, low oil pressure, over speed and abnormal voltage during generator running, controller can protect genset to stop quickly (please refer to No.3~9 of **Automatic Start Sequence** for detailed procedures).

2) MANUAL STOP: Press  and it can shut down the running generators. (Please refer to No.2~7 of **Automatic Start Sequence** for detailed procedures).

▲NOTE: In “manual mode”, for the procedures of ATS please refer to **Switch Control Procedures** of generator in this manual.

SmartGen

4.7 SWITCH CONTROL PROCEDURES

4.7.1 MANUAL CONTROL PROCEDURES

When controller is in **Manual** mode, the switch control procedures will start through manual transfer procedures. Users can control the loading transfer of ATS via pressing button to switch on or off.

Breaker Close Operation: During genset normal running, press  if generator voltage and frequency have reached on-load requirements.

- 1) When single genset is running, generator closing relay outputs;
- 2) When gensets are running in parallel,
 - a) If bus has no voltage signal, then the controller will issue a close status signal to other gensets waiting for combination in parallel. Then generator close relay will output, avoiding to close the breaker at the same time;
 - b) If bus has voltage or other gensets are already closed, the controller will adjust speed and voltage through GOV and AVR to synchronize the gensets to the bus; when synchronization requirements have been achieved, breaker close signal will be initiated and the genset will be paralleled with the bus. Once they are paralleled, the controller will control the generator to gradually accelerate and share load with other paralleled gensets.

Breaker Open Operation: Press the  button,

- 1) When single genset is running, the controller sends open breaker signal.
- 2) When gensets are running in parallel, the controller shall transfer the load to other gensets and then issue open signal.

4.7.2 AUTOMATIC CONTROL PROCEDURES

When controller is in Auto mode, the switch control procedure is automatic control procedure.

▲NOTE: The auxiliary close input should be configured necessarily and make sure the connection is correct.

5 PROTECTIONS

5.1 CONTROLLER ALARM TYPES

Table 8 Controller Alarm Types

Alarm Type/Action	Open Breaker Directly	Open Breaker After Unloading	Stop Directly	Stop After Cooling	Reset Alarm
Warning	-	-	-	-	Auto
Block	-	-	-	-	Manual
Safety Trip	-	●	-	-	Manual
Safety Trip and Stop	-	●	-	●	Manual
Trip	●	-	-	-	Manual
Trip and Stop	●	-	-	●	Manual
Alarm Shutdown	●	-	●	-	Manual

5.2 WARNING ALARMS

When controller detects the warning alarm, it only issues warning, and the genset does not open and shut down. When the warning signal disappears, it is removed automatically.

Table 9 Warning Alarms

No	Type	Description
1	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate a warning. It is always detected.
2	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate a warning. It is detected after "warming up" and before "stop idle".
3	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold".
4	Gen Over Frequency	When this is enabled, and the controller detects the frequency is above the preset limit, it shall issue a warning. It is always detected.
5	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue a warning. It is detected after "warming up" before "stop idle".
6	Gen Over Voltage	When this is enabled, and the controller detects the voltage is above the preset limit, it shall issue a warning. It is always detected.
7	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue a warning. It is detected after "warming up" before "stop idle".
8	Gen Over Current	When this is enabled, and the controller detects the current is above the preset limit, it shall issue a warning. It is always detected.
9	Unbalanced Current	When this is enabled, and the controller detects the value is above the preset limit, it shall issue a warning. It is always detected.
10	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue a warning. It is always detected.
11	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue a warning. It is always detected.
12	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue a warning. It is always detected.
13	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive

No	Type	Description
		power (negative) is above the preset limit, it shall issue a warning. It is always detected.
14	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue a warning. It is always detected.
15	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue a warning. It is always detected.
16	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold".
17	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold".
18	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue a warning. It is always detected.
19	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold".
20	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue a warning, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
21	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue a warning. It is always detected.
22	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue a warning. It is always detected.
23	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue a warning. It is always detected.
24	Flex. Sensor 1 High	When over high warning is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
25	Flex. Sensor 1 Low	When over low warning is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor;

No	Type	Description
		It is always detected when the sensor is selected as fuel level sensor.
26	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue a warning, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
27	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue a warning. It is always detected.
28	Flex. Sensor 2 High	When over high warning is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
29	Flex. Sensor 2 Low	When over low warning is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
30	Fail to Stop	After "fail to stop delay" is over, if the genset does not stop completely, it will initiate a warning alarm. It is detected when the genset is normally running.
31	Charge Alternator Failure	When this is enabled and the controller detects that charger voltage is below the pre-set limit, it will initiate a warning alarm. It is detected when the genset is normally running.
32	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue a warning signal. It is always detected.
33	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue a warning signal. It is always detected.
34	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate a warning alarm. It is detected when breaker closes.
35	GOV Reach Limit	When the controller's GOV output reaches the upper limit or lower limit, it will initiate a warning alarm. It is detected when the genset is normally running.
36	AVR Reach Limit	When the controller's AVR output reaches the high limit or low limit, it will initiate a warning alarm. It is detected when the genset is normally running.
37	Gen Breaker Alarm	When "Gen Closed Aux" is not set for the controller input port, the controller will initiate a warning alarm. It is always detected.

No	Type	Description
38	Mains Over Freq	When the controller detects that the mains frequency is above the pre-set value, it will initiate a warning alarm. It is detected after "Mains Parallel Mode" is active and after "Gen closed".
39	Mains Under Freq	When the controller detects the mains frequency has fallen below the pre-set value, it will initiate a warning alarm. It is detected after "Mains Parallel Mode" is active and after "Gen closed".
40	Mains Over Voltage	When the controller detects that the mains voltage has exceeded the pre-set value, it will initiate a warning alarm. It is detected after "Mains Parallel Mode" is active and after "Gen closed".
41	Mains Under Voltage	When the controller detects that the mains voltage has fallen below the pre-set value, it will initiate a warning alarm. It is detected after "Mains Parallel Mode" is active and after "Gen closed".
42	Mains ROCOF	When the controller detects mains ROCOF is above the pre-set value, it will initiate a warning alarm. It is detected after "Mains Parallel Mode" is active and after "Gen closed".
43	Mains Vector Shift	When the controller detects mains voltage vector shift is above the pre-set value, it will initiate a warning alarm. It is detected after "Mains Parallel Mode" is active and after "Gen closed".
44	Freq. Error Too High	When the controller detects the generator frequency and busbar frequency is above 8Hz, it will initiate a warning alarm. It is detected during synchronous close.
45	MSC Too Few Sets	When the controller detects the number of the parallel gensets is smaller than the set minimum parallel number, it will initiate a warning alarm. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) controller of parallel gensets is not powered on. It is always detected.
46	Maintenance Due	When this is enabled and countdown time is 0, it will initiate a warning alarm. It is detected when the genset is running.
47	MSC1 Comm. Failure	When the controller detects there is data losing of other gensets in MSC1 bus, it will initiate a warning alarm. It is always detected.
48	MSC2 Comm. Failure	When the controller detects there is data losing of other gensets in MSC2 bus, it will initiate a warning alarm. It is always detected.
49	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the

No	Type	Description
		controller will initiate a warning for the input port. It is detected in the detection range set for the input port.
50	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate a warning. It is detected in the detection range set by the PLC function.
51	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate a warning. It is always detected.
52	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate a warning. It is detected in the detection range set in the input.
53	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate a warning. It is always detected.
54	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot receive the communication data, it will initiate a warning. It is always detected.
55	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate a warning alarm. It is detected after "safety on time" before "ETS solenoid hold".
56	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate a warning alarm. It is detected after "safety on time" before "ETS solenoid hold".
57	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate a warning alarm. It is detected after "safety on time" before "ETS solenoid hold".
58	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue a warning. It is always detected.
59	AIN24 Sensor High	When over high warning is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
60	AIN24 Sensor Low	When over low warning is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue a warning. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
61	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set value, it will initiate a warning alarm.

No	Type	Description
		It is always detected.
62	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set value, it will initiate a warning alarm. It is always detected.
63	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set value, it will initiate a warning alarm. It is always detected.
64	Ground Relay Close Failure	When controller detects that ground relay close failure, that is, breaker close input is inactive after ground relay close outputs, and then it will initiate a warning alarm. It is detected when ground relay is closing.
65	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate a warning alarm. It is detected when ground relay is opening.

5.3 BLOCK ALARMS

When the controller detects block signals, it only issues warning and the genset does not shut down and not open. Users need to reset alarms manually.

Table 10 Block Alarms

No	Type	Description
1	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate a block alarm. It is always detected.
2	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate a block alarm. It is detected after "warming up" and before "stop idle".
3	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
4	Gen Over Frequency	When this is enabled, and the controller detects the genset frequency is above preset limit, it shall issue a block alarm. It is always detected.
5	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue a block alarm. It is detected after "warming up" and before "stop idle".
6	Gen Over Voltage	When this is enabled, and the controller detects the genset voltage is above preset limit, it shall issue a block alarm. It is always detected.
7	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue a block alarm. It is detected after "warming up" and before "stop idle".
8	Gen Over Current	When this is enabled, and the controller detects the genset current is above preset limit, it shall issue a block alarm. It is always detected.
9	Unbalanced Current	When this is enabled, and the controller detects the unbalanced current is above preset limit, it shall issue a block alarm. It is always detected.
10	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue a block alarm. It is always detected.
11	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue a block alarm. It is always detected.
12	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue a block alarm. It is always detected.
13	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive

No	Type	Description
		power (negative) is above the preset limit, it shall issue a block alarm. It is always detected.
14	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue a block alarm. It is always detected.
15	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.
16	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
17	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
18	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.
19	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
20	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue a block alarm, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
21	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.
22	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue a block alarm. It is always detected.
23	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.
24	Flex. Sensor 1 High	When over high block alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
25	Flex. Sensor 1 Low	When over low block alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor;

No	Type	Description
		It is always detected when the sensor is selected as fuel level sensor.
26	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue a block alarm, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
27	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.
28	Flex. Sensor 2 High	When over high block alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
29	Flex. Sensor 2 Low	When over low block alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
30	Charge Alternator Failure	When this is enabled, and the controller detects the charger voltage value is below the preset limit, it shall issue a block alarm. It is detected when the genset is normally running.
31	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue a block signal. It is always detected.
32	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue a block signal. It is always detected.
33	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate a block alarm. It is detected when breaker closes.
34	MSC Too Few Sets	When the controller detects the number of the paralleled gensets is smaller than the set minimum paralleled number, it will initiate a block alarm. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) the controller of paralleled gensets is not powered on. It is always detected.
35	Maintenance Due	When this is enabled and countdown time is 0, it will initiate a block alarm. It is detected when the genset is running.
36	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the controller will initiate a block signal for the input port. It is detected in the detection range set for the input port.

No	Type	Description
37	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate a block signal. It is detected in the detection range set by the PLC function.
38	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate a block signal. It is always detected.
39	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate a block signal. It is detected in the detection range set in the input.
40	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate a block signal. It is always detected.
41	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot receive the communication data, it will initiate a block signal. It is always detected.
42	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
43	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
44	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate a block alarm. It is detected after "safety on time" before "ETS solenoid hold".
45	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.
46	AIN24 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
47	AIN24 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
48	AIN8 Comm. Failure	When AIN8 communication is enabled and the controller cannot receive the communication data, it will initiate a block signal. It is always detected.
49	AIN8 Sensor Open	When the controller detects the sensor circuit is open, it shall issue a block alarm. It is always detected.

No	Type	Description
50	AIN8 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
51	AIN8 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue a block alarm. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
52	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set limit, it will initiate a block alarm. It is always detected.
53	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set limit, it will initiate a block alarm. It is always detected.
54	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set limit, it will initiate a block alarm. It is always detected.
55	Ground Relay Close Failure	When controller detects that ground relay close failure, that is, breaker close input is inactive after ground relay close outputs, and then it will initiate a block alarm. It is detected when ground relay is closing.
56	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate a block alarm. It is detected when ground relay is opening.
57	Main Controller Failure	When the controller detects the main controller fails, it will initiate a block alarm.

5.4 SAFETY TRIP ALARMS

When controller detects safety trip signals, it will open breaker after soft unloading but not stop the genset. Users need to reset alarms manually.

Table 11 Safety Trip Alarms

No	Type	Description
1	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate an alarm signal. It is always detected.
2	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate an alarm signal. It is detected after "warming up" and before "stop idle".
3	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
4	Gen Over Frequency	When this is enabled, and the controller detects the genset frequency is above preset limit, it shall issue an alarm signal. It is always detected.
5	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
6	Gen Over Voltage	When this is enabled, and the controller detects the genset voltage is above preset limit, it shall issue an alarm signal. It is always detected.
7	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
8	Gen Over Current	When this is enabled, and the controller detects the genset current is above preset limit, it shall issue an alarm signal. It is always detected.
9	Unbalanced Current	When this is enabled, and the controller detects the unbalanced current is above preset limit, it shall issue an alarm signal. It is always detected.
10	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue an alarm signal. It is always detected.
11	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
12	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue an alarm signal. It is always detected.
13	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive

No	Type	Description
		power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
14	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue an alarm signal. It is always detected.
15	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
16	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
17	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
18	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
19	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
20	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
21	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
22	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue an alarm signal. It is always detected.
23	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
24	Flex. Sensor 1 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
25	Flex. Sensor 1 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor;

No	Type	Description
		It is always detected when the sensor is selected as fuel level sensor.
26	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
27	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
28	Flex. Sensor 2 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
29	Flex. Sensor 2 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
30	Charge Alternator Failure	When this is enabled, and the controller detects the charger voltage value is below the preset limit, it shall issue an alarm signal. It is detected when the genset is normally running.
31	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue an alarm signal. It is always detected.
32	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue an alarm signal. It is always detected.
33	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate an alarm signal. It is detected when breaker closes.
34	MSC Too Few Sets	When the controller detects the number of the paralleled gensets is smaller than the set minimum paralleled number, it will initiate an alarm signal. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) the controller of paralleled gen-sets is not powered on. It is always detected.
35	Maintenance Due	When this is enabled and countdown time is 0, it will initiate an alarm signal. It is detected when the genset is running.
36	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the controller will initiate an alarm signal for the input port. It is detected in the detection range set for the input port.

No	Type	Description
37	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set by the PLC function.
38	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal I. It is always detected.
39	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set in the input.
40	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
41	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
42	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
43	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
44	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
45	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
46	AIN24 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
47	AIN24 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
48	AIN8 Comm. Failure	When AIN8 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
49	AIN8 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.

No	Type	Description
50	AIN8 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
51	AIN8 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
52	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set limit, it will initiate an alarm signal. It is always detected.
53	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
54	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
55	Ground Relay Close Failure	When controller detects that ground relay close failure, that is, breaker close input is inactive after ground relay close outputs, and then it will initiate an alarm signal. It is detected when ground relay is closing.
56	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate an alarm signal. It is detected when ground relay is opening.

5.5 SAFETY TRIP AND STOP ALARMS

When controller detects safety trip and stop signals, it will open breaker after soft unloading and genset stops after cooling. Users need to reset alarms manually.

Table 12 Safety Trip and Stop Alarms

No	Type	Description
1	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate an alarm signal. It is always detected.
2	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate an alarm signal. It is detected after "warming up" and before "stop idle".
3	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue an

No	Type	Description
		alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
4	Gen Over Frequency	When this is enabled, and the controller detects the genset frequency is above preset limit, it shall issue an alarm signal. It is always detected.
5	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
6	Gen Over Voltage	When this is enabled, and the controller detects the genset voltage is above preset limit, it shall issue an alarm signal. It is always detected.
7	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
8	Gen Over Current	When this is enabled, and the controller detects the genset current is above preset limit, it shall issue an alarm signal. It is always detected.
9	Unbalanced Current	When this is enabled, and the controller detects the unbalanced current is above preset limit, it shall issue an alarm signal. It is always detected.
10	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue an alarm signal. It is always detected.
11	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
12	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue an alarm signal. It is always detected.
13	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
14	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue an alarm signal. It is always detected.
15	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
16	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
17	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue an alarm signal.

No	Type	Description
		It is detected after "safety on time" before "ETS solenoid hold".
18	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
19	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
20	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
21	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
22	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue an alarm signal. It is always detected.
23	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
24	Flex. Sensor 1 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
25	Flex. Sensor 1 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
26	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
27	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
28	Flex. Sensor 2 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor;

No	Type	Description
		It is always detected when the sensor is selected as fuel level sensor.
29	Flex. Sensor 2 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
30	Charge Alternator Failure	When this is enabled, and the controller detects the charger voltage value is below the preset limit, it shall issue an alarm signal. It is detected when the genset is normally running.
31	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue an alarm signal. It is always detected.
32	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue an alarm signal. It is always detected.
33	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate an alarm signal. It is detected when breaker closes.
34	MSC Too Few Sets	When the controller detects the number of the paralleled gensets is smaller than the set minimum paralleled number, it will initiate an alarm signal. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) the controller of paralleled gen-sets is not powered on. It is always detected.
35	Maintenance Due	When this is enabled and countdown time is 0, it will initiate an alarm signal. It is detected when the genset is running.
36	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the controller will initiate an alarm signal for the input port. It is detected in the detection range set for the input port.
37	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set by the PLC function.
38	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
39	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set in the input.
40	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
41	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot

No	Type	Description
		receive the communication data, it will initiate an alarm signal. It is always detected.
42	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
43	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
44	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
45	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
46	AIN24 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
47	AIN24 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
48	AIN8 Comm. Failure	When AIN8 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
49	AIN8 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
50	AIN8 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
51	AIN8 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
52	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set limit, it will initiate an alarm signal.

No	Type	Description
		It is always detected.
53	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
54	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
55	Ground Relay Close Failure	When controller detects that ground relay close failure, that is, breaker close input is inactive after ground relay close outputs, and then it will initiate an alarm signal. It is detected when ground relay is closing.
56	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate an alarm signal. It is detected when ground relay is opening.

5.6 TRIP ALARMS

When controller detects trip alarms, it will open breaker directly but not stop the genset. Users need to reset alarms manually.

Table 13 Trip Alarms

No	Type	Description
1	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate an alarm signal. It is always detected.
2	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate an alarm signal. It is detected after "warming up" and before "stop idle".
3	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
4	Gen Over Frequency	When this is enabled, and the controller detects the genset frequency is above preset limit, it shall issue an alarm signal. It is always detected.
5	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
6	Gen Over Voltage	When this is enabled, and the controller detects the genset voltage is above preset limit, it shall issue an alarm signal. It is always detected.
7	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
8	Gen Over Current	When this is enabled, and the controller detects the genset current is above preset limit, it shall issue an alarm signal. It is always detected.
9	Unbalanced Current	When this is enabled, and the controller detects the unbalanced current is above preset limit, it shall issue an alarm signal. It is always detected.
10	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue an alarm signal. It is always detected.
11	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
12	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue an alarm signal. It is always detected.
13	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive

No	Type	Description
		power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
14	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue an alarm signal. It is always detected.
15	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
16	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
17	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
18	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
19	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
20	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
21	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
22	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue an alarm signal. It is always detected.
23	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
24	Flex. Sensor 1 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
25	Flex. Sensor 1 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor;

No	Type	Description
		It is always detected when the sensor is selected as fuel level sensor.
26	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
27	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
28	Flex. Sensor 2 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
29	Flex. Sensor 2 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
30	Charge Alternator Failure	When this is enabled, and the controller detects the charger voltage value is below the preset limit, it shall issue an alarm signal. It is detected when the genset is normally running.
31	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue an alarm signal. It is always detected.
32	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue an alarm signal. It is always detected.
33	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate an alarm signal. It is detected when breaker closes.
34	Volt. Asynchrony	After gen is closed, the voltage difference between busbar and generator is above the preset synchronous voltage, the controller shall issue an alarm signal. It is detected after breaker is closed.
35	Freq. Asynchrony	After gen is closed, the frequency difference between busbar and generator is above the preset synchronous frequency, the controller shall issue an alarm signal. It is detected after breaker is closed.
36	Phase Asynchrony	After gen is closed, the voltage phase difference between busbar and generator is above the preset synchronous phase, the controller shall issue an alarm signal. It is detected after breaker is closed.

No	Type	Description
37	Gen Close Failure	When the controller detects gen close failure, that is, after close output the close status input is inactive, it will initiate an alarm signal. It is detected after breaker is closed.
38	Gen Open Failure	When the controller detects gen open failure, that is, after open output the open status input is inactive, it will initiate an alarm signal. It is detected after breaker is closed.
39	MSC Too Few Sets	When the controller detects the number of the paralleled gensets is smaller than the set minimum paralleled number, it will initiate an alarm signal. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) the controller of paralleled gen-sets is not powered on. It is always detected.
40	Maintenance Due	When this is enabled and countdown time is 0, it will initiate an alarm signal. It is detected when the genset is running.
41	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the controller will initiate an alarm signal for the input port. It is detected in the detection range set for the input port.
42	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set by the PLC function.
43	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
44	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set in the input.
45	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
46	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
47	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
48	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
49	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
50	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an

No	Type	Description
		alarm signal. It is always detected.
51	AIN24 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
52	AIN24 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
53	AIN8 Comm. Failure	When AIN8 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
54	AIN8 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
55	AIN8 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
56	AIN8 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
57	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set limit, it will initiate an alarm signal. It is always detected.
58	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
59	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
60	Ground Relay Close Failure	When controller detects that ground relay close failure, that is, breaker close input is inactive after ground relay close outputs, and then it will initiate an alarm signal. It is detected when ground relay is closing.

No	Type	Description
61	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate an alarm signal. It is detected when ground relay is opening.

SmartGen

5.7 TRIP AND STOP ALARM

When the controller detects trip and stop signals, it will open breaker directly and stop the genset after cooling. Users need to reset alarms manually.

Table 14 Trip and Stop Alarms

No	Type	Description
1	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate an alarm signal. It is always detected.
2	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate an alarm signal. It is detected after "warming up" and before "stop idle".
3	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
4	Gen Over Frequency	When this is enabled, and the controller detects the genset frequency is above preset limit, it shall issue an alarm signal. It is always detected.
5	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
6	Gen Over Voltage	When this is enabled, and the controller detects the genset voltage is above preset limit, it shall issue an alarm signal. It is always detected.
7	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
8	Gen Over Current	When this is enabled, and the controller detects the genset current is above preset limit, it shall issue an alarm signal. It is always detected.
9	Unbalanced Current	When this is enabled, and the controller detects the unbalanced current is above preset limit, it shall issue an alarm signal. It is always detected.
10	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue an alarm signal. It is always detected.
11	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
12	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue an alarm signal. It is always detected.
13	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive

No	Type	Description
		power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
14	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue an alarm signal. It is always detected.
15	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
16	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
17	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
18	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
19	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
20	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
21	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
22	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue an alarm signal. It is always detected.
23	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
24	Flex. Sensor 1 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
25	Flex. Sensor 1 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor;

No	Type	Description
		It is always detected when the sensor is selected as fuel level sensor.
26	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
27	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
28	Flex. Sensor 2 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
29	Flex. Sensor 2 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
30	Charge Alternator Failure	When this is enabled, and the controller detects the charger voltage value is below the preset limit, it shall issue an alarm signal. It is detected when the genset is normally running.
31	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue an alarm signal. It is always detected.
32	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue an alarm signal. It is always detected.
33	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate an alarm signal. It is detected when breaker closes.
34	Mains Over Freq.	When the controller detects mains frequency is above the set limit, it shall issue an alarm signal. It is detected after mains parallel mode is active and gen is closed.
35	Mains Under Freq.	When the controller detects mains frequency is below the set limit, it shall issue an alarm signal. It is detected after mains parallel mode is active and gen is closed.
36	Mains Over Voltage	When the controller detects mains voltage is above the set limit, it shall issue an alarm signal. It is detected after mains parallel mode is active and gen is closed.
37	Mains Under Voltage	When the controller detects mains voltage is below the set limit, it shall issue an alarm signal. It is detected after mains parallel mode is active and gen is closed.

No	Type	Description
38	Mains ROCOF	When the controller detects mains ROCOF is above the set limit, it shall issue an alarm signal. It is detected after mains parallel mode is active and gen is closed.
39	Mains Vector Shift	When the controller detects mains voltage vector change is above the set limit, it shall issue an alarm signal. It is detected after mains parallel mode is active and gen is closed.
40	MSC Too Few Sets	When the controller detects the number of the paralleled gensets is smaller than the set minimum paralleled number, it will initiate an alarm signal. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) the controller of paralleled gen-sets is not powered on. It is always detected.
41	Maintenance Due	When this is enabled and countdown time is 0, it will initiate an alarm signal. It is detected when the genset is running.
42	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the controller will initiate an alarm signal for the input port. It is detected in the detection range set for the input port.
43	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set by the PLC function.
44	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
45	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set in the input.
46	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
47	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
48	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
49	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
50	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
51	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an

No	Type	Description
		alarm signal. It is always detected.
52	AIN24 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
53	AIN24 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
54	AIN8 Comm. Failure	When AIN8 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
55	AIN8 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
56	AIN8 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
57	AIN8 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
58	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set limit, it will initiate an alarm signal. It is always detected.
59	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
60	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
61	MSC Mains Decoupling	When the controller receives "MSC Mains Decoupling" alarm, it shall issue an alarm signal. It is always detected.
62	Ground Relay Close	When the controller detects that ground relay close failure, that is,

No	Type	Description
	Failure	breaker close input is inactive after ground relay close outputs, and then it will initiate an alarm signal. It is detected when ground relay is closing.
63	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate an alarm signal. It is detected when ground relay is opening.
64	Static Parallel Failure	After the controller starts the genset, if it doesn't reach the load speed in the preset delay, the controller shall issue an alarm signal. It is detected when static parallel mode is active.

SmartGen

5.8 SHUTDOWN ALARMS

When controller detects shutdown alarms, it will send signal to open breaker and shut down the generator. Users need to reset alarms manually.

Table 15 Shutdown Alarms

No	Type	Description
1	Emergency Stop	When the controller detects emergency stop signals, it will initiate a shutdown alarm. It is always detected.
2	Over Speed	When this is enabled, and the controller detects that the genset speed is above the pre-set limit, it will initiate an alarm signal. It is always detected.
3	Under Speed	When this is enabled and the controller detects that the genset speed is below the pre-set limit, it will initiate an alarm signal. It is detected after "warming up" and before "stop idle".
4	Loss of Speed Signal	When the controller detects the genset speed is 0, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
5	Gen Over Frequency	When this is enabled, and the controller detects the genset frequency is above preset limit, it shall issue an alarm signal. It is always detected.
6	Gen Under Frequency	When this is enabled, and the controller detects the frequency is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
7	Gen Over Voltage	When this is enabled, and the controller detects the genset voltage is above preset limit, it shall issue an alarm signal. It is always detected.
8	Gen Under Voltage	When this is enabled, and the controller detects the voltage is below the preset limit, it shall issue an alarm signal. It is detected after "warming up" and before "stop idle".
9	Fail to Start	If the genset doesn't start during the start attempts, the controller shall issue an alarm signal.
10	Gen Over Current	When this is enabled, and the controller detects the genset current is above preset limit, it shall issue an alarm signal. It is always detected.
11	Unbalanced Current	When this is enabled, and the controller detects the unbalanced current is above preset limit, it shall issue an alarm signal. It is always detected.
12	Earth Fault	When this is enabled, and the controller detects the earth current is above the preset limit, it shall issue an alarm signal. It is always detected.
13	Reverse Power	When this is enabled, and the controller detects the reverse power (negative) is above the preset limit, it shall issue an alarm signal.

No	Type	Description
		It is always detected.
14	Over Power	When this is enabled, and the controller detects the genset power (positive) is above the preset limit, it shall issue an alarm signal. It is always detected.
15	Loss Excitation Fault	When this is enabled, and the controller detects the genset reactive power (negative) is above the preset limit, it shall issue an alarm signal. It is always detected.
16	ECU Comm. Failure	When the controller doesn't receive the engine alarm signal from J1939, it shall issue an alarm signal. It is always detected.
17	ECU Alarm	When the controller receives the engine alarm signal from J1939, it shall issue an alarm signal. It is always detected.
18	Aux High Temp Alarm	When the controller detects that this alarm in the input port is active, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
19	Aux Low OP Alarm	When the controller detects that this alarm in the input port is active, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
20	MSC ID Error	When the controller detects MSC bus has the same IDs, it shall issue shutdown alarm signal. It is always detected.
21	Volt Bus Error	When the controller detects other genset are closed, but busbar voltage is below the uncharged busbar voltage, it shall issue an alarm signal. It is detected when gen is closed.
22	Gen Phase Seq Wrong	When the controller detects phase sequence error, it shall issue an alarm signal. It is always detected.
23	Bus Phase Seq Wrong	When the controller detects busbar sequence error, it shall issue an alarm signal. It is always detected.
24	Temp. Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
25	Engine Temp High	When this is enabled, and the controller detects the temp. is above the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
26	Engine Temp Low	When this is enabled, and the controller detects the temp. is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
27	Oil Pressure Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.

No	Type	Description
28	Oil Pressure Low	When this is enabled, and the controller detects the pressure is below the preset limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
29	Oil Pressure Sensor Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
30	Fuel Level Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
31	Fuel Level Low	When this is enabled, and the controller detects the level is below the preset limit, it shall issue an alarm signal. It is always detected.
32	Flex. Sensor 1 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
33	Flex. Sensor 1 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
34	Flex. Sensor 1 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
35	Flex. Sensor 1 Wrong	When voltage or current input is selected for the curve type of the controller, and the controller detects input signal is abnormal, it shall issue an alarm signal, and meanwhile the curve is transferred to resistor type to prevent damaging the controller. It is always detected.
36	Flex. Sensor 2 Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
37	Flex. Sensor 2 High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
38	Flex. Sensor 2 Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset low limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the

No	Type	Description
		sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
39	Charge Alternator Failure	When this is enabled, and the controller detects the charger voltage value is below the preset limit, it shall issue an alarm signal. It is detected when the genset is normally running.
40	Battery Over Voltage	When this is enabled, and the controller detects the battery voltage is above the preset limit, it shall issue an alarm signal. It is always detected.
41	Battery Under Voltage	When this is enabled, and the controller detects the battery voltage is below the preset limit, it shall issue an alarm signal. It is always detected.
42	Fail to Sync.	If the controller doesn't detect sync. signal within the pre-set time, it will initiate an alarm signal. It is detected when closes.
43	MSC Too Few Sets	When the controller detects the number of the paralleled gensets is smaller than the set minimum paralleled number, it will initiate an alarm signal. There are 2 possible reasons: a) the communication wire between the controllers is detached, leading to communication interrupt. b) the controller of paralleled gen-sets is not powered on. It is always detected.
44	Maintenance Due	When this is enabled and countdown time is 0, it will initiate an alarm signal. It is detected when the genset is running.
45	Low Coolant Level	When the controller detects Low Coolant Level in the input port is active, it shall issue an alarm signal. It is always detected.
46	Detonation Alarm	When the controller detects Detonation Alarm in the input port is active, it shall issue an alarm signal. It is always detected.
47	Gas Leakage Alarm	When the controller detects Gas Leakage Alarm in the input port is active, it shall issue an alarm signal. It is always detected.
48	Digital Input Alarm	When the digital input port is set users-defined and if it is active, the controller will initiate an alarm signal for the input port. It is detected in the detection range set for the input port.
49	PLC Function Alarm	When PLC function is set users-defined and if it is active, the controller will initiate an alarm signal. It is detected in the detection range set by the PLC function.
50	DIN16 Comm. Failure	When DIN16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
51	DIN16 Input Alarm	When DIN16 input is set users-defined and if it is active, the controller will initiate an alarm signal.

No	Type	Description
		It is detected in the detection range set in the input.
52	DOUT16 Comm. Failure	When DOUT16 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
53	AIN24 Comm. Failure	When AIN24 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
54	AIN24 Cylinder Temp. High	When this is enabled and the controller detects cylinder temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
55	AIN24 Exhaust Temp. High	When this is enabled and the controller detects exhaust temperature has exceeded the pre-set value, it will initiate an alarm signal. It is detected after 'safety on time' before 'ETS solenoid hold'.
56	AIN24 Cylinder Temp. Difference High	When this is enabled and the controller detects cylinder temp. difference has exceeded the pre-set value, it will initiate an alarm signal. It is detected after "safety on time" before "ETS solenoid hold".
57	AIN24 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
58	AIN24 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
59	AIN24 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
60	AIN8 Comm. Failure	When AIN8 communication is enabled and the controller cannot receive the communication data, it will initiate an alarm signal. It is always detected.
61	AIN8 Sensor Open	When the controller detects the sensor circuit is open, it shall issue an alarm signal. It is always detected.
62	AIN8 Sensor High	When over high alarm is enabled, and the controller detects the sensor value is above the preset upper limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
63	AIN8 Sensor Low	When over low alarm is enabled, and the controller detects the sensor value is below the preset lower limit, it shall issue an alarm signal. It is detected after "safety on time" before "ETS solenoid hold" when the

No	Type	Description
		sensor is selected as temperature sensor and pressure sensor; It is always detected when the sensor is selected as fuel level sensor.
64	Power Factor Low	When this is enabled and the controller detects that the generator power factor has fallen below the pre-set limit, it will initiate an alarm signal. It is always detected.
65	THD High	When this is enabled and the controller detects that the THD has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
66	Gen Volt Unbalance	When this is enabled and the controller detects that the voltage unbalanced value has exceeded the pre-set limit, it will initiate an alarm signal. It is always detected.
67	Ground Relay Close Failure	When the controller detects that ground relay close failure, that is, breaker close input is inactive after ground relay close outputs, and then it will initiate an alarm signal. It is detected when ground relay is closing.
68	Ground Relay Open Failure	When controller detects that ground relay open failure, that is, breaker open input is inactive after ground relay open outputs, and then it will initiate an alarm signal. It is detected when ground relay is opening.

6 WIRING CONNECTION

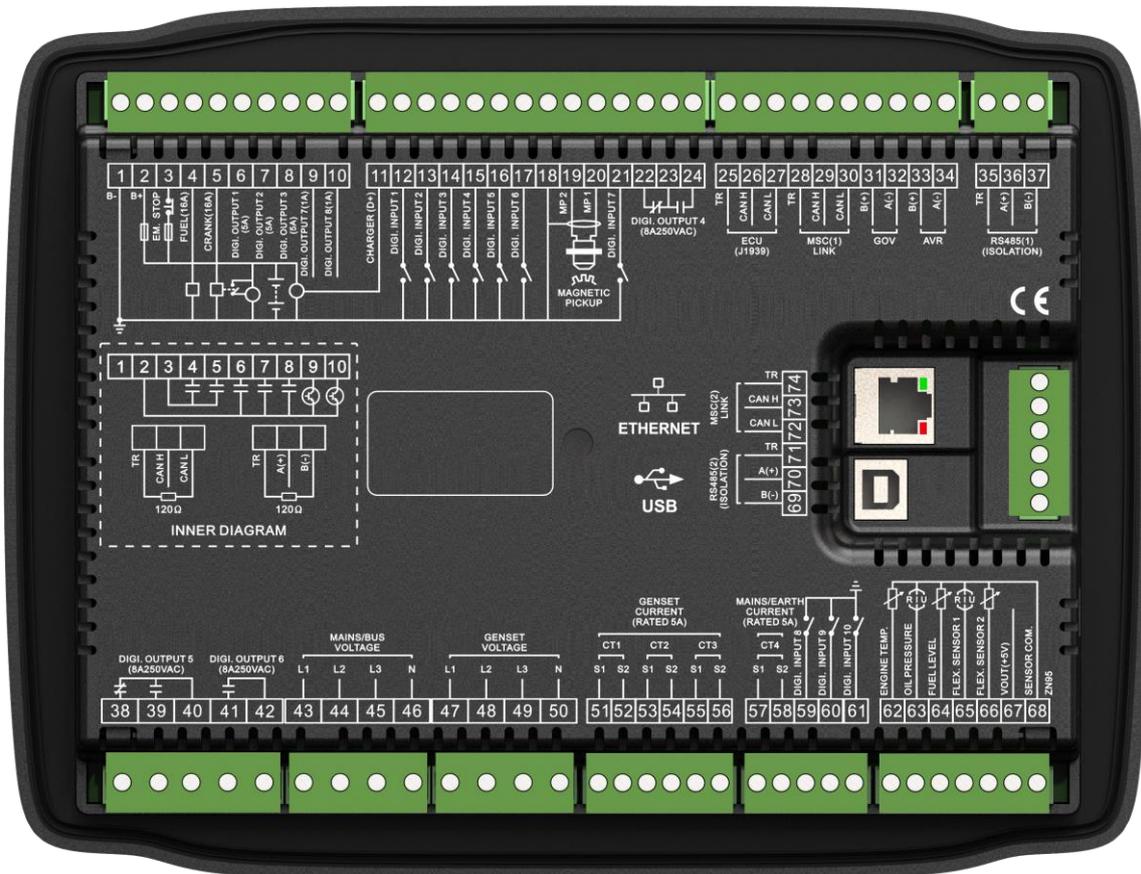


Fig. 3 HGM9530N Controller Rear Panel

Table 16 Terminal Connection Description

No.	Functions	Cable Size	Remark
1	B-	2.5mm ²	Connect with starter battery negative.
2	B+	2.5mm ²	Connect with starter battery positive. If wire length is over 30m, it's better to double wires in parallel. Max. 20A fuse is recommended.
3	Emergency stop	2.5mm ²	Connect with B+ via emergency stop button.
4	Fuel relay	1.5mm ²	B+ is supplied by 3 points, rated 16A.
5	Crank relay	1.5mm ²	B+ is supplied by 3 points, rated 16A. Connect to starter coil.
6	Digi. output 1	1.5mm ²	B+ is supplied by 2 points, rated 5A.
7	Digi. output 2	1.5mm ²	B+ is supplied by 2 points, rated 5A.
8	Digi. output 3	1.5mm ²	B+ is supplied by 2 points, rated 5A.
9	Digi. output 7	1.5mm ²	B+ is supplied by 2 points, rated 1A.
10	Digi. output 8	1.5mm ²	B+ is supplied by 2 points, rated 1A.
11	Charger (D+)	1.0mm ²	Connect with Charger D+ (WL) terminal. If this terminal doesn't exist, hang it in the air.

No.	Functions	Cable Size	Remark
12	Digi. input 1	1.0mm ²	Ground connected is active (B-).
13	Digi. input 2	1.0mm ²	Ground connected is active (B-).
14	Digi. input 3	1.0mm ²	Ground connected is active (B-).
15	Digi. input 4	1.0mm ²	Ground connected is active (B-).
16	Digi. input 5	1.0mm ²	Ground connected is active (B-).
17	Digi. input 6	1.0mm ²	Ground connected is active (B-).
18	Magnetic pickup shield	0.5mm ²	Connect with speed sensor, and shielding line is recommended. B- is already connected with speed sensor input 2 in the inside controller.
19	MP2		
20	MP1		
21	Digi. input 7	1.0mm ²	Ground connected is active (B-).
22	Digi. output 4	1.5mm ²	Normally close output, rated 8A.
23			Public points of relay.
24			Normally open output, rated 8A.
25	ECU TR	/	Impedance-120Ω shielding wire is recommended, and the single-end shall be earth connected. Short connect TR with H and then connect to 120Ω terminal resistor.
26	ECU CAN H	0.5mm ²	
27	ECU CAN L	0.5mm ²	
28	MSC(1) TR	/	Impedance-120Ω shielding wire is recommended, and the single-end shall be earth connected. Short connect TR with H and then connect to 120Ω terminal resistor.
29	MSC(1) CAN H	0.5mm ²	
30	MSC(1) CAN L	0.5mm ²	
31	GOV B(+)	0.5mm ²	Shielding wire is recommended. Shielding layer shall be earth connected at GOV end.
32	GOV A(-)	0.5mm ²	
33	AVR B(+)	0.5mm ²	Shielding wire is recommended. Shielding layer shall be earth connected at AVR end.
34	AVR A(-)	0.5mm ²	
35	RS485(1) TR	/	Impedance-120Ω shielding wire is recommended, and the single-end shall be earth connected. Short connect TR with A(+) and then connect to 120Ω terminal resistor.
36	RS485(1) A(+)	0.5mm ²	
37	RS485(1) B(-)	0.5mm ²	
38	Digi. output 5	1.5mm ²	Normally close output, rated 8A.
39		1.5mm ²	Normally open output, rated 8A.
40		1.5mm ²	Public points of relay.
41		1.5mm ²	Normally open output, rated 8A.
42	Digi. output 6	1.5mm ²	Public points of relay.
43	Bus A-phase voltage input	1.0mm ²	Connect to A-phase of bus (2A fuse is recommended).
44	Bus B-phase voltage input	1.0mm ²	Connect to B-phase of bus (2A fuse is recommended).
45	Bus C-phase voltage input	1.0mm ²	Connect to C-phase of bus (2A fuse is recommended).
46	Bus N-wire input	1.0mm ²	Connect to N-wire of bus.
47	Genset A-phase voltage input	1.0mm ²	Connect to A-phase of genset (2A fuse is recommended).
48	Genset B-phase voltage input	1.0mm ²	Connect to B-phase of genset (2A fuse is recommended).

No.	Functions	Cable Size	Remark
49	Genset C-phase voltage input	1.0mm ²	Connect to C-phase of genset (2A fuse is recommended).
50	Genset N-wire input	1.0mm ²	Connect to N-wire of genset.
51	CT A-phase input	1.5mm ²	Outside connect to secondary coil of current transformer (rated 5A).
52		1.5mm ²	
53	CT B-phase input	1.5mm ²	Outside connect to secondary coil of current transformer (rated 5A).
54		1.5mm ²	
55	CT C-phase input	1.5mm ²	Outside connect to secondary coil of current transformer (rated 5A).
56		1.5mm ²	
57	Earth CT input	1.5mm ²	Outside connect to secondary coil of current transformer (rated 5A).
58		1.5mm ²	
59	Digi. input 8	1.0mm ²	Ground connected is active (B-).
60	Digi. input 9	1.0mm ²	Ground connected is active (B-).
61	Digi. input 10	1.0mm ²	Ground connected is active (B-).
62	Engine Temperature	1.0mm ²	Connect to temperature resistance sensor.
63	Oil pressure	1.0mm ²	Connect to engine oil pressure sensor. Voltage type (0-5V), current type (4mA-20mA) and resistance sensor can be chosen.
64	Fuel level	1.0mm ²	Connect to fuel level resistance sensor.
65	Flex. sensor 1	1.0mm ²	Connect to temp./fuel level/pressure type sensor. Voltage type (0-5V), current type (4-20mA) and resistance sensor can be chosen.
66	Flex. sensor 2	1.0mm ²	Connect to temp./fuel level/pressure type sensor.
67	VOUT(+5V)	1.0mm ²	Provide +5V voltage for voltage type sensor, and current is below 50mA.
68	Sensor COM.	/	Sensor public terminal, and B- is already connected in the controller.
69	RS485(2) B(-)	0.5mm ²	Impedance-120Ω shielding wire is recommended, and the single-end shall be earth connected. Short connect TR with A(+) and then connect to 120Ω terminal resistor.
70	RS485(2) A(+)	0.5mm ²	
71	RS485(2) TR	/	
72	MSC(2) CAN L	0.5mm ²	Impedance-120Ω shielding wire is recommended, and the single-end shall be earth connected. Short connect TR with H and then connect to 120Ω terminal resistor. (Not available for HGM9510N)
73	MSC(2) CAN H	0.5mm ²	
74	MSC(2) TR	/	

NOTE: USB ports on the controller rear panel are configurable parameter ports, and users can directly program the controller on PC. ETHERNET port on the controller rear panel is parameter programming and monitoring port, and it can be programmed and monitored on PC.

7 SCOPES AND DEFINITIONS OF PROGRAMMABLE PARAMETERS

7.1 CONTENTS AND SCOPES OF PARAMETERS

Table 17 Parameter Configuration

No.	Items	Parameters	Defaults	Description
Module Setting				
1.	Power On Mode	(0-2)	0	0: Stop Mode 1: Manual Mode 2: Auto Mode
2.	RS485(1)	(0-3)	2	0: 2400bps; 1: 4800bps; 2: 9600bps; 3: 19200bps.
		(1-254)	1	Controller address for remote monitoring
		(0-1)	0	0: 2-bit Stop Bit 1: 1-bit Stop Bit
3.	Language	(0-2)	0	0: Simplified Chinese 1: English 2: Other
4.	Password	(0-65535)	00318	It is used to enter advanced parameter setting.
5.	Daylight Saving Time	(0-1)	0	0: Disable 1: Enable Start and end time for this can be set.
6.	Date and Time			It is used for date and time settings.
7.	Temperature Unit	(0-1)	0	0: °C; 1: °F
8.	Pressure Unit	(0-2)	0	0: kPa; 1: psi ; 2: bar
9.	Backlight Time	(0-3600)s	300	
10.	Non-parallel Mode	(0-1)	0	0: Disable 1: Enable
11.	J1939-75	(0-1)	0	0: Disable 1: Enable
12.	Alarm Data Interval	(0-60.0)s	0.1	
13.	MSC2	(0-1)	0	0: Disable 1: Enable When it is enabled, MSC1 works with MSC2 in parallel. (Not available for HGM9510N)
14.	Main/Redundancy	(0-2)	0	0: Single Controller 1: Main Controller 2: Redundancy Controller (Not available for HGM9510N)
15.	Fn Function	(0-10)	0	0: Fn Button 1: Stop Button 2: Start Button 3: Manual Button 4: Auto Button 5: Close Button

No.	Items	Parameters	Defaults	Description
				6: Open Button 7: Power Output 8: Tier4 Control 9: Reserved 10: Reserved
16.	Start Interface	(0-1)	0	0: Disable 1: Enable
17.	RS485(2)	(0-3)	2	0: 2400bps; 1: 4800bps; 2: 9600bps; 3: 19200bps.
		(1-254)	1	Controller address for remote monitoring
		(0-1)	0	0: 2-bit Stop Bit 1: 1-bit Stop Bit
Timer Setting				
1.	Start Delay	(0-3600)s	5	Time from mains abnormal or remote start signal is active to genset is starting.
2.	Stop Delay	(0-3600)s	30	Time from mains normal or remote start signal is inactive to genset is stopping.
3.	Preheat Delay	(0-3600)s	0	Time for pre-powering the heat plug before starter is powered up.
4.	Cranking Time	(3-60)s	8	Time for starter power on each time.
5.	Crank Rest Time	(3-60)s	10	The waiting time before second power up when engine start fails.
6.	Safety On Delay	(0-3600)s	10	Alarms for low oil pressure, high temperature, under speed, under frequency/voltage, charging failure are inactive.
7.	Start Idle Time	(0-3600)s	10	Running time for genset idling when the genset is starting.
8.	Warming Up Time	(0-3600)s	30	Warming up time between genset switch on and high speed running.
9.	Cooling Time	(0-3600)s	60	Radiating time before genset stop, after it unloads.
10.	Stop Idle Time	(0-3600)s	10	Running time for genset idling speed when the genset is stopping.
11.	ETS Solenoid Hold	(0-3600)s	20	Time for the stop electromagnet energization as the genset is stopping.
12.	Fail to Stop Delay	(0-3600)s	0	Time after "idle delay" is over before the complete stop when "ETS Solenoid Hold" is set "0"; time after "ETS Solenoid Hold" delay is over before the complete stop when it is set other than "0".
13.	After Stop Time	(0-3600)s	0	Time between a complete stop and standby.
14.	Gas Timers Enable	(0-1)	0	0: Disable 1: Enable

No.	Items	Parameters	Defaults	Description
				When gas timer is enabled, fuel output is used for controlling gas valve.
15.	Choke On Time	(0-60)s	0	Output time for gas thickening after the engine starts.
16.	Gas On Delay	(0-60)s	0	After this period, gas valve control outputs after the engine starts.
17.	Ignition Off Delay	(0-60)s	0	After this period, gas ignition control stops outputting after the gas valve is closed.
18.	Smart Pre-heat	(0-1) (0-4) (0-1000)	0 0 40	0: Disable 1: Enable Sensor is pre-set correlation sensor. Set value is sensor threshold at period end. When it is enabled, if selected sensor value is above the set value, it shall end the pre-heating.
19.	Smart Start Idle	(0-1) (0-4) (0-1000)	0 0 50	0: Disable 1: Enable Sensor is pre-set correlation sensor. Set value is sensor threshold at period end. When it is enabled, if selected sensor value is above the set value, it shall end the start idle.
20.	Fuel Output Time	(1-60)s	1	Time for fuel output.
Engine Setting				
1.	Engine Type	(0-69)	0	Default: conventional engine (not ECU) When the controller is connected to J1939 engine, choose the corresponding type.
2.	Flywheel Teeth	(10-300)	118	Tooth number of the engine, for judging of starter separation conditions and inspecting of engine speed. See the installation instructions.
3.	Rated Speed	(0-6000)r/min	1500	Offer standard to judge over/under/loading speed.
4.	Loading Speed	(0-100.0)%	90.0	Set value is percentage of rated speed. Controller detects when it is ready to load. It won't switch on when speed is under loading speed.
5.	Loss of Speed Signal Delay	(0-3600)s	5	Time from detecting speed is 0 to action confirm.
6.	Loss of Speed Signal Action	(0~7)	7	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
7.	Over Speed 1 Set	(0-1) (0-200.0)% (0-200.0)%	1 114.0 112.0	0: Disable 1: Enable Set value is rated speed percentage. Return value is rated speed percentage.

No.	Items	Parameters	Defaults	Description
		(0-3600)s (0-7)	2 7	Delay value Action
8.	Over Speed 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 110.0 108.0 5 1	0: Disable 1: Enable Set value is rated speed percentage. Return value is rated speed percentage. Delay value Action
9.	Under Speed 1 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 80.0 82.0 3 7	0: Disable 1: Enable Set value is rated speed percentage. Return value is rated speed percentage. Delay value Action
10.	Under Speed 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 86.0 90.0 5 1	0: Disable 1: Enable Set value is rated speed percentage. Return value is rated speed percentage. Delay value Action
11.	Battery Rated Voltage	(0-60.0)V	24.0	Standard for detecting of over/under voltage of battery.
12.	Battery Over Volt 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 120.0 115.0 60 1	0: Disable 1: Enable Set value is batt. rated volt percentage. Return value is batt. rated volt percentage. Delay value Action
13.	Battery Over Volt 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 120.0 115.0 60 0	0: Disable 1: Enable Set value is batt. rated volt percentage. Return value is batt. rated volt percentage. Delay value Action
14.	Battery Under Volt 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 85.0 90.0 60 1	0: Disable 1: Enable Set value is batt. rated volt percentage. Return value is batt. rated volt percentage. Delay value Action
15.	Battery Under Volt 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 85.0 90.0 60 0	0: Disable 1: Enable Set value is batt. rated volt percentage. Return value is batt. rated volt percentage. Delay value Action
16.	Charge Alt Failure	(0-1) (0-60.0)V (0-60.0)V (0-3600)s	1 8.0 10.0 10	0: Disable 1: Enable Set value Return value Delay value

No.	Items	Parameters	Defaults	Description
		(0-7)	1	Action
17.	Start Attempts	(1-10)times	3	Maximum crank times for start failures; when it reaches this, controller will send start failure signal.
18.	Crank Disconnect	(0-6)	2	There are 3 conditions of disconnecting starter with engine. Each condition can be used alone and simultaneously to separate the start motor and engine as soon as possible.
19.	Disconnect Generator Freq	(0-200.0)%	24.0	Percentage of the generating rated frequency; when generator frequency is higher than the set value, starter will be disconnected. See the below installation instruction.
20.	Disconnect Engine Speed	(0-200.0)%	24.0	Percentage of the rated speed; when generator speed is higher than the set value, starter will be disconnected. See the installation instruction.
21.	Disconnect Oil Pressure	(0-1000)kPa	200	When oil pressure is higher than the set value, starter will be disconnected. See the installation instruction.
22.	ECU Fault Lamp	(0-7)	1	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
23.	ECU Stop Lamp	(0-7)	7	
24.	ECU Warning Lamp	(0-7)	1	
25.	ECU Protect Lamp	(0-7)	1	
26.	Charger Volt. Selection	(0-1)	0	0: Controller; 1: ECU.
27.	Engine Speed Selection	(0-1)	1	0: Controller; 1: ECU.
28.	Engine Temp. Selection	(0-1)	1	0: Controller; 1: ECU.
29.	Engine Oil Pressure Selection	(0-1)	1	0: Controller; 1: ECU.
30.	Idle Speed	(0-6000)r/min	750	When selecting J1939 unit, it can control the idle speed.
31.	Speed-up Time	(0-3600)s	10	For J1939 unit, the time of raising to high-speed (For all engines using TSC1 to adjust speed).
Generator Setting				
1.	AC System	(0-3)	0	0: 3P4W; 1: 3P3W; 2: 2P3W; 3: 1P2W.
2.	Poles	(2-64)	4	Numbers of generator pole, used for calculating engine speed when there is no

No.	Items	Parameters	Defaults	Description
				speed sensor.
3.	Rated Voltage	(30-30000)V	230	To offer standards for detecting of gens' over/under voltage and loading voltage. (It is primary voltage when using voltage transformer; it is line voltage when AC system is 3P3W while it is phase voltage when using other AC system).
4.	Loading Voltage	(0-200.0)%	90.0	Percentage of generator rated voltage; it is detected when the controller prepares to load; when the generating voltage is below the load voltage. It won't enter normally running period.
5.	Gen Rated Freq.	(10.0-75.0)Hz	50.0	Offer standards for detecting over/under/load frequency.
6.	Loading Frequency	(0-200.0)%	90	Percentage of generator rated frequency; when generator frequency is under load frequency, it won't enter normal running.
7.	Volt. Trans.(PT)	(0-1) (30-30000) (30-1000)	0 100 100	0: Disable; 1: Enable Primary voltage is PT's primary voltage. Secondary voltage is PT's secondary voltage.
8.	Gen Over Volt 1 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 120.0 118.0 3 7	0: Disable 1: Enable Set value is gen rated volt percentage. Return value is gen rated volt percentage. Delay value Action
9.	Gen Over Volt 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 110.0 108.0 5 1	0: Disable 1: Enable Set value is gen rated volt percentage. Return value is gen rated volt percentage. Delay value Action
10.	Gen Under Volt 1 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 80.0 82.0 3 7	0: Disable 1: Enable Set value is gen rated volt percentage. Return value is gen rated volt percentage. Delay value Action
11.	Gen Under Volt 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 84.0 86.0 5 1	0: Disable 1: Enable Set value is gen rated volt percentage. Return value is gen rated volt percentage. Delay value Action
12.	Gen Over Freq. 1 Set	(0-1) (0-200.0)%	1 114.0	0: Disable 1: Enable Set value is gen rated freq. percentage.

No.	Items	Parameters	Defaults	Description
		(0-200.0)% (0-3600)s (0-7)	112.0 2 7	Return value is gen rated freq. percentage. Delay value Action
13.	Gen Over Freq. 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 110.0 108.0 5 1	0: Disable 1: Enable Set value is gen rated freq. percentage. Return value is gen rated freq. percentage. Delay value Action
14.	Gen Under Freq. 1 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 80.0 82.0 3 7	0: Disable 1: Enable Set value is gen rated freq. percentage. Return value is gen rated freq. percentage. Delay value Action
15.	Gen Under Freq. 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 84.0 86.0 5 1	0: Disable 1: Enable Set value is gen rated freq. percentage. Return value is gen rated freq. percentage. Delay value Action
16.	Harmonic Display	(0-1)	0	0: Disable 1: Enable
17.	Volt Unbalance 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)(0-1)	1 10.0 5.0 5 1	0: Disable 1: Enable Set value is gen unbalance degree. Return value is gen unbalance degree. Delay value Action
18.	Volt Unbalance 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 10.0 5.0 5 0	0: Disable 1: Enable Set value is gen unbalance degree. Return value is gen unbalance degree. Delay value Action
19.	THD Alarm 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 10.0 5.0 5 0	0: Disable 1: Enable Set value is gen distortion degree. Return value is gen distortion degree. Delay value Action
20.	THD Alarm 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 10.0 5.0 5 0	0: Disable 1: Enable Set value is gen distortion degree. Return value is gen distortion degree. Delay value Action
21.	CT Ratio	(5-6000)/5	500	Ratio of external connected current transformer.
22.	Rated Current	(5-6000)A	500	It is rated current of generator and used for loading current standard.

No.	Items	Parameters	Defaults	Description
23.	Over Current 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 120.0 118.0 3 6	0: Disable 1: Enable Set value is percentage of rated current. Return value is percentage of rated current. Delay value Action
24.	Over Current 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 110.0 108.0 5 1	0: Disable 1: Enable Set value is percentage of rated current. Return value is percentage of rated current. Delay value Action
25.	Unbalanced Current 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 20.0 18.0 5 1	0: Disable 1: Enable Set value is percentage of rated current. Return value is percentage of rated current. Delay value Action
26.	Unbalanced Current 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 20.0 18.0 5 0	0: Disable 1: Enable Set value is percentage of rated current. Return value is percentage of rated current. Delay value Action
27.	Earth Fault 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 20.0 18.0 5 1	0: Disable 1: Enable Set value is percentage of rated current. Return value is percentage of rated current. Delay value Action
28.	Earth Fault 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	0 20.0 18.0 5 0	0: Disable 1: Enable Set value is percentage of rated current. Return value is percentage of rated current. Delay value Action
29.	Rated Active Power	(0-6000)kW	276	Genset rated active power, which is standard of loading active power.
30.	Rated Reactive Power	(0-6000)kvar	210	Genset rated reactive power, which is standard of loading reactive power.
31.	Load Ramp Rate	(0-100.0)%/s	3.0	Load ramp delay point power of every genset load setting, after the pre-set load ramp delay, genset will continue to load to the target power according to the pre-set load ramp.
32.	Load Ramp Delay Point	(0.1-40.0)%	10.0	
33.	Load Ramp Delay	(0-30)s	0	
34.	Unload Ramp Rate	(0-100.0)%/s	3.0	Genset unloading speed
35.	Over Power 1 Set	(0-1) (0-200.0)% (0-200.0)%	1 120.0 118.0	0: Disable 1: Enable Set value is percentage of rated active power.

No.	Items	Parameters	Defaults	Description
		(0-3600)s (0-7)	3 6	Return value is percentage of rated active power. Delay value Action
36.	Over Power 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 110.0 108.0 5 1	0: Disable 1: Enable Set value is percentage of rated active power. Return value is percentage of rated active power. Delay value Action
37.	Reverse Power 1 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 10.0 8.0 3 7	0: Disable 1: Enable Set value is percentage of rated active power. Return value is percentage of rated active power. Delay value Action
38.	Reverse Power 2 Set	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 5.0 3.0 5 1	0: Disable 1: Enable Set value is percentage of rated active power. Return value is percentage of rated active power. Delay value Action
39.	Loss Excitation Fault 1	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 20.0 18.0 5 1	0: Disable 1: Enable Set value is percentage of rated reactive power. Return value is percentage of rated reactive power. Delay value Action
40.	Loss Excitation Fault 2	(0-1) (0-200.0)% (0-200.0)% (0-3600)s (0-7)	1 20.0 18.0 5 0	0: Disable 1: Enable Set value is percentage of rated reactive power. Return value is percentage of rated reactive power. Delay value Action
41.	Power Factor Low 1	(0-1) (0-1.00) (0-1.00) (0-3600)s	1 0.70 0.75 5	0: Disable 1: Enable Set value is gen power factor. Set value is gen power factor. Delay value

No.	Items	Parameters	Defaults	Description
		(0-7)	1	Action
42.	Power Factor Low 2	(0-1) (0-1.00) (0-1.00) (0-3600)s (0-7)	0 0.70 0.75 5 0	0: Disable 1: Enable Set value is gen power factor. Set value is gen power factor. Delay value Action
Switch Setting				
1.	Close Time	(0-20.0)s	5.0	Pulse width of switch on. When it is 0, it means output constantly.
2.	Open Time	(0-20.0)s	3.0	Pulse width of switch off. When it is 0, it means output constantly.
3.	Check Time	(0-20.0)s	5.0	Feedback and check time of breaker close status input.
Analog Sensor Setting				
Temperature Sensor				
1.	Sensor Selection	(0-1)	0	0: Temp. Sensor; 1: Aux. Input Port 11.
2.	Curve Type	(0-15)	8	SGD
3.	Open Circuit Action	(0-7)	1	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
4.	High Temp. Alarm 1 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	1 98 96 3 7	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value. Delay value Action
5.	High Temp. Alarm 2 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	1 95 93 5 1	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value. Delay value Action
6.	Low Temp. Alarm Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 70 75 5 1	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value. Delay value Action
7.	Heater Control	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)min	0 50 55 60	0: Disabled; 1: Enabled. Set value is the turn-on temperature of the heater. Set value is the turn-off temperature of the heater. Maximum Heating Duration. (This parameter is configured by the PC software.)

No.	Items	Parameters	Defaults	Description
8.	Cooler Control	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)min	0 80 75 60	0: Disabled; 1: Enabled. Set value is the turn-on temperature of the cooler. Set value is the turn-off temperature of the cooler. Maximum Cooling Duration. (This parameter is configured by the PC software.)
Oil Pressure Sensor				
1.	Sensor Selection	(0-1)	0	0: Pressure Sensor; 1. Aux. Input Port 12.
2.	Curve Type	(0-15)	8	SGD
3.	Open Circuit Action	(0-7)	1	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
4.	Low OP Alarm 1 Set	(0-1) (0-1000)kPa (0-1000)kPa (0-3600)s (0-7)	1 103 117 2 7	0: Disable 1: Enable Set value is engine oil pressure value. Set value is engine oil pressure value. Delay value Action
5.	Low OP Alarm 2 Set	(0-1) (0-1000)kPa (0-1000)kPa (0-3600)s (0-7)	1 124 138 5 1	0: Disable 1: Enable Set value is engine oil pressure value. Set value is engine oil pressure value. Delay value Action
Fuel Level Sensor				
1.	Sensor Selection	(0-1)	0	0: Level Sensor; 1. Aux. Input Port 13.
2.	Curve Type	(0-15)	0	Not used.
3.	Open Action	(0-7)	1	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
4.	Low Alarm 1 Set	(0-1) (0-100)% (0-100)% (0-3600)s (0-7)	1 103 117 2 7	0: Disable 1: Enable Set value is the percentage of engine fuel level. Return value is the percentage of engine fuel level. Delay value Action
5.	Low Alarm 2 Set	(0-1) (0-100)% (0-100)% (0-3600)s (0-7)	1 103 117 2 7	0: Disable 1: Enable Set value is the percentage of engine fuel level. Return value is the percentage of engine fuel level. Delay value

No.	Items	Parameters	Defaults	Description
				Action
6.	Fuel Pump Output	(0-1) (0-100)% (0-100)% (0-60000)s	0 10 80 60	0: Disable 1: Enable Set value is the percentage of fuel pump turn-on level. Set value is the percentage of fuel pump turn-off level. Max. output delay. (This parameter is configured by the PC software.)
Flexible Sensor 1				
1.	Flexible Sensor 1 Setting	(0~4)	0	0: Disable 1: Temperature Sensor; 2: Pressure Sensor; 3: Level Sensor; 4: Aux. Input Port 14.
2.	Custom Sensor Name	Chinese: (0-6) characters. English: (0-19) characters.	Null	Sensor name, defaults to null.
3.	Curve Type	(0-15)	0	Not used.
4.	Open Action	(0-7)	0	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
5.	High Alarm 1 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 100 90 5 7	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
6.	High Alarm 2 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 90 80 5 1	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
7.	Low Alarm 1 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 10 20 5 7	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
8.	Low Alarm 2 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s	0 20 30 5	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state.

No.	Items	Parameters	Defaults	Description
		(0-7)	1	Delay value Action
Flexible Sensor 2				
1.	Flexible Sensor 2 Setting	(0~4)	0	0: Disable 1: Temperature Sensor; 2: Pressure Sensor; 3: Level Sensor; 4: Aux. Input Port 15.
2.	Custom Sensor Name	Chinese: (0-6) characters. English: (0-19) characters.	Null	Sensor name, defaults to null.
3.	Curve Type	(0-15)	0	Not used.
4.	Open Action	(0-7)	0	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
5.	High Alarm 1 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 100 90 5 7	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
6.	High Alarm 2 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 90 80 5 1	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
7.	Low Alarm 1 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 10 20 5 7	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
8.	Low Alarm 2 Set	(0-1) ((-50)-300)°C ((-50)-300)°C (0-3600)s (0-7)	0 20 30 5 1	0: Disable 1: Enable Set value is engine temperature value. Set value is engine temperature value required to return to the normal state. Delay value Action
Digital Input Ports				
Digital Input Port 1				
1.	Contents Setting	(0-72)	31	Remote start (on demand).
2.	Active Type	(0-1)	0	0: Close 1: Open
Digital Input Port 2				

No.	Items	Parameters	Defaults	Description
1.	Contents Setting	(0-72)	27	Low oil pressure shutdown input
2.	Active Type	(0-1)	0	0: Close 1: Open
Digital Input Port 3				
1.	Contents Setting	(0-72)	26	High temperature shutdown input
2.	Active Type	(0-1)	0	0: Close 1: Open
Digital Input Port 4				
1.	Contents Setting	(0-72)	13	Gen close status input
2.	Active Type	(0-1)	0	0: Close 1: Open
Digital Input Port 5				
1.	Contents Setting	(0-72)	0	Users-defined
2.	Active Type	(0-1)	0	0: Close 1: Open
3.	Active Range	(0-3)	3	0: From safety on 1: From starting 2: Always 3: Never
4.	Active Actions	(0-7)	4	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
5.	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm
6.	Description			LCD displays detailed contents when the input is active.
Digital Input Port 6				
1.	Contents Setting	(0-72)	44	Master choice
2.	Active Type	(0-1)	0	0: Close 1: Open
Digital Input Port 7				
1.	Contents Setting	(0-72)	0	Users-defined.
2.	Active Type	(0-1)	0	0: Close 1: Open
3.	Active Range	(0-3)	3	0: From safety on 1: From starting 2: Always 3: Never
4.	Active Actions	(0-7)	4	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
5.	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm
6.	Description			LCD displays detailed contents when the input is active.
Digital Input Port 8				
1.	Contents Setting	(0-72)	0	User defined.
2.	Active Type	(0-1)	0	0: Close 1: Open
3.	Active Range	(0-3)	3	0: From safety on 1: From starting 2: Always 3: Never
4.	Active Actions	(0-7)	4	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.

No.	Items	Parameters	Defaults	Description
5.	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm
6.	Description			LCD displays detailed contents when the input is active.
Digital Input Port 9				
1.	Contents Setting	(0-72)	0	Users-defined
2.	Active Type	(0-1)	0	0: Close 1: Open
3.	Active Range	(0-3)	3	0: From safety on 1: From starting 2: Always 3: Never
4.	Active Actions	(0-7)	4	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
5.	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm
6.	Description			LCD displays detailed contents when the input is active.
Digital Input Port 10				
1.	Contents Setting	(0-72)	0	Users-defined
2.	Active Type	(0-1)	0	0: Close 1: Open
3.	Active Range	(0-3)	3	0: From safety on 1: From starting 2: Always 3: Never
4.	Active Actions	(0-7)	4	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
5.	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm
6.	Description			LCD displays detailed contents when the input is active.
Digital Output Ports				
Digital Output Port 1				
1	Contents Setting	(0-471)	44	Normal generating output
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 2				
1	Contents Setting	(0-471)	48	Common Alarm
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 3				
1	Contents Setting	(0-471)	38	Energize to Stop
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 4				
1	Contents Setting	(0-471)	35	Idle Control
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 5				
1	Contents Setting	(0-471)	30	Open Gen Output
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 6				

No.	Items	Parameters	Defaults	Description
1	Contents Setting	(0-471)	29	Close Gen Output
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 7				
1	Contents Setting	(0-471)	0	Not Used
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Digital Output Port 8				
1	Contents Setting	(0-471)	0	Not Used
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
Scheduled Run				
1	Scheduled Run	(0-1)	0	0: Disable; 1: Enable Circular setting (monthly, weekly, daily, self-defined weekly), start time setting, continuous time setting and loading setting are available.
Scheduled Not Run				
1	Scheduled Not Run	(0-1)	0	0: Disable; 1: Enable Circular setting (monthly, weekly, daily, self-defined weekly), non-start time setting and continuous time setting are available.
Maintenance Setting				
1	Maintenance	(0-1)	0	0: Disable; 1: Enable Maintenance time, alarm action can be set.
Alternative Configuration				
1	Alt. Config. 1	(0-1)	0	0: Disable; 1: Enable Power supply system, rated voltage, rated frequency, rated speed, rated current, rated active power, rated reactive power, GOV SW1, AVR SW1 can be set.
2	Alt. Config. 2	(0-1)	0	0: Disable; 1: Enable
3	Alt. Config. 3	(0-1)	0	0: Disable; 1: Enable
Sync Setting				
Auto Sync				
1	GOV Output Type	(0-1)	1	0: Internal Relays; 1: Internal Analogue
2	GOV Reverse	(0-1)	0	0: Disable; 1: Enable
3	GOV Action	(0-2)	1	0: None; 1: Adjust to Rated; 2: Adjust to Center Point
4	AVR Output Type	(0-2)	2	0: None 1: Internal Relays; 2: Internal Analogue
5	AVR Reverse	(0-1)	0	0: Disable; 1: Enable
6	AVR Action	(0-2)	1	0: None; 1: Adjust to Rated; 2: Adjust to Center Point
Sync Check				

No.	Items	Parameters	Defaults	Description
1	Dead Bus Volt	(10-50)V	30	It is considered Bus no power when Bus voltage is lower than dead Bus voltage.
2	Check Volt	(0-30)V	3	It is considered voltage synchronization when the voltage difference between Generator and Bus is lower than synchronization voltage difference.
3	Check Pos. Freq.	(0-2.00)Hz	0.20	It is considered frequency synchronization when the frequency difference between Generator and Bus is less than "Check Pos. Freq." but more than "Check Neg. Freq.".
4	Check Neg. Freq.	(0-2.00)Hz	0.10	
5	Check Phase	(0-20)°	10	It is considered "Check Phase" when the initial phase difference is lower than synchronization phase difference.
6	Phase Angle Offset	(0-360)°	0	Gen initial phase will add pre-set phase offset based on the sampling initial phase.
7	Fail Sync Delay	(5.0-300.0) s	60.0	If sync signals are not detected during the set "Fail Sync Delay", controller will initiate corresponding alarms based on the "Fail Sync Action".
8	Fail Sync Action	(0-7)	1	
Multi Sync				
1.	Num. On MSC Bus	(1-32)	2	It is the minimum MSC number.
2.	MSC Fail Act	(0-7)	1	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
3.	MSC Baud Rate	(0-3)	1	0: 500kBit/s; 1: 250kBit/s; 2: 125kBit/s; 3: 50kBit/s.
4.	Starting Option	(0-1)	1	0: Start All; 1: Start Sets on demand
5.	Start All Time	(0-3600)s	120	When starting option is set as "start all", controller will stop corresponding gensets as required after "Start All Time" delay.
6.	Balance Enable	(0-1)	0	0: Disable; 1: Enable
7.	Balance Hours	(1-1000)h	1	When the input is active, the controller will start/stop the genset automatically according to the running time and the pre-set balanced running time. Balance running gensets should be configured as the same priority.
8.	Sets on Bus	(1-32)	1	Set the number of closed gensets on the bus.
9.	Scheduling Sets Mode	(0-1)	0	0: Gen Power (%); 1: Available Power.
10.	Scheduling Start PCT	(0-100)%	80	Schedule the load value of other gensets when start the genset on demand.

No.	Items	Parameters	Defaults	Description
11.	Scheduling Stop PCT	(0-100)%	50	Schedule the load value of other genset when start the genset on demand.
12.	Scheduling Start Power	(0-6000)kW	200	Schedule the available power value of other genset when start the genset on demand.
13.	Scheduling Stop Power	(0-6000)kW	400	Schedule the available power value of other genset when start the genset on demand.
14.	Freq Coefficient	(0-200)%	10	It is frequency feedback coefficient in configuring active power distribution.
15.	Volt Coefficient	(0-200)%	10	It is voltage feedback coefficient in configuring reactive power distribution.
16.	Ground Relay Close Failure	(0-7)	7	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
17.	Ground Relay Open Failure	(0-7)	1	0: None; 1: Warning; 2: Block; 3: Safety Trip; 4: Safety Trip and Stop; 5: Trip; 6: Trip and Stop; 7: Shutdown.
18.	Static Parallel Delay	(0-600)s	60	If static paralleling is not completed during "Static Parallel Delay", controller will initiate alarm information.
19.	Economy Fuel	(0-1)	0	0: Disable; 1: Enable All gensets should be configured the same economy fuel value.
20.	Economy Fuel (%)	(0-100)%	60	It is the economy fuel percentage of genset.
21.	Economy Swap(W)	(0-6000)kW	200	Economy fuel consumption starts exchange if difference value of the total rated power of the exchange gensets and the total power of the current loading gensets is greater than the set exchange power, otherwise no exchange is performed.
22.	GOV Droop	(0-1)	0	0: Disable; 1: Enable
23.		(0-200.0)%	101.0	It is the percentage of no-load frequency and rated frequency.
24.		(0-200.0)%	100.0	It is the percentage of full-load frequency and rated frequency.
25.	AVR Droop	(0-1)	0	0: Disable; 1: Enable
26.		(0-200.0)%	101.0	It is the percentage of no-load voltage and rated voltage.
27.		(0-200.0)%	100.0	It is the percentage of full-load voltage and rated voltage.
NEL Settings				
1.	NEL Number	(1-3)	3	Details of function description please see the following description.
2.	NEL Trip	(0-1)	0	

No.	Items	Parameters	Defaults	Description	
3.	NEL Trip Set Value 1	(0-200)%	90		
4.	NEL Trip Delay 1	(0-3600)s	5		
5.	NEL Trip Set Value 2	(0-200)%	100		
6.	NEL Trip Delay 2	(0-3600)s	1		
7.	NEL Auto Reconnection	(0-1)	0		
8.	NEL Auto Reconnection Set Value	(0-200)%	50		
9.	NEL Auto Reconnection Delay	(0-3600)s	5		
Dummy Load Setting					
1.	DL Number	(1-3)	3		Details of function description please see the following description.
2.	DL Connection	(0-1)	0		
3.	DL Connection Value 1	(0-200)%	20		
4.	DL Connection Delay 1	(0-3600)s	5		
5.	DL Connection Value 2	(0-200)%	10		
6.	DL Connection Delay 2	(0-3600)s	1		
7.	DL Auto Trip	(0-1)	0		
8.	DL Trip Set Value	(0-200)%	50		
9.	DL Trip Delay	(0-3600)s	5		
HC Setting					
1.	HC 1 Request Load	(0-6000)kW	400	Details of function description please see the following description.	
2.	HC 1 Rated Load	(0-6000)kW	200		
3.	HC 1 Stable Delay	(0-3600)s	5		
4.	HC 1 Resp. Delay	(0-3600)s	5		
5.	HC 2 Request Load	(0-6000)kW	400		
6.	HC 2 Rated Load	(0-6000)kW	200		
7.	HC 2 Stable Delay	(0-3600)s	5		
8.	HC 2 Resp. Delay	(0-3600)s	5		
Sync Calibration					
MSC					
1.	MSC ID	(0-31)	1	It is the ID in the MSC communication network, which indicates that the MSC ID in the entire communication network should be unique.	

No.	Items	Parameters	Defaults	Description
2.	Smart MSC ID	(0-1)	0	0: Disable; 1: Enable When it is enabled, the controller randomly selects an available ID based on the current bus unit ID at each power-up.
3.	Module Priority	(0-31)	0	Smaller the value, higher the priority.
Sync Control				
1.	Slip Freq.	(0-1.00)Hz	0.10	Adjust generator frequency so that gen frequency is greater than slip frequency. Phase synchronization adjustment is conducted when the sync difference frequency is set to 0.
2.	Sync Freq. (Volt)	(0-6000)%	20	Gain(P)
		(0-6000))%)	20	Stability(I)
		(0-6000))%)	0	Rate of change (D)
3.	Sync Freq. (Relay)	(0.25-4.00)Hz/s	1.20	Response
		(0.05-1.60)s	0.20	Stability
		(0-100)%	10	Gain
		(0-10.0)%	1.0	Dead area
4.	Sync Volt (Volt)	(0-56000))%)	20	Gain(P)
		(0-6000))%)	20	Stability(I)
		(0-6000))%)	0	Rate of change (D)
5.	Sync Volt (Relay)	(0.25-4.00)Hz/s	1.20	Response
		(0.05-1.60)s	0.20	Stability
		(0-100)%	10	Gain
		(0-10.0)%	1.0	Dead area
6.	Sync Phase (Stable Time)	(0-20.0)s	2.0	Sync. confirmation time during phase sync adjustment
7.	Sync Phase (Volt)	(0-6000))%)	20	Gain(P)
		(0-6000))%)	20	Stability(I)
		(0-6000))%)	0	Rate of change (D)
8.	Sync Phase (Relay)	(0.25-4.00)Hz/s	1.20	Response
		(0.05-1.60)s	0.20	Stability
		(0-100)%	10	Gain
		(0-10.0)%	1.0	Dead area
Load Control				
1.	kW Control (Volt)	(0-6000))%)	20	Gain(P)
		(0-6000))%)	20	Stability(I)
		(0-6000))%)	0	Rate of change (D)
2.	kW Control (Relay)	(0.25-4.00)Hz/s	1.20	Response
		(0.05-1.60)s	0.20	Stability
		(0-100)%	10	Gain
		(0-10.0)%	1.0	Dead area

No.	Items	Parameters	Defaults	Description
3.	kvar Control (Volt)	(0-6000))%	20	Gain(P)
		(0-6000))%	20	Stability(I)
		(0-6000))%	0	Rate of change (D)
4.	kvar Control (Relay)	(0.25-4.00)Hz/s	1.20	Response
		(0.05-1.60)s	0.20	Stability
		(0-100)%	10	Gain
		(0-10.0)%	1.0	Dead area
Load				
1.	Load Minimum PCT	(0-100.0)%	1.0	It is the load percentage when the soft unload is opened.
2.	Load Mode	(0-3)	0	0: Gen; 1: Mains; 2: Takeover; 3: Load Control.
3.	Active Output Mode	(0-1)	0	0: Fixed Power; 1: Frequency-Power. It is active when Load mode is Gen control mode.
4.	Reactive Output Mode	(0-1)	0	0: Fixed Power; 1: Voltage-Power. It is active when Load mode is Gen control mode.
5.	Output Active Power	(0-100.0)%	30.0	It is used to load control.
6.	Output Reactive Power Option	(0-1)	0	0: kvar Reactive Power Control; 1: PF Power Factor Control.
7.	Output Reactive Power	(0-100.0)%	8.0	It is used to load control.
8.	Analogue Adjust (kW)	(0-1)	0	0: Disable; 1: Flex. Sensor 1; 2: Flex. Sensor 2. It is active when active power output mode is configured as Fixed Power.
9.	Analogue Adjust (kvar)	(0-1)	0	0: Disable; 1: Flex. Sensor 1; 2: Flex. Sensor 2. It is active when reactive power output mode is configured as Fixed Power.
10.	Active Output Curve			Configure gen frequency-active power curve. It is active when active power output mode is configured as Frequency-Power.
11.	Reactive Output Curve			Configure gen voltage-reactive power curve. It is active when reactive power output mode is configured as Voltage-Power.
GOV/AVR				
1.	GOV SW1	(-20.00-20.00)	0	Center voltage, default 0V.
2.	GOV SW2	(0-10.00)	2.00	Voltage range, default (-1.5~+1.5V).

No.	Items	Parameters	Defaults	Description
3.	AVR SW1	(-20.00-20.00)	0	Center voltage, default 0V.
4.	AVR SW2	(0-10.00)	2.0	Voltage range, default (-1.5~+1.5V).
Mains Setting				
1.	AC System	(0-3)	0	0: 3P4W; 1: 3P3W; 2: 2P3W; 3: 1P2W.
2.	Rated Voltage	(30-30000)V	230	Offer standards for detecting mains' over/under voltage. It is primary voltage when voltage transformer is used. It is wire voltage when AC system is 3P3W while it is phase voltage when other AC system is used.
3.	Mains Rated Frequency	(10.0-75.0)Hz	50.0	Offer standards for detecting over/under frequency.
4.	Volt. Trans.(PT)	(0-1)	0	0: Disable ; 1: Enable
5.	Mains Split Action	(0-1)	0	0: Trip and Stop; 1: Aux. Mains Failure.
6.	Mains Over Volt.	(0-1) (0-200.0)% (0-20.0)s	1 110.0 0.1	Set value is percentage of mains rated voltage.
7.	Mains Under Volt.	(0-1) (0-200.0)% (0-20.0)s	1 90.0 0.1	
8.	Mains Over Freq.	(0-1) (0-200.0)% (0-20.0)s	1 101.0 0.1	Set value is mains rated frequency's percentage.
9.	Mains Under Freq.	(0-1) (0-200.0)% (0-20.0)s	1 99.0 0.1	
10.	ROCOF	(0-1) (0-1.00)Hz/s (0-20.0)s	1 0.20 0.1	Set value is frequency change rate of mains (ROCOF).
11.	Vector Shift	(0-1) (0-20.0)° (0-20.0)s	1 6.0 0.1	Set value is phase angle's change rate of mains voltage waveform (VECTOR SHFT).
Expansion Module				
1.	Expand DIN16	(0-1)	0	0: Disable ; 1: Enable
2.	Expand DOUT16	(0-1)	0	0: Disable ; 1: Enable
3.	Expand AIN24 1	(0-1)	0	0: Disable ; 1: Enable
4.	Expand AIN24 2	(0-1)	0	0: Disable ; 1: Enable
5.	Expand AIN8	(0-1)	0	0: Disable ; 1: Enable
Network Setting				
1.	Network Comm.	(0-1)	1	0: Disable ; 1: Enable
2.	Auto IP	(0-1)	0	0: Disable ; 1: Enable

SmartGen

No.	Items	Parameters	Defaults	Description
3.	TCP/IP Modbus	(0-1)	1	0: Disable ; 1: Enable
4.	Cloud Monitoring Comm.	(0-1)	0	0: Disable ; 1: Enable
Cloud Setting				
1.	Server Setting	(0-2)	0	0: SmartGen Cloud Plus; 1: IOTEYUN 2: Self-defined Cloud Platform.

SmartGen

7.2 DEFINED CONTENTS OF DIGITAL OUTPUT PORTS

7.2.1 DEFINED CONTENTS OF DIGITAL OUTPUT PORTS

Table 18 Defined Contents of Digital Output Ports

No.	Type	Description
0	Not Used	
1	Custom Period 1	Details of function description please see the following description.
2	Custom Period 2	
3	Custom Period 3	
4	Custom Period 4	
5	Custom Period 5	
6	Custom Period 6	
7	Custom Combined 1	
8	Custom Combined 2	
9	Custom Combined 3	
10	Custom Combined 4	
11	Custom Combined 5	
12	Custom Combined 6	
13	Reserved	
14	Reserved	
15	Gas Choke On Control	Act in cranking, action time is the preset time for it.
16	Gas Ignition Control	Act when engine is starting, and disconnect when engine is stopped.
17	Air Flap Control	Act on over speed shutdown and emergence stop. Air inflow can be closed to stop the engine quicker.
18	Audible Alarm	Act on warning, shutdown, and trips. An annunciator can be connected externally. If "alarm mute" configurable input port is active, this is prohibited.
19	Louver Control	Act when genset is starting and disconnect when genset is stopped completely.
20	Fuel Pump Control	It is controlled by limit values of level sensor fuel pump.
21	Heater Control	It is controlled by heating limit values of temperature sensor.
22	Cooler Control	It is controlled by cooler limit values of temperature sensor.
23	Oil Pre-supply Output	Act from "crank on" to "safety on".
24	Generator Excite	Output in start process. If there is no generator frequency during high-speed running, it shall output for 2 seconds again.
25	Pre-Lubricate	Act from pre-heating to safety run.
26	Remote Control Output	This port is controlled by communication (PC).
27	Reserved	
28	Sync Indication	
29	Close Gen Output	It can control generating switch to take load.
30	Open Gen Output	It can control generating switch to take off load.

No.	Type	Description
31	Close Mains Output	It can control mains switch to take load.
32	Open Mains Output	It can control mains switch to take off load.
33	Crank Relay	
34	Fuel Relay	Act when genset is starting and disconnect when stop is completed. When gas timer is enabled, fuel relay output is used to control gas valve.
35	Idle Control	It is used for genset with idling control. Close before starting and open in warming up delay; Close during stopping idle mode and open when stop is completed.
36	Speed Raise Output	Act during warming up time.
37	Speed Drop Output	Act between the period "stop idle" and "failed to stop".
38	Energize to Stop	It is used for engines with ETS electromagnet. Close when stop idle is over and open when pre-set "ETS delay" is over.
39	Speed Drop Pulse	Act for 0.1s when controller enters "stop idle", used for control parts of ECU dropping to idle speed.
40	ECU Stop	Used for ECU engine and control its stop.
41	ECU Power Supply	Used for ECU engine to control its power.
42	Speed Raise Pulse	Act for 0.1s when controller enters warming up delay; used for control parts of ECU raising to normal speed.
43	Crank Success	Close when a successful start signal is detected.
44	Gen OK	Act when generator is normally running.
45	Gen Load Available	Act between normal running and high-speed cooling.
46	Reserved	
47	Synchronizing	Act when controller is synchronizing.
48	Common Alarm	Act when genset common warning, common shutdown, common trip alarms occur.
49	Common Trip and Stop	Act when common trip and stop alarm occurs.
50	Common Shutdown	Act when common shutdown alarm occurs.
51	Common Trip	Act when common trip alarm occurs.
52	Common Warn	Act when common warning alarm occurs.
53	Common Block	Act when common block alarm occurs.
54	Battery Over Voltage	Act when battery's over voltage warning alarm occurs.
55	Battery Under Voltage	Act when battery's low voltage warning alarm occurs.
56	Charge Alternator Failure	Act when charging failure warning alarm occurs.
57	Common Safety Stop	Act when common safety stop alarm occurs.
58	Common Safety Trip	Act when common safety trip alarm occurs.
59	Reserved	
60	ECU Warning	Indicates ECU sends a warning signal.
61	ECU Shutdown	Indicates ECU sends a shutdown signal.
62	ECU Comm. Failure	Indicates controller cannot communicating with ECU.
63	PWM Voltage Raise	When output type of AVR is set as "Relay output", controller

No.	Type	Description
64	PWM Voltage Drop	adjusts voltage and reactive power via “Sync Raise Volt” and “Sync Drop Volt”.
65	PWM Speed Raise	When output type of GOV is set as “Relay output”, controller adjusts speed and power via “Sync Raise Speed” and “Sync Drop Speed”.
66	PWM Speed Drop	
67	Reserved	
68	Reserved	
69	Digital Input 1 Active	Act when input port 1 is active.
70	Digital Input 2 Active	Act when input port 2 is active.
71	Digital Input 3 Active	Act when input port 3 is active.
72	Digital Input 4 Active	Act when input port 4 is active.
73	Digital Input 5 Active	Act when input port 5 is active.
74	Digital Input 6 Active	Act when input port 6 is active.
75	Digital Input 7 Active	Act when input port 7 is active.
76	Digital Input 8 Active	Act when input port 8 is active.
77	Digital Input 9 Active	Act when input port 9 is active.
78	Digital Input 10 Active	Act when input port 10 is active.
79	Reserved	
80	Reserved	
81	Exp. DI Input 1 Active	Act when expansion digital input 1 is active.
82	Exp. DI Input 2 Active	Act when expansion digital input 2 is active.
83	Exp. DI Input 3 Active	Act when expansion digital input 3 is active.
84	Exp. DI Input 4 Active	Act when expansion digital input 4 is active.
85	Exp. DI Input 5 Active	Act when expansion digital input 5 is active.
86	Exp. DI Input 6 Active	Act when expansion digital input 6 is active.
87	Exp. DI Input 7 Active	Act when expansion digital input 7 is active.
88	Exp. DI Input 8 Active	Act when expansion digital input 8 is active.
89	Exp. DI Input 9 Active	Act when expansion digital input 9 is active.
90	Exp. DI Input 10 Active	Act when expansion digital input 10 is active.
91	Exp. DI Input 11 Active	Act when expansion digital input 11 is active.
92	Exp. DI Input 12 Active	Act when expansion digital input 12 is active.
93	Exp. DI Input 13 Active	Act when expansion digital input 13 is active.
94	Exp. DI Input 14 Active	Act when expansion digital input 14 is active.
95	Exp. DI Input 15 Active	Act when expansion digital input 15 is active.
96	Exp. DI Input 16 Active	Act when expansion digital input 16 is active.
97-98	Reserved	
99	Emergency Stop	Act when emergency stop alarm occurs.
100	Fail to Start	Act when start failure alarm occurs.
101	Fail to Stop	Act when stop failure alarm occurs.
102	Under Speed Warn	Act when under speed alarm occurs.
103	Under Speed Alarm	Act when under speed alarm (except warning) occurs.

No.	Type	Description
104	Over Speed Warn	Act when over speed warning occurs.
105	Over Speed Alarm	Act when over speed alarm (except warning) occurs.
106	Reserved	
107	Reserved	
108	Reserved	
109	Gen Over Freq. Warn	Act when generator over frequency warning occurs.
110	Gen Over Freq. Alarm	Act when generator over frequency alarm (except warning) occurs.
111	Gen Over Volt Warn	Act when generator over voltage warning occurs.
112	Gen Over Volt Alarm	Act when generator over voltage alarm (except warning) occurs.
113	Gen Under Freq. Warn	Act when generator low frequency warning occurs.
114	Gen Under Freq. Alarm	Act when generator low frequency alarm (except warning) occurs.
115	Gen Under Volt. Warn	Act when generator low voltage warning occurs.
116	Gen Under Volt. Alarm	Act when generator low voltage alarm (except warning) occurs.
117	Gen Loss of Phase	Act when generator loss phase occurs.
118	Gen Reverse Phase Seq.	Act when generator reverse phase occurs.
119	Over Power Warn	Act when gen over power warning occurs.
120	Over Power Alarm	Act (except warning) when over power warning occurs.
121	Reverse Power Warn	Act when gen inverse power warning occurs.
122	Reverse Power Alarm	Act except warning) when controller detects generator have reverse power.
123	Over Current Warn	Act when over current warning occurs.
124	Over Current Alarm	Act when gen over current alarm (except warning) occurs.
125	No Mains	Act when Mains voltage is 0.
126	Mains Over Frequency	Act when Mains over frequency occurs.
127	Mains Over Voltage	Act when Mains over voltage occurs.
128	Mains Under Frequency	Act when Mains under frequency occurs.
129	Mains Under Voltage	Act when Mains under voltage occurs.
130	Mains Phase Sequence Wrong	Act when Mains phase sequence is wrong.
131	Mains Loss of Phase	Act when Mains loss of phase occurs.
132	Reserved	
134	NEL1 Trip	Details of function description please see the following description.
135	NEL2 Trip	
136	NEL3 Trip	
137-138	Reserved	
139	High Temp Warn	Act when hi-temperature warning occurs.
140	Low Temp Warn	Act when low temperature warning occurs.
141	High Temp Alarm	Act when hi-temperature alarm (except warning) occurs.

No.	Type	Description
142	Reserved	
143	Low OP Warn	Act when low oil pressure warning occurs.
144	Low OP Alarm	Act when low oil pressure alarm (except warning) occurs.
145	OP Sensor Open Circuit	Act when oil pressure sensor is open circuit.
146	Reserved	
147	Low Fuel Level Warn	Act when controller has low fuel level warning alarm.
148	Low Fuel Level Alarm	Act when controller has low fuel level alarm (except warning).
149	Reserved	
150	Flexible Sensor 1 High Warn	Act when controller has flexible sensor 1 high warning alarm.
151	Flexible Sensor 1 Low Warn	Act when controller has flexible sensor 1 low warning alarm.
152	Flexible Sensor 1 High Alarm	Act when controller has flexible sensor 1 high alarm (except warning).
153	Flexible Sensor 1 Low Alarm	Act when controller has flexible sensor 1 low alarm (except warning).
154	Flexible Sensor 2 High Warn	Act when controller has flexible sensor 2 high warning alarm.
155	Flexible Sensor 2 Low Warn	Act when controller has flexible sensor 2 low warning alarm.
156	Flexible Sensor 2 High Alarm	Act when controller has flexible sensor 2 high alarm (except warning).
157	Flexible Sensor 2 Low Alarm	Act when controller has flexible sensor 2 low alarm (except warning).
158-161	Reserved	
162	Exp1 Ch15 High Alarm	Act when expansion AIN24 1 sensor 15 high alarm (except warning) occurs.
163	Exp1 Ch15 High Warn	Act when expansion AIN24 1 sensor 15 high warning occurs.
164	Exp1 Ch15 Low Alarm	Act when expansion AIN24 1 sensor 15 low alarm (except warning) occurs.
165	Exp1 Ch15 Low Warn	Act when expansion AIN24 1 sensor 15 low warning occurs.
166	Exp1 Ch16 High Alarm	Act when expansion AIN24 1 sensor 16 high alarm (except warning) occurs.
167	Exp1 Ch16 High Warn	Act when expansion AIN24 1 sensor 16 high warning occurs.
168	Exp1 Ch16 Low Alarm	Act when expansion AIN24 1 sensor 16 low alarm (except warning) occurs.
169	Exp1 Ch16 Low Warn	Act when expansion AIN24 1 sensor 16 low warning occurs.
170	Exp1 Ch17 High Alarm	Act when expansion AIN24 1 sensor 17 high alarm (except warning) occurs.
171	Exp1 Ch17 High Warn	Act when expansion AIN24 1 sensor 17 high warning occurs.
172	Exp1 Ch17 Low Alarm	Act when expansion AIN24 1 sensor 17 low alarm (except warning) occurs.
173	Exp1 Ch17 Low Warn	Act when expansion AIN24 1 sensor 17 low warning occurs.
174	Exp1 Ch18 High Alarm	Act when expansion AIN24 1 sensor 18 high alarm (except warning) occurs.
175	Exp1 Ch18 High Warn	Act when expansion AIN24 1 sensor 18 high warning occurs.

No.	Type	Description
176	Exp1 Ch18 Low Alarm	Act when expansion AIN24 1 sensor 18 low alarm (except warning) occurs.
177	Exp1 Ch18 Low Warn	Act when expansion AIN24 1 sensor 18 low warning occurs.
178	Exp1 Ch19 High Alarm	Act when expansion AIN24 1 sensor 19 high alarm (except warning) occurs.
179	Exp1 Ch19 High Warn	Act when expansion AIN24 1 sensor 19 high warning occurs.
180	Exp1 Ch19 Low Alarm	Act when expansion AIN24 1 sensor 19 low alarm (except warning) occurs.
181	Exp1 Ch19 Low Warn	Act when expansion AIN24 1 sensor 19 low warning occurs.
182	Exp1 Ch20 High Alarm	Act when expansion AIN24 1 sensor 20 high alarm (except warning) occurs.
183	Exp1 Ch20 High Warn	Act when expansion AIN24 1 sensor 20 high warning occurs.
184	Exp1 Ch20 Low Alarm	Act when expansion AIN24 1 sensor 20 low alarm (except warning) occurs.
185	Exp1 Ch20 Low Warn	Act when expansion AIN24 1 sensor 20 low warning occurs.
186	Exp1 Ch21 High Alarm	Act when expansion AIN24 1 sensor 21 high alarm (except warning) occurs.
187	Exp1 Ch21 High Warn	Act when expansion AIN24 1 sensor 21 high warning occurs.
188	Exp1 Ch21 Low Alarm	Act when expansion AIN24 1 sensor 21 low alarm (except warning) occurs.
189	Exp1 Ch21 Low Warn	Act when expansion AIN24 1 sensor 21 low warning occurs.
190	Exp1 Ch22 High Alarm	Act when expansion AIN24 1 sensor 22 high alarm (except warning) occurs.
191	Exp1 Ch22 High Warn	Act when expansion AIN24 1 sensor 22 high warning occurs.
192	Exp1 Ch22 Low Alarm	Act when expansion AIN24 1 sensor 22 low alarm (except warning) occurs.
193	Exp1 Ch22 Low Warn	Act when expansion AIN24 1 sensor 22 low warning occurs.
194	Exp1 Ch23 High Alarm	Act when expansion AIN24 1 sensor 23 high alarm (except warning) occurs.
195	Exp1 Ch23 High Warn	Act when expansion AIN24 1 sensor 23 high warning occurs.
196	Exp1 Ch23 Low Alarm	Act when expansion AIN24 1 sensor 23 low alarm (except warning) occurs.
197	Exp1 Ch23 Low Warn	Act when expansion AIN24 1 sensor 23 low warning occurs.
198	Exp1 Ch24 High Alarm	Act when expansion AIN24 1 sensor 24 high alarm (except warning) occurs.
199	Exp1 Ch24 High Warn	Act when expansion AIN24 1 sensor 24 high warning occurs.
200	Exp1 Ch24 Low Alarm	Act when expansion AIN24 1 sensor 24 low alarm (except warning) occurs.
201	Exp1 Ch24 Low Warn	Act when expansion AIN24 1 sensor 24 low warning occurs.
202	AIN8 Ch1 High Alarm	Act when expansion AIN8 sensor 1 high alarm (except warning) occurs.
203	AIN8 Ch1 High Warn	Act when expansion AIN8 sensor 1 high warning occurs.

No.	Type	Description
204	AIN8 Ch1 Low Alarm	Act when expansion AIN8 sensor 1 low alarm (except warning) occurs.
205	AIN8 Ch1 Low Warn	Act when expansion AIN8 sensor 1 low warning occurs.
206	AIN8 Ch2 High Alarm	Act when expansion AIN8 sensor 2 high alarm (except warning) occurs.
207	AIN8 Ch2 High Warn	Act when expansion AIN8 sensor 2 high warning occurs.
208	AIN8 Ch2 Low Alarm	Act when expansion AIN8 sensor 2 low alarm (except warning) occurs.
209	AIN8 Ch2 Low Warn	Act when expansion AIN8 sensor 2 low warning occurs.
210	AIN8 Ch3 High Alarm	Act when expansion AIN8 sensor 3 high alarm (except warning) occurs.
211	AIN8 Ch3 High Warn	Act when expansion AIN8 sensor 3 high warning occurs.
212	AIN8 Ch3 Low Alarm	Act when expansion AIN8 sensor 3 low alarm (except warning) occurs.
213	AIN8 Ch3 Low Warn	Act when expansion AIN8 sensor 3 low warning occurs.
214	AIN8 Ch4 High Alarm	Act when expansion AIN8 sensor 4 high alarm (except warning) occurs.
215	AIN8 Ch4 High Warn	Act when expansion AIN8 sensor 4 high warning occurs.
216	AIN8 Ch4 Low Alarm	Act when expansion AIN8 sensor 4 low alarm (except warning) occurs.
217	AIN8 Ch4 Low Warn	Act when expansion AIN8 sensor 4 low warning occurs.
218-219	Reserved	
220	DL1 Connect	Details of function description please see the following description.
221	DL2 Connect	
222	DL3 Connect	
223	Ground Relay Output	Details of function description please see the following description.
224	Redundancy Active	Details of function description please see the following description. (Not for HGM9510N)
225	HC1 Response	Details of function description please see the following description.
226	HC2 Response	Details of function description please see the following description.
227-229	Reserved	
230	Stop Mode	Act when the system is in Stop mode.
231	Manual Mode	Act when the system is in Manual mode.
232	Reserved	Reserved
233	Auto Mode	Act when the system is in Auto mode.
234	Gen load Indication	
235-239	Reserved	
240-279	PLC Flag1-40	PLC flag output.
280-299	Reserved	

No.	Type	Description
300	Exp2 Ch15 High Alarm	Act when expansion AIN24 2 sensor 15 high alarm (except warning) occurs.
301	Exp2 Ch15 High Warn	Act when expansion AIN24 2 sensor 15 high warning occurs.
302	Exp2 Ch15 Low Alarm	Act when expansion AIN24 2 sensor 15 low alarm (except warning) occurs.
303	Exp2 Ch15 Low Warn	Act when expansion AIN24 2 sensor 15 low warning occurs.
304-307	Exp1 Ch16 Related Alarm	Act when expansion AIN24 2 sensor 16 alarm occurs.
308-311	Exp1 Ch17 Related Alarm	Act when expansion AIN24 2 sensor 17 alarm occurs.
312-315	Exp1 Ch18 Related Alarm	Act when expansion AIN24 2 sensor 18 alarm occurs.
316-319	Exp1 Ch19 Related Alarm	Act when expansion AIN24 2 sensor 19 alarm occurs.
320-323	Exp1 Ch20 Related Alarm	Act when expansion AIN24 2 sensor 20 alarm occurs.
324-327	Exp1 Ch21 Related Alarm	Act when expansion AIN24 2 sensor 21 alarm occurs.
328-331	Exp1 Ch22 Related Alarm	Act when expansion AIN24 2 sensor 22 alarm occurs.
332-335	Exp1 Ch23 Related Alarm	Act when expansion AIN24 2 sensor 23 alarm occurs.
336-339	Exp1 Ch24 Related Alarm	Act when expansion AIN24 2 sensor 24 alarm occurs.
340-391	23-1-Sensor11~23-1-Sensor 23 Related Alarm	Act when 23-1-Sensor11~23-1-Sensor 23 alarm occurs.
392-443	23-2-Sensor11~23-2-Sensor 23 Related Alarm	Act when 23-2-Sensor11~23-2-Sensor 23 alarm occurs.
444-449	MIO14-1 Input 1~6 Active	Act when MIO14-1 input is active.
450-455	MIO14-2 Input 1~6 Active	Act when MIO14-2 input is active.
456-463	MIO14-1 Sensor1& 2 Alarm	Act when MIO14-1 Sensor 1&2 alarm occurs
464-471	MIO14-2 Sensor1& 2 Alarm	Act when MIO14-2 Sensor 1&2 alarm occurs

7.2.2 DEFINED PERIOD OUTPUT

Defined period output is composed by 2 parts, **period output S1** and **condition output S2**.



While **S1** and **S2** are **TRUE** synchronously, **OUTPUT**;

While **S1** or **S2** is **FALSE**, **NOT OUTPUT**.

Period output S1 can set generator's one or more period output freely, can set the delayed time and output time after enter into period.

Condition output S2 can set as any conditions in output ports.

NOTE: when delay time and output time both are 0 in period output S1, it is **TRUE** in this period.

For example:

Output period: start

Delay output time: 2s

Output time: 3s

Condition output contents: input port 1 is active


Close when condition output active/inactive: close when active (disconnect when inactive);

Input port 1 active, after enter "starts time" and delay 2s, this defined period output is outputting, after 3s, stop outputting;

Input port 1 inactive, defined output period is not outputting.

7.2.3 DEFINED COMBINATION OUTPUT

Defined combination output is composed by 3 parts, **or condition output S1**, **or condition output S2**, and **condition output S3**.

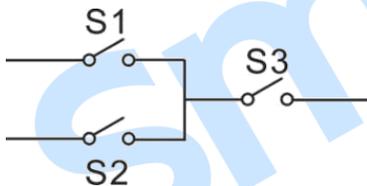

S1 or **S2** is **TRUE**, and **S3** is **TRUE**, defined combination output is outputting;

S1 and **S2** are **FALSE**, or **S3** is **FALSE**, defined combination output is not outputting.

NOTE: S1, S2, S3 can be set as any contents except for "defined combination output" in the output setting.

NOTE: 3 parts of defined combination output (S1, S2, S3) couldn't include or recursively include themselves.

For example:

Contents of or condition output S1: input port 1 is active;

Close when or condition output S1 is active/inactive: close when active (disconnect when inactive);

Contents of or condition output S2, input port 2 is active;

Close when or condition output S2 is active/inactive: close when active (disconnect when inactive);

Contents of and condition output S3: input port 3 is active;

Close when and condition output S3 is active/inactive: close when active (disconnect when inactive);

When input port 1 active or input port 2 active, if input port 3 is active, defined combination output is outputting; If input port 3 inactive, defined combination output is not outputting;

When input port 1 inactive and input port 2 inactive, whatever input port 3 is active or not, defined combination output is not outputting.

7.3 DEFINED CONTENTS OF DIGITAL INPUT PORTS

Table 19 Defined Contents of Digital Input Ports

No.	Type	Description
0	Users Configured	Users-defined alarm. Active range: Never: input inactive. Always: input is active all the time. From crank: detecting as soon as start. From safety on: detecting after safety on run delay.
1	Mains Switch Not Control	Mains closed feedback is judged according to voltage when input is active. If mains and gens are in grid at the same time, when mains split signal is detected, the mains closed feedback signal will be canceled, gens control transfers to island mode.
2	Alarm Mute	Can prohibit "Audible Alarm" output when input is active.
3	Reset Alarm	Can reset shutdown alarm and trip alarm when input is active.
4	60Hz Active	Use for CANBUS engine and it is 60Hz when input is active.
5	Lamp Test	All LED indicators are illuminating when input is active.
6	Panel Lock	All buttons in panel is inactive except navigation buttons and there is  in the right top corner in LCD when input is active.
7	Redundancy Active	Not available for HGM9510N.
8	Idle Control Mode	Under voltage/frequency/speed protection is inactive.
9	Inhibit Auto Stop	In Auto mode, during generator normal running, when input is active, prohibit generator shutdown automatically.
10	Inhibit Auto Start	In Auto mode, prohibit generator start automatically when input is active.
11	Inhibit Scheduled Start	In Auto mode, prohibit scheduled start genset when input is active.
12	Gen Close Inhibit	When input is active and "Gen Close" needs to be output, "Gen Close" process will wait and will not close genset.
13	Gen Closed Input	Connect generator loading switch's auxiliary point.
14	Inhibit Gen Load	Prohibit genset switch on when input is active.
15	Mains Closed Input	Connect Mains loading switch's auxiliary point.
16	Inhibit Mains Load	Prohibit Mains to take load when input is active, and Mains close process won't be conducted.
17	Auto Mode Lock	When input is active, controller enters into Auto mode.
18	Auto Mode Invalid	When input is active, controller won't work under Auto mode. Auto key and simulate auto key input do not work.
19	Static Parallel Mode	When the input is active, the breaker will be closed before the generator set starts up, followed by the startup of all units. The

No.	Type	Description
		controller determines that the unit has reached the on-load speed and provides the DVR excitation output. The DVR then achieves the rated voltage through the voltage building curve to meet the requirement for rapid load application.
20	Black Start Input	When the input is active, the breaker will be closed first, and then the unit will start up normally.
21	Inhibit Alarm Stop	All shutdown alarms are prohibited except emergence stop.(Means battle mode)
22	Instrument Mode	All outputs are prohibited in this mode.
23	Non-Parallel Mode	No parallel process when load is transferred under this mode.
24	Reset Maintenance	Controller will set maintenance time and date as default when input is active.
25	Power Mode (No on-off)	When the input is active, the controller will automatically determine the start/stop status of the generator set. Start/stop control can be performed via the fuel output port, but the start relay will not output.
26	Aux. High Temp	Connected sensor digital input.
27	Aux. Low OP	Connected sensor digital input.
28	Remote Start (On Load)	In Auto mode, when input active, genset can be started and with load after genset is OK; when input inactive, genset will stop automatically.
29	Remote Start (Off Load)	In Auto mode, when input active, genset can be started and without load after genset is OK; when input inactive, genset will stop automatically.
30	Manual Start	In Auto mode, when input active, genset will start automatically; when input inactive, genset will stop automatically
31	Remote Start (On Demand)	In Auto mode, when input active, all genset that need to be paralleled will start according to the priority and calling other generator according to the load.
32	Remote Start (Island)	(Only available for HGM9520N.)
33	Simulate Stop key	An external button (Not Self-locking) can be connected and pressed as simulate panel.
34	Simulate Manual key	
35	Louver Closed	Louver closed feedback.
36	Simulate Auto key	An external button (Not Self-locking) can be connected and pressed as simulate panel.
37	Simulate Start key	
38	Simulate Gen C/O key	This is simulate G-close key.
39	Simulate Mains C/O key	This is simulate G-open key.
40	NEL Manual Trip	An external button (Not Self-locking) can be connected. Details of function description please see the following.
41	NEL Manual Re-connection	
42	Power Management Mode	When the input is active, start/stop control can be performed via the fuel output port, and the start relay will not output.
43	Mains Parallel Mode	The genset will output constant power and not share load with other units when the input is active.

No.	Type	Description
44	First Priority	It is the highest priority when the input is active. Used for main/standby genset selection.
45	Simulate Mains Normal	When the input is active, normal mains power is simulated.
46	Simulate Mains Abnormal	When the input is active, abnormal mains power is simulated.
47	Alternative Config 1	The alternative configuration is active when the input is active. Users can set different parameters to make it easy to select current configuration via input port.
48	Alternative Config 2	
49	Alternative Config 3	
50	Balance Test	When the input is active, the balanced operating time of the current generator set is calculated at a rate of one hour for every 60s.
51	Speed Raise	When the input is active, in constant active power mode and with analog adjustment of active power disabled, increase the active power.
52	Speed Drop	When the input is active, in constant active power mode and with analog adjustment of active power disabled, decrease the active power.
53	Voltage Raise	When the input is active, in constant reactive power mode and with analog adjustment of reactive power disabled, increase the active power.
54	Voltage Drop	When the input is active, in constant reactive power mode and with analog adjustment of reactive power disabled, decrease the active power.
55	Mains Split Transfer to Island	It is inactive when mains parallel mode of controller is inactive. When mains parallel mode of controller is active, and the input port is configured and active, controller will run in normal mains parallel mode with constant power. When mains split is detected, the controller will transfer to island mode running directly. When genset stops or opens, the controller will return to mains parallel mode.
56	Low Water Level	Connect with water level sensor digital input port.
57	Detonation Shutdown	Connect with detection module alarm input port.
58	Gas Leakage Shutdown	Connect with detection module alarm input port.
59	DL Manual Connect	An external button (Not Self-locking) can be connected. Details of function description please see the following.
60	DL Manual Trip	
61	HC1 Request	
62	HC1 Feedback	
63	HC2 Request	
64	HC2 Feedback	
65	Ground Relay Closed	
66	Inhibit Alarm Stop	When "Inhibit Alarm Stop" input is active, the unit will not shut down or trip in response to any alarms except for Emergency Stop Alarm

No.	Type	Description
		and Overspeed Alarms (Overspeed Shutdown Alarm, Overspeed Trip Shutdown Alarm, Overspeed Trip Without Shutdown Alarm).
67	Louver Open	Louver open feedback.
68	After Regen Inhibit	When the input is active, a command of "Aftertreatment Regeneration Inhibit" is sent to the ECU.
69	After Regen Force	When the input is active, a command of "Aftertreatment Regeneration Force" is sent to the ECU.
70	M-Breaker None FDBK	When the input is active, the mains closing operation on the main screen is determined based on the mains normal status and the mains closing feedback input. If both mains and generator are connected to the grid simultaneously, and a mains disconnection signal is detected, the mains closing feedback signal will be removed, and generator control will switch to island mode.
71	Grid-Tied Track	(Only available for HGM9520N.)
72	Island Parallel	(Only available for HGM9520N.)
73-79	Reserved	

7.4 SELECTION OF SENSORS

Table 20 Sensor Selection

No.	Items	Description	Remark
1	Temperature Sensor	0 Not used 1 Custom Res Curve 2 Custom (4-20)mA curve 3 Custom (0-5)V curve 4 VDO 5 CURTIS 6 DATCON 7 SGX 8 SGD 9 SGH 10 PT100 11 SUSUKI 12 PRO 13-15 Reserved	Defined resistance's range is (0~6)kΩ.
2	Pressure Sensor	0 Not used 1 Custom Res Curve 2 Custom (4-20)mA curve 3 Custom (0-5)V curve 4 VDO 10Bar 5 CURTIS 6 DATCON 10Bar 7 SGX 8 SGD 9 SGH 10 VDO 5Bar 11 DATCON 5Bar 12 DATCON 7Bar 13 SUSUKI 14 PRO 15 Reserved	Defined resistance's range is (0~6)kΩ.
3	Level Sensor	0 Not used 1 Custom Res Curve 2 Custom (4-20)mA curve 3 Custom (0-5)V curve 4 SGD 5 SGH 6~15 Reserved	Defined resistance's range is (0~6)kΩ.

 **NOTE:** User should make special declare when order controller if your engine temperature sensor, fuel level sensor or flexible sensor 2 uses non-resistance sensor.

7.5 CONDITIONS OF CRANK DISCONNECT SELECTION

Table 21 Crank Disconnect Conditions

No.	Setting Description
0	Gen frequency
1	Speed sensor
2	Speed sensor + Gen frequency
3	Oil pressure
4	Oil pressure + Gen frequency
5	Oil pressure + Speed sensor
6	Oil pressure + Speed sensor + Gen frequency

NOTES:

- 1) There are 3 conditions to make starter disconnected with engine, that is, speed sensor, generator frequency and engine oil pressure. They all can be used separately. We recommend that engine oil pressure should be used with speed sensor and generator frequency together, in order to make the starter motor separated with engine as soon as possible.
- 2) Speed is the collected signal by magnetic sensor and magnetic sensor is the magnetic equipment installed in starter for detecting flywheel teeth.
- 3) When speed is selected, users must ensure that the number of flywheel teeth is the same with setting, otherwise, "over speed stop" or "under speed stop" may be caused.
- 4) If genset is without magnetic sensor, please don't select corresponding items, otherwise, "start failure" or "loss speed signal" may be caused.
- 5) If genset is without oil pressure sensor, please don't select corresponding items.
- 6) If speed is not selected in crank disconnect setting, the speed displayed on controller is calculated by generating signals.

8 PARAMETERS SETTING

 **CAUTION:** Please change the controller parameters when generator is in standby mode only (e. g. Start conditions selection, configurable input, configurable output, various delay etc.), otherwise, alarming to stop and other abnormal conditions may happen.

 **NOTE:** Maximum set value must over minimum set value in case that the condition of too high as well as too low will happen.

 **NOTE:** When the warning alarm is set, please set the correct return value; otherwise, maybe there is abnormal alarm. When the maximum value is set, the return value must be less than the set value; when the minimum value is set, the return value must be over the set value.

 **NOTE:** Please set the generator frequency value as low as possible when the genset is cranking, in order to make the starter be separated quickly as soon as crank disconnection happens.

 **NOTE:** Configurable input could not be set as the same items (except for user-defined); otherwise, there are abnormal functions. However, the configurable output can be set as the same items.

9 SENSOR SETTING

- 1) When sensors are reselected, the sensor curves will be transferred into the standard value. For example, if temperature sensor is SGX (120°C resistor type), its sensor curve is SGX (120°C resistor type); if select the SGH (120°C resistor type), the temperature sensor curve is SGH curve.
- 2) When there is difference between standard sensor curves and used sensor curves, users can adjust it in the “sensor curve type”.
- 3) When the sensor curve is inputted, x value (resistor) must be inputted from small to large, otherwise, mistake occurs.
- 4) If sensor type is selected as “none”, sensor curve is not working.
- 5) If the corresponding sensor has alarm switch only, users must set this sensor as “none”, otherwise, shutdown or warning may occur.
- 6) The headmost or backmost values in the vertical coordinates can be set as the same as below.



Fig. 4 Sensor Curve Diagram

Table 22 Normal Pressure Unit Conversion Form

Item	N/m ² Pa	kgf/cm ²	bar	psi
1Pa	1	1.02x10 ⁻⁵	1x10 ⁻⁵	1.45x10 ⁻⁴
1kgf/cm ²	9.8x10 ⁴	1	0.98	14.2
1bar	1x10 ⁵	1.02	1	14.5
1psi	6.89x10 ³	7.03x10 ⁻²	6.89x10 ⁻²	1

10 COMMISSIONING

10.1 STEP 1: SINGLE UNIT DEBUGGING

- 1) Check the parameter configurations of the controller;
- 2) Check the genset wiring connections and MSC CAN wiring connection between the units. (e.g. if 3 generators are correctly connected, SYNC screen will display Module Number: 3);
- 3) In manual mode, check whether engine and generator data are normal;
- 4) In manual mode check whether switch open and close are normal;
- 5) In manual mode, after closing the breaker check whether generator frequency can be adjusted to the rated frequency (e.g. set the rated frequency as 52Hz/48Hz);
- 6) In manual mode, after closing the breaker check whether generator voltage can be adjusted to the rated voltage (e.g. set the rated voltage as 240V/220V);
- 7) Activate manual start on-load, and check whether power factor, active power and reactive power are normal; if negative value occurs, check generator voltage and current phase sequences, the incoming line direction of current transformer, and secondary current dotted terminal of current transformer;
- 8) In manual mode do performance tests according to the national standards.

▲NOTE: Please refer to *HGM9500 SYNCHRONIZATION PLAN LIST* for more information on GOV and AVR settings.

10.2 STEP 2: MANUAL PARALLEL OPERATION OFF-LOAD

- 1) Manually close parallel sets, and check whether the parallel synchronization is steady and whether the close impulse current is too high or not;
- 2) After the genset is connected in parallel off-load, check whether the current display has very big loop current;
- 3) After the genset is connected in parallel off-load, observe whether the active power, reactive power outputs are "0"; if they are not 0, observe whether there is power oscillation; if they are 0, users can properly modify the gain and stability values, or adjust the engine GOV or generator AVR gain and stability potentiometer, in order to avoid active and reactive power oscillation and make output close to 0.

10.3 STEP 3: MANUAL PARALLEL OPERATION ON-LOAD

- 1) After the gensets are connected in parallel manually, perform on-load test and check whether active and reactive power are evenly distributed between all gensets;
- 2) After the gensets are connected in parallel manually, perform ramp on-load test to see if there is high overshoot or power oscillation during this period; if there is, regulate load ramp;
- 3) After the gensets are connected in parallel manually on-load, perform ramp off-load test to see if genset breaker opens after reaching minimum set value (%);
- 4) After the gensets are connected in parallel manually, perform impact load test and damp load test to check if there is power oscillation.

10.4 STEP 4: AUTOMATIC PARALLEL OPERATION

When the controller is in auto status, if digital input “remote start on-load (on demand)” is active, it will carry out automatic parallel, start and stop operation. There are 3 ways of automatic parallel operation:

- 1) Start on demand: the module with the highest priority starts firstly. When load exceeds the pre-set start maximum percentage, the second according to the priority module will start the genset. Synchronize the gensets and make them share load. When load is lower than the preset minimum stop percentage, after stop delay the second module breaker will be open and the module will be cooled down and stopped.
- 2) Start all sets initially: all the modules start at the same time; the first module to reach load condition closes first; when other modules reach load condition, they synchronize one by one. After that the modules monitor the load. If load value falls below module pre-set shutdown minimum percentage, the module with lowest priority enters stop delay and then cools down and stops. If load exceeds the preset start maximum percentage, the generators that are at rest will all start again.
- 3) Balanced engine running time: Engine with the lowest total running time B starts first. When the running genset total running time exceeds the other genset balanced running time B, then the genset with the next lowest total running time starts (both “start on demand” or “start all sets initially” modes are possible); after other gensets are connected and synchronized in parallel, breaker open and unloading are performed automatically. All the gensets are circularly started and stopped according to their total running time.

11 TYPICAL APPLICATION

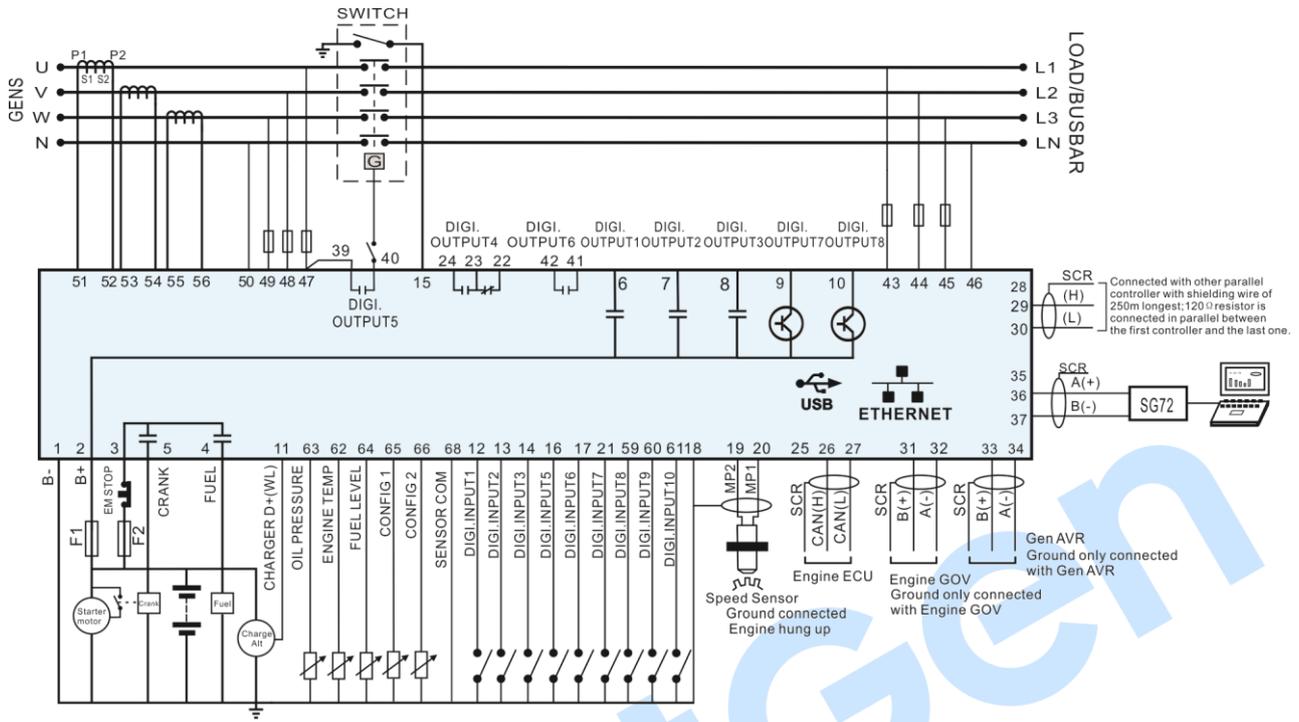


Fig. 5 HGM9510N/HGM9530N 3-Phase 4-Wire Typical Application Diagram

NOTE: Fuse F1: min. 2A; max. 20A. Fuse F2: max. 32A. Users should select the suitable fuse depending on practical application.

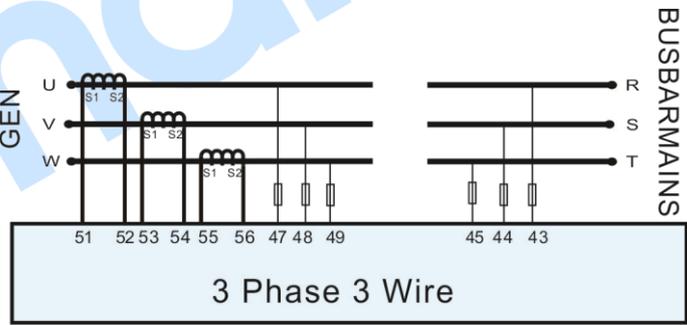


Fig. 6 3-Phase 3-Wire Typical Application Diagram

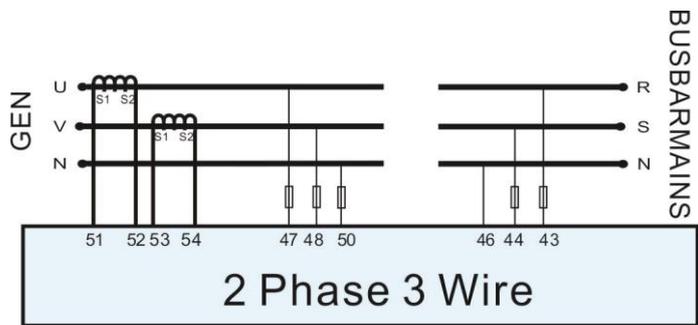


Fig. 7 2-Phase 3-Wire Typical Application Diagram

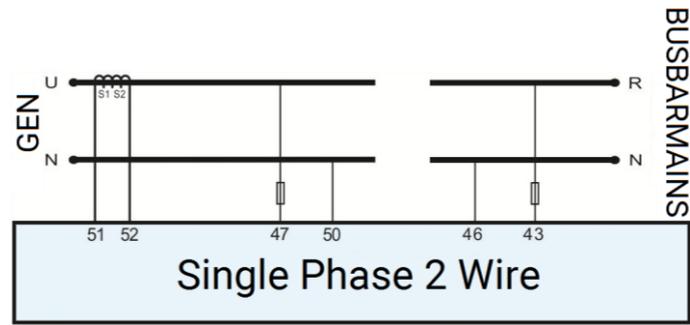


Fig. 8 Single Phase 2-Wire Typical Application Diagram

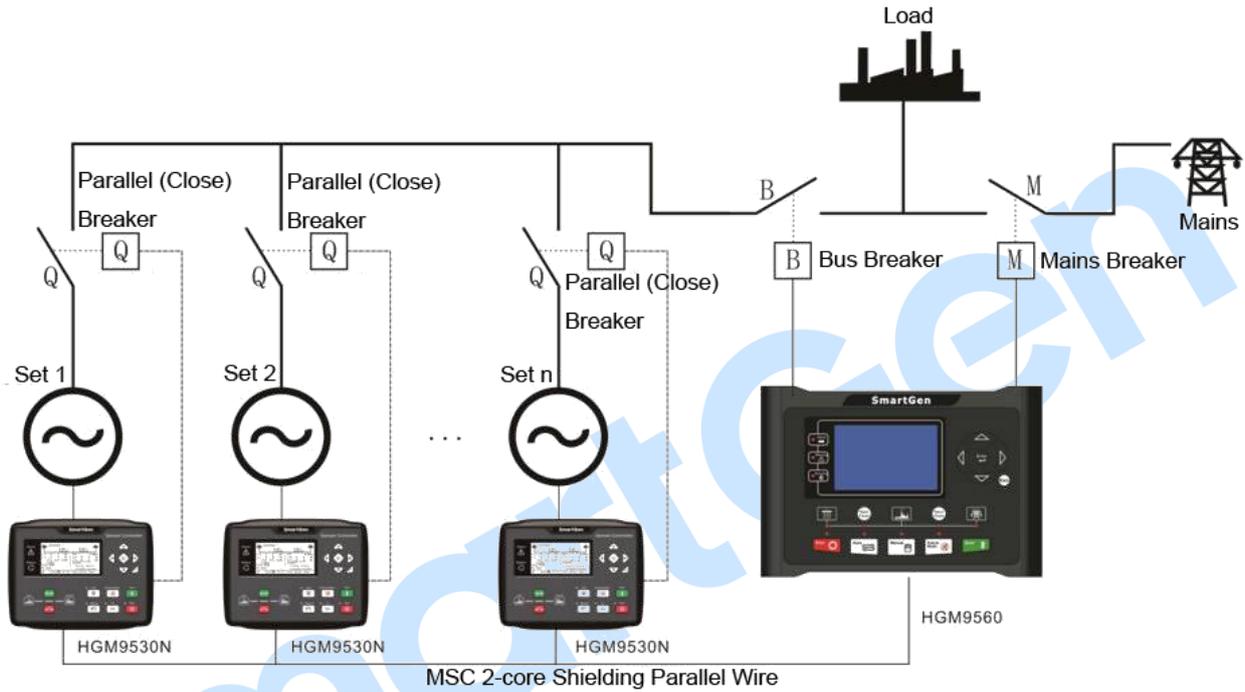


Fig. 9 HGM9510N/HGM9530N Multi-genset Parallel Application Diagram

NOTE: Mains parallel function for HGM9510N/9530N controller can be selected via configurable input port. In mains parallel mode, generator will run in parallel with mains and it will only be able to output a fixed amount of power. (Set load mode as Gen control mode).

12 POWER MANAGEMENT MODE

Power management mode is to be selected via a digital input port.

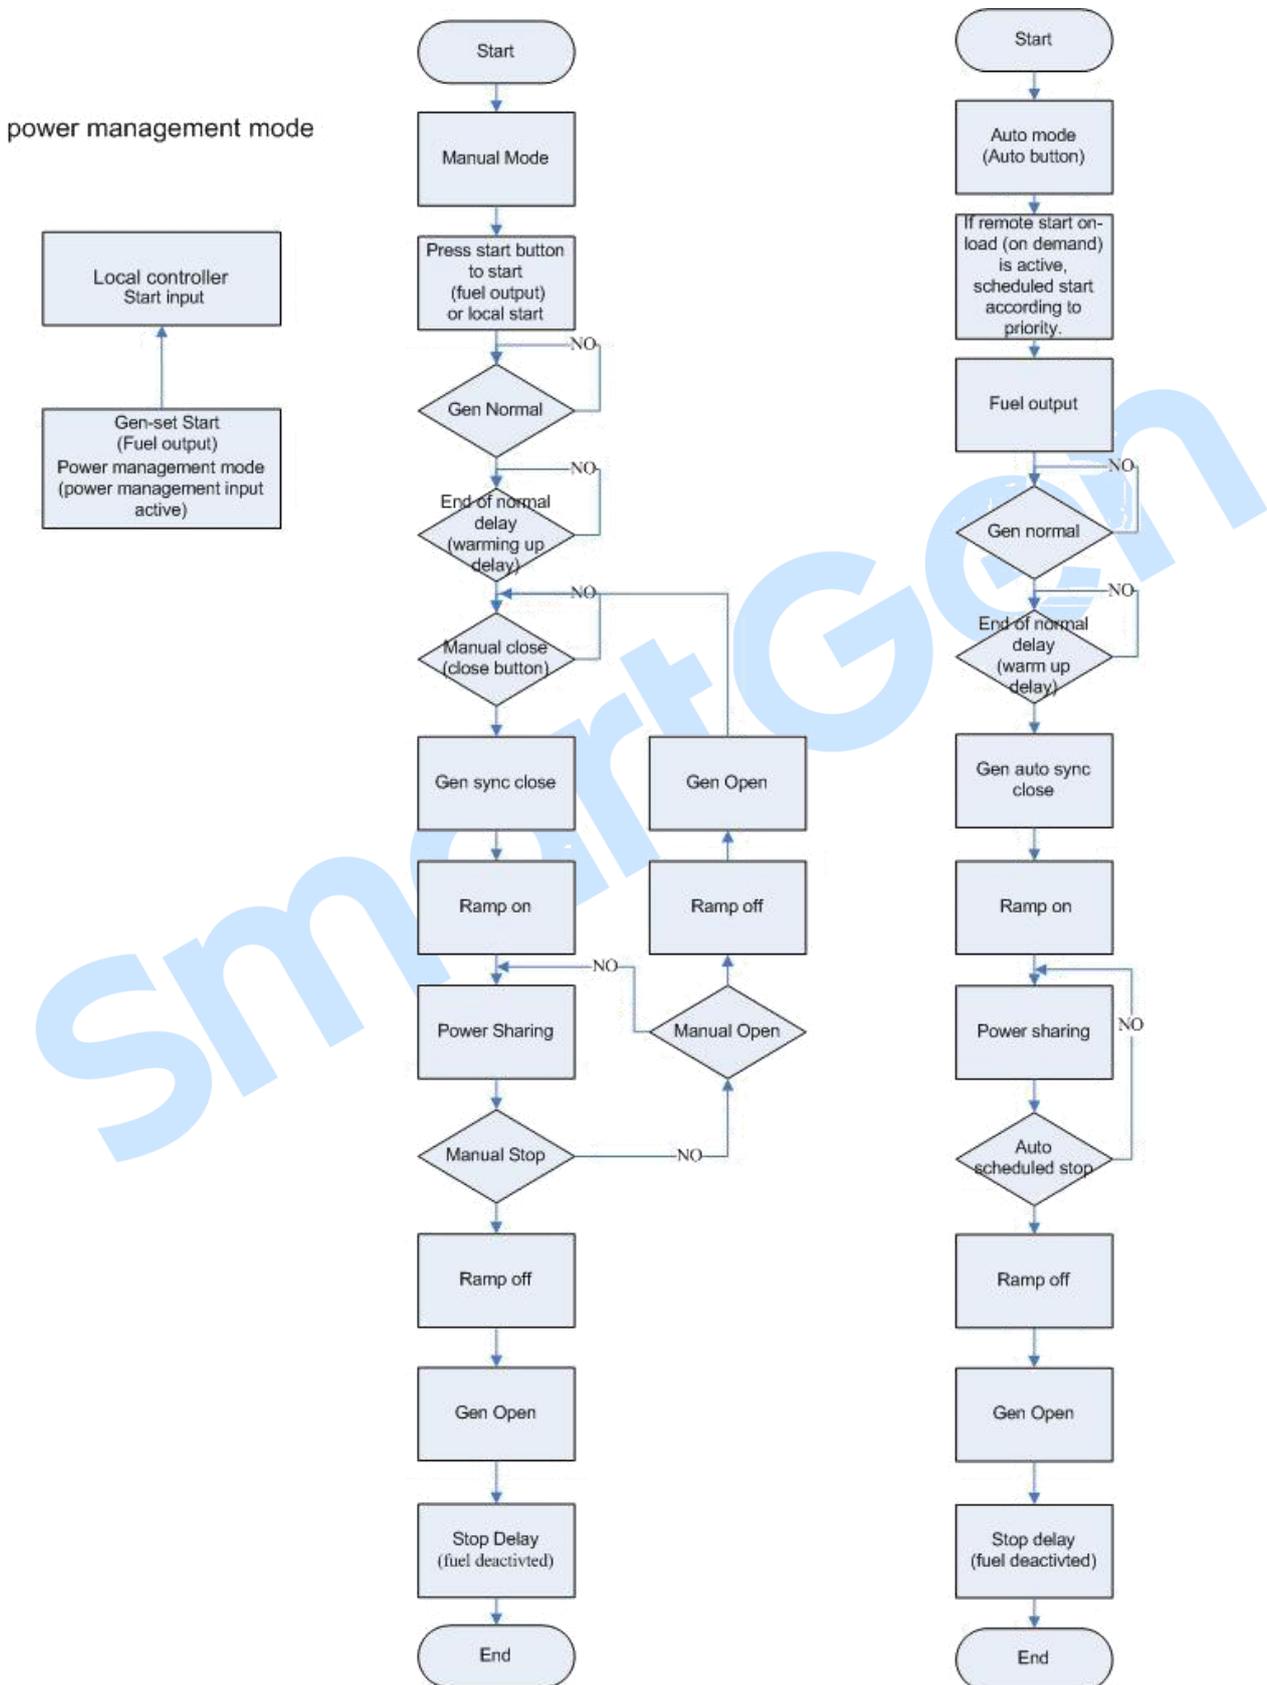


Fig.10 Power Management Logic

13 NEL TRIP DESCRIPTION

Non-essential Load---NEL is the abbreviation.

The controller can control the NEL1, NEL2 and NEL3 to trip separately. The order of the essentiality is: NEL3 > NEL2 > NEL1

◆ Auto Trip

When NEL auto trip is enabled:

If the genset power has exceed the NEL trip value, after the trip delay, NEL1 will trip earliest, and then is NEL2, NEL3;

When NEL auto reconnection is enabled:

If the genset power has fallen below the auto reconnection set value, after the auto reconnection delay, NEL3 will reconnect earliest, and then is NEL2, NEL1.

t1: NEL Trip Delay
t2: Reconnection Delay

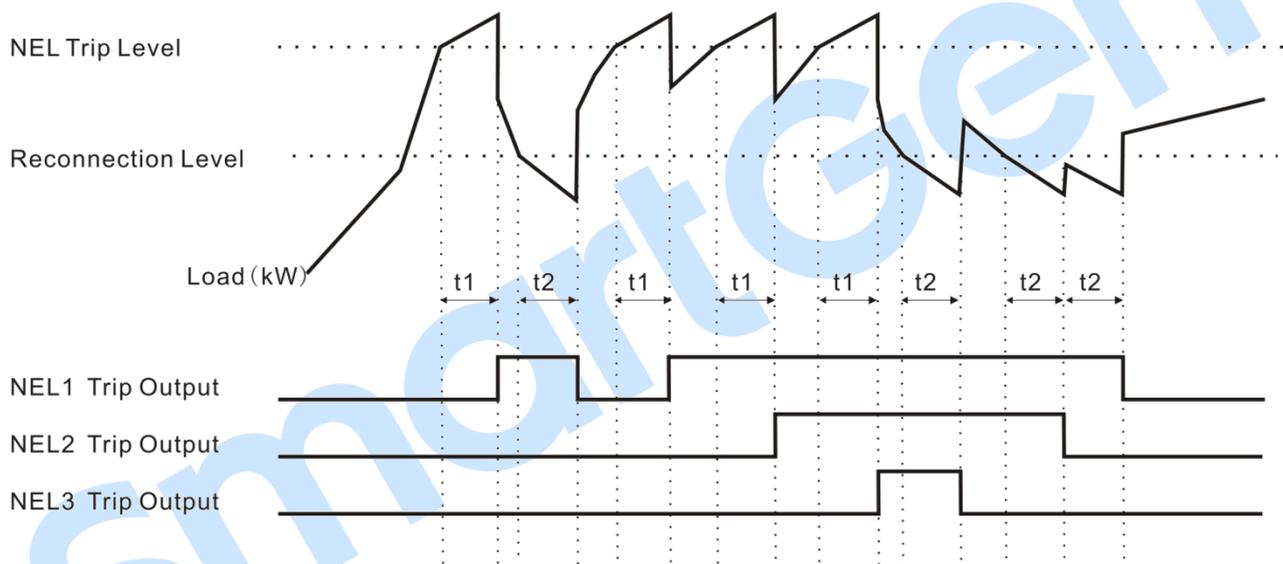


Fig.11 NEL Sequence

◆ Manual Trip

If NEL manual trip input is active (earthed falling edge is active), NEL1 will trip without delay; If NEL manual trip input is active again, NEL2 will trip; If NEL manual trip input is active the third time, NEL3 will trip;

If NEL manual reconnection input is active (earthed falling edge is active), NEL3 will reconnect without delay; If NEL manual reconnection input is active again, NEL2 will reconnect; If NEL manual reconnection input is active the third time, NEL1 will reconnect. During this process, the controller detects the genset power: if the genset power has fallen below the NEL reconnection value, then the input is active; if it doesn't, the input is deactivated.

▲NOTE: When auto trip and auto reconnection are enabled, manual trip is still active.

14 DUMMY LOAD CONNECTION

Dummy Load --- DL for short.

The controller can control the 3 ways of DL connect separately. The order of the essentiality is: DL1 > DL2 > DL3

◆ Auto operation

When DL auto connect is enabled:

If the genset power has fallen below the DL connection value, after the connection delay, DL1 will connect the earliest, and then is DL2, DL3;

When DL auto disconnect is enabled:

If the genset power has exceed the DL disconnect value, after the disconnect delay, DL3 will disconnect the earliest, and then is DL2, DL1.

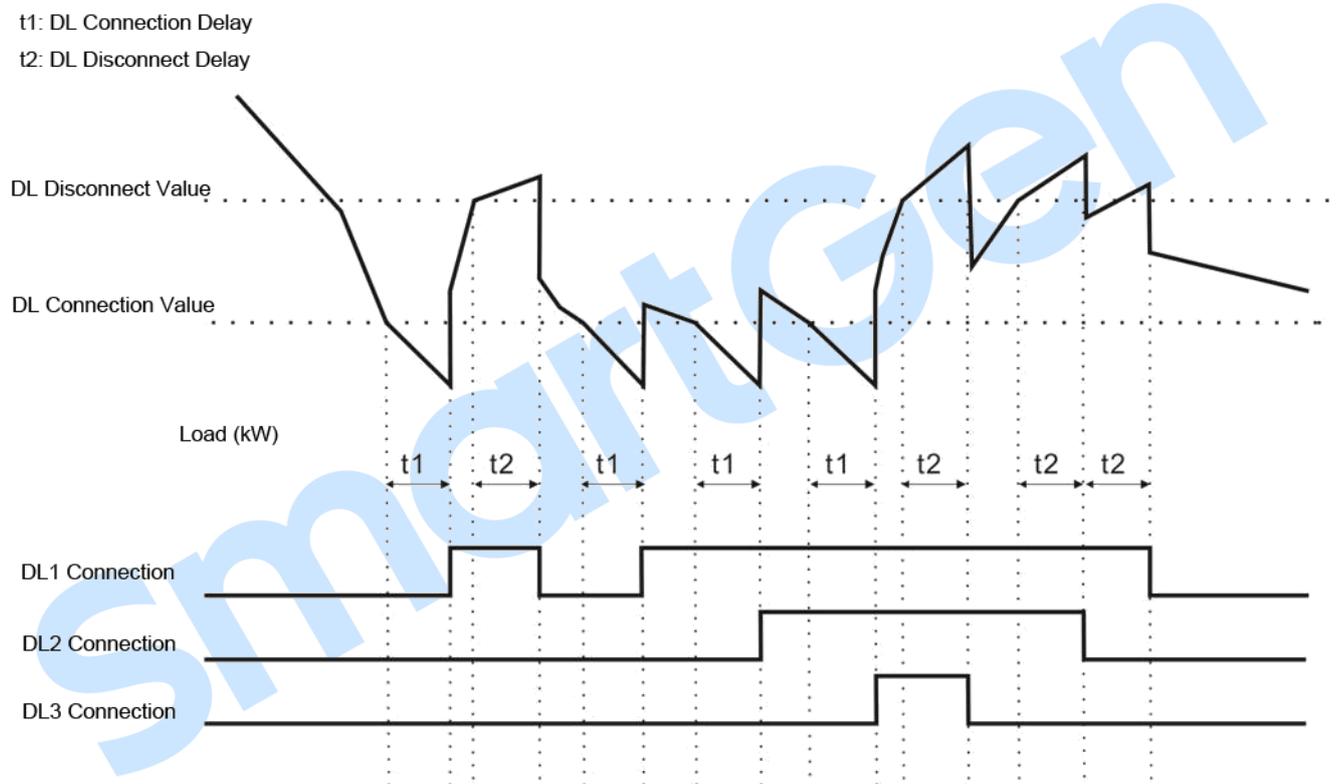


Fig.12 DL Sequence

◆ Manual Operation

If manual DL connect input is active (earthed falling edge is active), DL1 will connect without delay; If manual DL connect input is active again, DL2 will connect; If manual DL connect input is active the third time, DL3 will connect. During this process, the controller will detect if the genset power has fallen the DL connection value or not. If genset power is below DL connection value, this input is active, otherwise, it will be ignored;

If manual DL disconnect input is active (earthed falling edge is active), DL3 will disconnect without delay; If manual DL disconnect input is active again, DL2 will disconnect; If manual DL disconnect input is active the third time, DL1 will disconnect.

▲NOTE: When auto connection and auto disconnection are enabled, manual operation is still active.

15 GROUND BREAKER CONTROL DESCRIPTION

This function can be realized via configuring ground breaker of controller output port.

Priority of closing ground breaker: in the closed gensets, the genset with the biggest rated power has the highest priority to close ground breaker. If genset rated power is the same, it is chosen based on the module priority. When the ground breaker of the highest priority genset fails to close, the second highest priority will be chosen. When there is a grounding breaker open fault in the closed gensets, the other units are prohibited from closing the grounding breaker.

Ground breaker action:

- a. Genset stop: ground breaker opened.
- b. Genset is normal running and gen opened: ground breaker closed.
- c. Genset is normal running and gen closed: ground breaker closed when this genset with the highest priority, otherwise, ground breaker opened.

SmartGen

16 PRIORITY RUNNING AND BALANCED RUNNING TIME DESCRIPTION

Different module IDs must be configured for the controller, but the module priority can be the same (the smaller number with the higher priority). Balanced Running Time function is enabled by the controller "Balance Hours" function. All gensets that need to have balanced running time shall set the same module priority.

Scheduling running principles:

- a. Genset with the higher priority starts firstly and stop lastly.
- b. Gensets with the same priority:

If "Balance Hours" function is enabled, the unit with less running time has higher priority, otherwise, the unit with the smaller module ID has higher priority. Running time is user accumulated running time B.

- c. When "Call Sets Mode" is genset power percentage, if gen load (%) exceeds pre-set "Call More Sets (%)" limit, the standby genset with higher priority will start up; if gen load (%) falls below pre-set "Call Less Sets (%)" limit after one genset stopped, the genset with lower priority will stop.
- d. When "Call Sets Mode" is available power, if bus available power (difference value of rated power of closed gensets and current loading power) falls below "Call More Sets (W)", the standby genset with higher priority will start up; if bus available power exceeds pre-set "Call Less Sets (W)" limit, the genset with lower priority will stop.
- e. If "Sets on Bus" is the minimum scheduled sets, the number of genset on the bus is prioritized.
- f. "Economy Fuel" scheduling function cannot work together with "Balance Hours" scheduling function. If "Economy Fuel" scheduling is enabled, "Balance Hours" scheduling function will not work any longer.

e.g.: Rated power of genset 1 is 100kW, module ID is 1 and priority is 1; rated power of genset 2 is 100kW, module ID is 2 and priority is 2; rated power of genset 3 is 100kW, module ID is 3 and priority is 2, and genset 2 has the same running time with genset 3. The three gensets settings are: "Balance Hours" is enabled, and "Balance Hours" is set as 1 hour, "Call Sets Mode" is genset power percentage and set scheduling start genset percentage is 80% and scheduling stop genset percentage is 50%, "Sets on Bus" number is 1.

Three gensets are in auto mode, and "start on demand" is active, then genset 1 starts and takes load.

Current load is 85kW, genset 1 load percentage is 85%, which is above "Call More Sets (80%)". Since genset 2 has the same running time with genset 3, but genset 2 ID is smaller than genset 3, so genset 2 will start and take on load.

After running for 1 hour, current load is 90kW, genset 2 load percentage is 45%, running time of genset 2 is longer than genset 3, and then genset 3 will start and take on load. If it meets "Call Less Sets (%)" condition, genset 2 will ramp-off load and stop.

Current load is 166kW, start genset percentage is 83%, which is above "Call More Sets (80%)", other gensets will request to start, and then genset 2 will start and take on load.

17 ECONOMICAL FUEL CONSUMPTION DESCRIPTION

Economical fuel consumption function is enabled by “Economy Fuel” setting of the controller. All sets shall be set as the same economical fuel consumption parameters, including “Economy Fuel”, “Economy Fuel (%)”, and “Economy Swap (W)”.

Scheduling running principles:

- a. First of all, use the fewest parallel sets if it is possible. If one set is enough to satisfy the running conditions, don't use two. The rest can be done in the same manner.
- b. Secondly, satisfy economical fuel consumption percentage. The load percentage of the chosen running plan shall not be bigger than and shall be closest to the economical fuel consumption percentage.
- c. It shall be satisfied that the total difference of the two plans' rated powers shall be bigger than the exchange power when the better running plan is employed.
- d. Start/stop scheduling parameters (scheduling start percentage, scheduling stop percentage, scheduling start available power, scheduling stop available power, online unit number) shall still work when the economical fuel consumption enable is active.
- e. “Economy Fuel” and “Balance Hours” scheduling cannot be used at the same time. When “Economy Fuel” is enabled, “Balance Hours” shall not be active.

e.g. The rated power of Genset 1 is 100kW, Genset 2 300kW, Genset 3 500kW. Settings: “Economy Fuel” enabled, “Economy Swap (W)” 200kW, “Economy Fuel (%)” 50%, “Call More Sets (%)” 85%, “Call Less Sets (%)” 50%.

Current load is 0kW and all of them are power-off. Then Genset 1 starts and loads.

Current load is 60kW, and Genset 1 loading percentage is 60%, which is bigger than “Economy Fuel (%)” 50%. Choose the best running plan Genset 2. Previous plan's rated power is 100kW and the best plan's is 300kW, so the exchange power is not less than 200kW. Genset 2 starts and loads, and Genset 1 unloads and stops.

Current load is 160kW, and Genset 2 loading percentage is 53.3%, which is bigger than “Economy Fuel (%)” 50%. Choose the best running plan Genset 3 and it satisfies the exchange power. Genset 3 starts and loads, and Genset 2 unloads and stops.

Current load is 260kW, and Genset 3 loading percentage is 52%, which is bigger than “Economy Fuel (%)” 50%. Then choose the best plan Genset 1 + Genset 3. Previous plan's rated power is 500kW and this one is 600kW, so the exchange power is less than 200kW, genset 3 still takes loads separately.

Current load is 310kW, and Genset 3 loading percentage is 62%, which is bigger than “Economy Fuel (%)” 50%. Then choose the best plan Genset 2 + Genset 3. Previous plan's rated power is 500kW and this one is 800kW, which conforms to the exchange power. Genset 2 starts and loads with Genset 3 together.

18 STATIC PARALLEL CONNECTION

Static parallel connection function can be chosen by a digital input port.

It applies to fast parallel connection occasions. All gensets disconnect generator excitation and close the switch to start at the same time. After all the generators' speed is up to the loading speed and meanwhile excitation signals are issued. At this time the generator voltage is formed and the genset parallel connection is completed. This procedure spares the time used in the normal parallel connection process when the genset is waiting for all synchronous conditions are satisfied and then close the switch to start. If the genset cannot realize the excitation output condition during the "Static Parallel Delay" period, it exits from "Static Parallel" mode and changes to normal parallel connection mode. The genset opens the switch and excitation outputs. It will wait and until all synchronous conditions are satisfied it closes and starts to work.

This function applies to soft-start loading occasion. For example: when the genset connects to the transformer.

SmartGen

19 HEAVY LOAD REQUEST

Each controller can deal with two heavy load requests: HC 1 and HC 2, and HC1 > HC 2. The priority of the controller decides the priority of its heavy load request. That is heavy load request of high priority controllers is prior to response.

When a HC is asking the controller for starting request, the system shall remain the demanded capacity in the busbar until the system predicts that the capacity left in the busbar satisfies the demand after the HC starts.

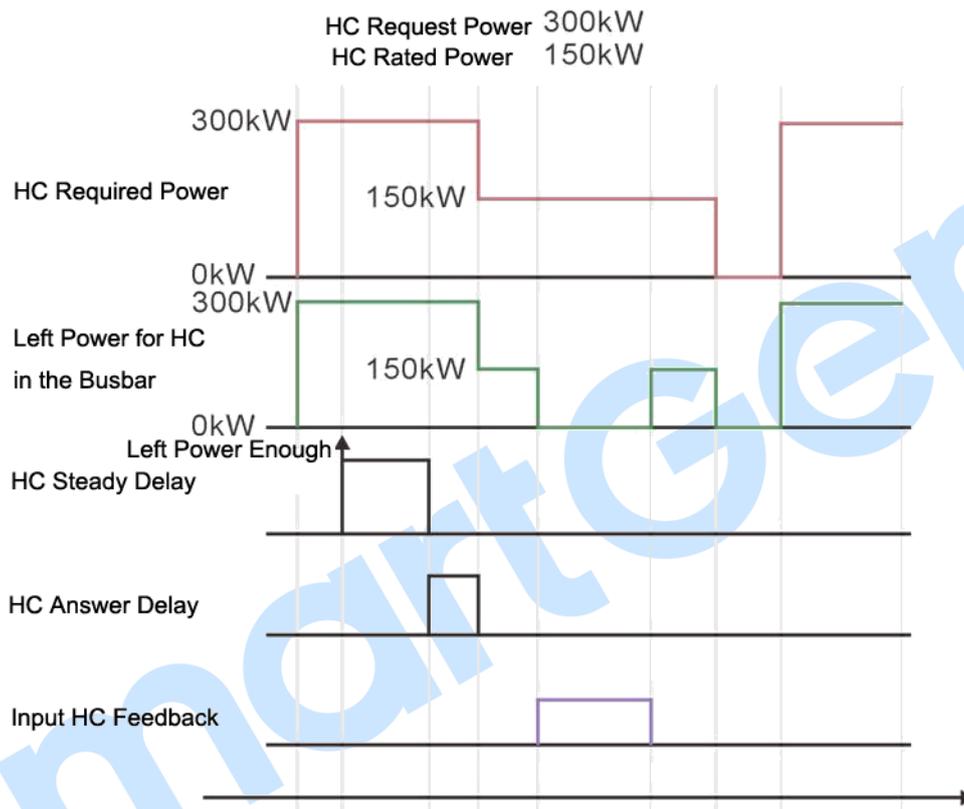


Fig. 13 HC Sequence Graph

HC Sequence Graph Description:

- a. HC 1 request power 300kW; HC 1 rated power 150kW;
- b. Left power 300kW for HC 1 in the busbar; if the current genset cannot provide, the spare genset starts.
- c. There is enough left power in the busbar and “HC Steady Delay” starts.
- d. After “HC Steady Delay”, the controller starts to output answer signal.
- e. During/after the “Answer Delay”, according to the different status of the feedback and request signal, the busbar has different resolution for HC 1.
- f. If the feedback is valid, the busbar shall not remain power for HC 1.
- g. If the feedback is invalid, the busbar only reserves HC 1 rated power when HC request is valid.
- h. If the feedback is invalid, the busbar will not reserve any power when HC request is invalid.

20 CONTROLLER REDUNDANCY

It is not available for HGM9510N.

Controller redundancy system is consisted of two controllers. They shall be set as the same MSC ID. It shall be set to main controller, redundancy controller respectively at main/redundancy setting.

When the redundancy controller detects the main controller breakdown (redundancy controller does not receive data frames from the main controller in MSC communication, or the redundancy controller receives active redundancy output messages from the main controller.), it will take over the genset controlling, and outputs redundancy controller active messages to the main controller and meanwhile change over controlling signals.

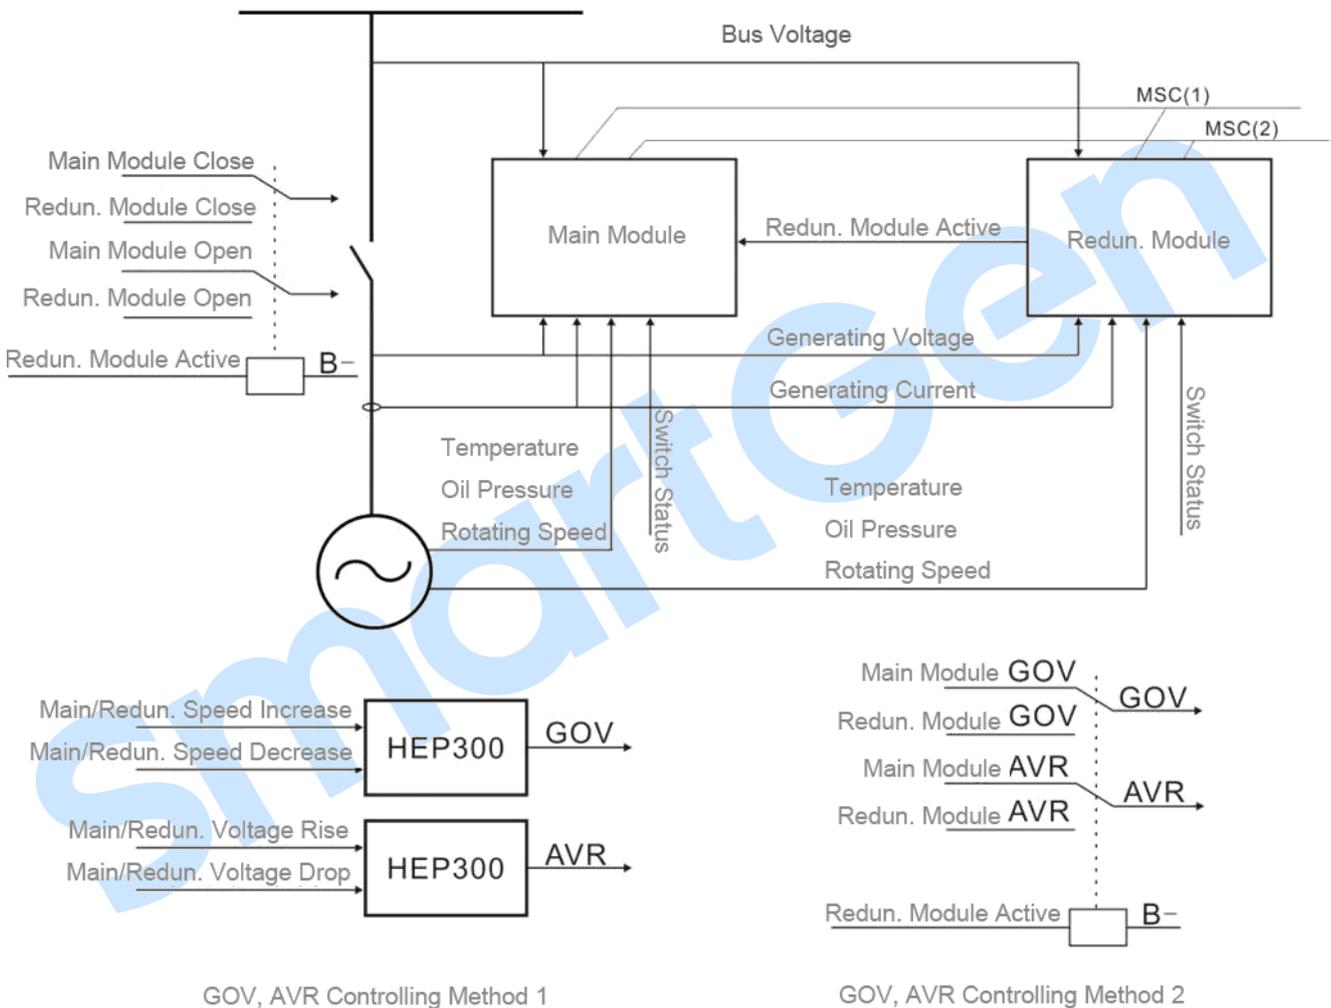


Fig. 14 Redundancy Controller Connection

Two methods of GOV, AVR controlling:

Method 1: Using electronic potentiometer HEP300. Main controller and redundancy controller are connected to the digital input ports of speed increase/decrease (voltage rise/drop) in the HEP300, and then analog signal outputs of HEP300 are connected to the GOV (AVR). By using this method when the main controller and the redundancy controller are switching, the voltage signal outputs to the GOV (AVR) shall not be intercepted and the genset will change over and be controlled by the redundancy controller smoothly.

Method 2: Using a relay to directly switch two controllers' GOV, AVR controlling outputs. Its circuit is simple, but when the main controller and the redundancy controller are switching, the voltage signal outputs to the GOV could be interrupted and it may arise fluctuation on parts of the genset.

SmartGen

21 INSTALLATION

The controller is panel built-in design; it is fixed by clips when installed.

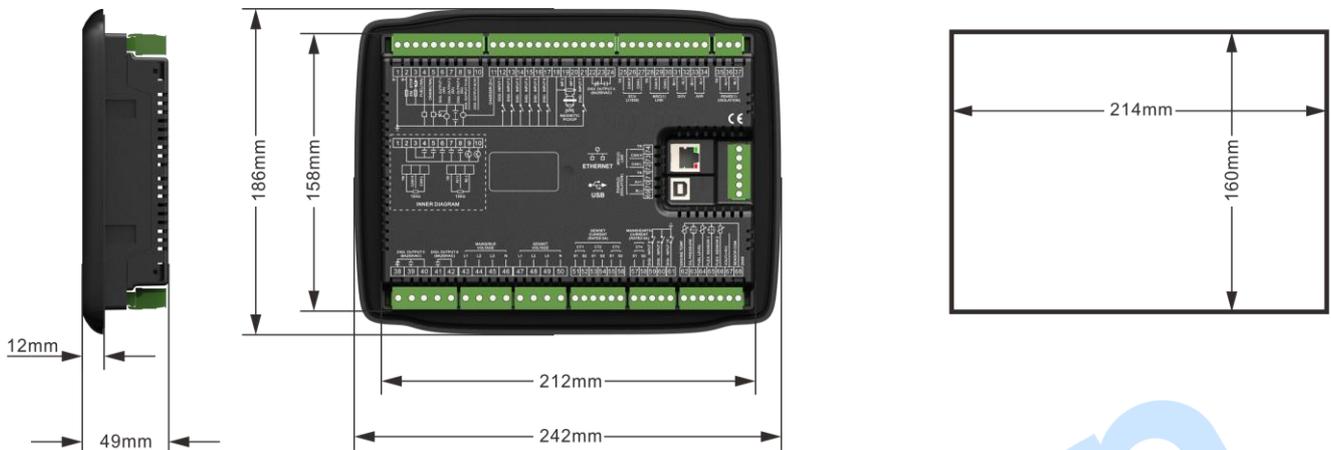


Fig. 15 Dimension and Cutout Size

1) Battery Voltage Input

NOTE: HGM9510N/9530N controller can suit for wide range of battery voltage (8~35) VDC. Battery negative electrode must be connected with the engine shell stably. The wire area connecting controller power B+/B- with negative and positive electrodes must be over 2.5mm². If floating charge is configured, please firstly connect output wires of charger to battery's positive and negative directly, and then connect wires from battery's positive and negative to controller's positive and negative input ports separately in order to prevent the charge from disturbing the controller's normal working.

2) Speed Sensor Input

NOTE: Speed sensor is the magnetic equipment installed in the engine body to detect flywheel teeth number. The wires used to connect with the controller shall be 2-core shielding wires. The shielding layer shall be connected to No. 18 terminal on the controller, and meanwhile the other terminal shall be hanging in the air. Another two signal wires shall be connected to No.19 and No.20 terminals on the controller. The output voltage of the speed sensor shall be within (1~24) VAC (effective value) in the range of full speed and 12VAC is recommended (at rated speed). As to speed sensor installation, the sensor can firstly be spun to the connection flywheel, then invert 1/3 lap, and finally tighten up the screw on the sensor.

3) Output and Expand Relays

CAUTION: All controller outputs are relay contact outputs. If the expansion relay is needed, freewheel diode (relay coil is DC) and resistor and capacitor circuit (relay coil is AC) shall be added to the two ends of the relay coils in order to prevent disturbing the controller or others equipment.

4) AC Current Input

Controller current input must be connected to outside current transformer. The secondary side current of the current transformer must be 5A and at the same time current transformer phase and input voltage phase must be correct, otherwise the collected current and active power maybe not correct.

NOTE: ICOM port must be connected to negative pole of battery.



WARNING! When there is load current, transformer's secondary side is prohibited open circuit.

5) Withstand Voltage Test

⚠CAUTION! When controller had been installed in control panel, if need the high voltage test, please disconnect controller's all terminal connections, in order to prevent high voltage into controller and damage it.

SmartGen

22 CONNECTIONS OF CONTROLLER AND J1939 ENGINE

22.1 CUMMINS ISB/ISBE

Table 23 Connector B

Terminals of controller	Connector B	Remark
Fuel relay output	39	
Starting relay output	-	Connected with starter coil directly.
Auxiliary output port 1	Expansion 30A relay; providing battery voltage for terminal 01, 07, 12, 13.	ECU power; Set output 1 as "ECU power".

Table 24 9-Pin Connector

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield	CAN communication shielding line (connected with ECU terminal only).
CAN(H)	SAE J1939 signal	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return	Impedance 120Ω connecting line is recommended.

Engine type: Cummins ISB.

22.2 CUMMINS QSL9

Suitable for CM850 engine control module.

Table 25 50-Pin Connector

Terminals of controller	50 pins connector	Remark
Fuel relay output	39	
Starting relay output	-	Connected to starter coil directly.

Table 26 9-Pin Connector

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield-E	CAN communication shielding line (connected with ECU terminal only).
CAN(H)	SAE J1939 signal-C	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return-D	Using impedance 120Ω connecting line.

Engine type: Cummins-CM850.

22.3 CUMMINS QSM11 (IMPORT)

It is suitable for CM570 engine control module. Engine type is QSM11 G1, QSM11 G2.

Table 27 C1 Connector

Terminals of controller	C1 connector	Remark
Fuel relay output	5&8	External expansion relay; on fuel output, make port 5 and port 8 of C1 connector be connected.
Starting relay output	-	Connected to starter coil directly.

Table 28 3-Pin Data Link Connector

Terminals of controller	3 pins data link connector	Remark
CAN GND	C	CAN communication shielding line (connected with ECU terminal only).
CAN(H)	A	Using impedance 120Ω connecting line.
CAN(L)	B	Using impedance 120Ω connecting line.

Engine type: Cummins ISB.

22.4 CUMMINS QSX15-CM570

It is suitable for CM570 engine control module. Engine type is QSX15 etc.

Table 29 50-Pin Connector

Terminals of controller	50 pins connector	Remark
Fuel relay output	38	Injection switch.
Starting relay output	-	Connected to starter coil directly.

Table 30 9-Pin Connector

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield-E	CAN communication shielding line (connected with ECU terminal only).
CAN(H)	SAE J1939 signal-C	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return-D	Using impedance 120Ω connecting line.

Engine type: Cummins QSX15-CM570.

22.5 CUMMINS GCS-MODBUS

It is suitable for GCS engine control module. Use RS485-MODBUS to read information of engine. Engine types are QSX15, QST30, QSK23/45/60/78 and so on.

Table 31 D-SUB Connector 06

Terminals of controller	D-SUB connector 06	Remark
Fuel relay output	5&8	Outside expansion relay; on fuel output, make port 05 and 08 of connector 06 be connected.
Starting relay output	-	Connected to starter coil directly.
RS485 GND	20	CAN communication shielding line (connected with ECU this terminal only).
RS485+	21	Using impedance 120Ω connecting line.
RS485-	18	Using impedance 120Ω connecting line.

Engine type: Cummins QSK-MODBUS, Cummins QST-MODBUS, Cummins QSX-MODBUS.

22.6 CUMMINS QSM11

Table 32 Engine OEM Connector

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	38	
Starting relay output	-	Connected with starter coil directly.
CAN GND	-	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	46	Using impedance 120Ω connecting line.
CAN(L)	37	Using impedance 120Ω connecting line.

Engine type: Common J1939.

22.7 CUMMINS QSZ13

Table 33 Engine OEM Connector

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	45	
Starting relay output	-	Connected to starter coil directly.
Programmable output 1	16&41	Set as idling speed control; (N/C) output; by expansion relay, make 16&41 close as the controller is running.
Programmable output 2	19&41	Set as pulse speed raising control; (N/O) output; by expansion relay, make 19&41 for 0.1s as the controller is entering warming-up time.
CAN GND	-	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	1	Using impedance 120Ω connecting line.
CAN(L)	21	Using impedance 120Ω connecting line.

Engine type: Common J1939.

22.8 DETROIT DIESEL DDEC III/IV

Table 34 Engine CAN Port

Terminals of controller	CAN port of engine	Remark
Fuel relay output	Expansion 30A relay, proving battery voltage for ECU.	
Starting relay output	-	Connected to starter coil directly.
CAN GND	-	CAN communication shielding line (connected with controller terminal only).
CAN(H)	CAN(H)	Using impedance 120Ω connecting line.
CAN(L)	CAN(L)	Using impedance 120Ω connecting line.

Engine type: Common J1939.

22.9 DEUTZ EMR2

Table 35 F Connector

Terminals of controller	F connector	Remark
Fuel relay output	Expansion 30A relay, proving battery voltage for 14; Fuse is 16A.	
Starting relay output	-	Connected to starter coil directly.
-	1	Connected to battery negative.
CAN GND	-	CAN communication shielding line (connected with controller terminal only).
CAN(H)	12	Impedance 120Ω connecting line is recommended.
CAN(L)	13	Impedance 120Ω connecting line is recommended.

Engine type: Volvo EDC4.

22.10 JOHN DEERE

Table 36 21-Pin Connector

Terminals of controller	21 pins connector	Remark
Fuel relay output	G, J	
Starting relay output	D	
CAN GND	-	CAN communication shielding line (connected with controller terminal only).
CAN(H)	V	Using impedance 120Ω connecting line.
CAN(L)	U	Using impedance 120Ω connecting line.

Engine type: John Deere.

22.11 MTU ADEC (SMART MODULE)

Suitable for MTU engines with ADEC (ECU8) and SMART module.

Table 37 ADEC

Terminals of controller	ADEC (X1 port)	Remark
Fuel relay output	X1 10	X1 9 shall connect battery negative.
Starting relay output	X1 34	X1 33 shall connect battery negative.

Table 38 SMART

Terminals of controller	SMART (X4 port)	Remark
CAN GND	X4 3	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	X4 1	Using impedance 120Ω connecting line.
CAN(L)	X4 2	Using impedance 120Ω connecting line.

Engine type: MTU-ADEC.

22.12 MTU ADEC (SAM MODULE)

It is suitable for MTU engine with ADEC (ECU7) and SAM module.

Table 39 ADEC

Terminals of controller	ADEC (X1 port)	Remark
Fuel relay output	X1 43	X1 28 shall connect negative of battery.
Starting relay output	X1 37	X1 22 shall connect negative of battery.

Table 40 SAM

Terminals of controller	SAM (X23 port)	Remark
CAN GND	X23 3	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	X23 2	Using impedance 120Ω connecting line.
CAN(L)	X23 1	Using impedance 120Ω connecting line.

Engine type: Common J1939.

22.13 PERKINS

It is suitable for ADEM3/ADEM4 engine control module. Engine type is 2306, 2506, 1106, and 2806.

Table 41 Connector

Terminals of controller	Connector	Remark
Fuel relay output	1,10,15,33,34	
Starting relay output	-	Connected to starter coil directly.
CAN GND	-	CAN communication shielding line (connected with controller terminal only).
CAN(H)	31	Using impedance 120Ω connecting line.
CAN(L)	32	Using impedance 120Ω connecting line.

Engine type: Perkins.

22.14 SCANIA

It is suitable for S6 engine control module. Engine type is DC9, DC12, and DC16.

Table 42 B1 Connector

Terminals of controller	B1 connector	Remark
Fuel relay output	3	
Starting relay output	-	Connected to starter coil directly.
CAN GND	-	CAN communication shielding line (connected with controller's terminal only).
CAN(H)	9	Using impedance 120Ω connecting line.
CAN(L)	10	Using impedance 120Ω connecting line.

Engine type: Scania-s6.

22.15 VOLVO EDC3

Suitable engine control mode is TAD1240, TAD1241, and TAD1242.

Table 43 "Stand Alone" Connector

Terminals of controller	"Stand alone" connector	Remark
Fuel relay output	H	
Starting relay output	E	
programmable output 1	P	ECU power; Set output 1 as "ECU power".

Table 44 "Data Bus" Connector

Terminals of controller	"Data bus" connector	Remark
CAN GND	-	CAN communication shielding line (connected with controller terminal only).
CAN(H)	1	Using impedance 120Ω connecting line.
CAN(L)	2	Using impedance 120Ω connecting line.

Engine type: Volvo.

▲NOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

22.16 VOLVO EDC4

Suitable engine types are TD520, TAD520 (optional), TD720, TAD720 (optional), TAD721, TAD722, and TAD732.

Table 45 Connector

Terminals of controller	Connector	Remark
Fuel relay output	Expansion 30A relay, providing battery voltage for terminal 14. Fuse is 16A.	
Starting relay output	-	Connected to starter coil directly.
	1	Connected to negative of battery.
CAN GND	-	CAN communication shielding line (connected with controller terminal only).
CAN(H)	12	Using impedance 120Ω connecting line.
CAN(L)	13	Using impedance 120Ω connecting line.

Engine type: Volvo EDC4.

22.17 VOLVO-EMS2

Volvo Engine types are TAD734, TAD940, TAD941, TAD1640, TAD1641, and TAD1642.

Table 46 Engine CAN Port

Terminals of controller	Engine's CAN port	Remark
programmable output 1	6	ECU stop; Set output 1 "ECU stop".
Programmable output 2	5	ECU power; Set output 2 "ECU power".
	3	Power negative.
	4	Power positive.
CAN GND	-	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	1(Hi)	Using impedance 120Ω connecting line.
CAN(L)	2(Lo)	Using impedance 120Ω connecting line.

Engine type: Volvo-EMS2.

NOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

22.18 YUCHAI

It is suitable for Yuchai BOSCH common rail electronic-controlled engine.

Table 47 Engine 42-Pin Port

Terminals of controller	Engine 42 pins port	Remark
Fuel relay output	1.40	Connected to engine ignition lock.
Starting relay output	-	Connected to starter coil directly.
CAN GND	-	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	1.35	Using impedance 120Ω connecting line.
CAN(L)	1.34	Using impedance 120Ω connecting line.

Table 48 Engine 2-Pin

Battery	Engine 2 pins	Remark
Battery negative	1	Wire diameter 2.5mm ² .
Battery positive	2	Wire diameter 2.5mm ² .

Engine type: Yuchai.

22.19 WEICHAI

It is suitable for Weichai BOSCH common rail electronic-controlled engine.

Table 49 Engine Port

Terminals of controller	Engine port	Remark
Fuel relay output	1.40	Connected to engine ignition lock.
Starting relay output	1.61	
CAN GND	-	CAN communication shielding line (connected with controller's this terminal only).
CAN(H)	1.35	Using impedance 120Ω connecting line.
CAN(L)	1.34	Using impedance 120Ω connecting line.

Engine type: Weichai.

NOTE: If there is any question of connection between controller and ECU communication, please feel free to contact SmartGen's service.

23 FAULT FINDING

Table 50 Fault Finding

Symptoms	Possible Solutions
Controller no response with power	Check starting batteries; Check controller connection wirings; Check DC fuse.
Genset shutdown	Check the water/cylinder temperature is too high or not; Check the AC generator voltage; Check DC fuse.
Controller emergency stop	Check emergence stop button is correct or not; Check whether the starting battery positive is connected with the emergency stop input; Check whether there is open circuit.
Low oil pressure alarm after crank disconnect	Check the oil pressure sensor and its connections.
High water temperature alarm after crank disconnect	Check the water temperature sensor and its connections.
Shutdown alarm in running	Check related switch and its connections according to the information on LCD; Check digital inputs.
Crank disconnect failure	Check fuel circuit and its connections; Check starting batteries; Check speed sensor and its connections; Refer to engine manual.
Starter no response	Check starter connections; Check starting batteries.
Genset is running while ATS no action	Check ATS; Check the connections between ATS and controllers.
RS485 communication abnormal	Check connections; Check settings of COM port is correct or not; Check RS485's A and B connections is reversely connected or not; Check RS485 conversion module is damaged or not; Check communication port of PC is damaged or not.
ECU communication failure	Check the polarity of CAN high and CAN low; Check 120Ω terminal resistor is correctly connected or not; Check engine type is correctly chosen or not; Check communication port of PC is damaged or not.
ECU alarm	Get information from LCD alarm page; If there is detailed alarm information, check the engine according to the description. If not, please refer to engine manual according to SPN alarm code.