

SmartGen

MAKING CONTROL SMARTER

ACC7100A DIESEL AIR COMPRESSOR CONTROLLER USER MANUAL



郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

No. 28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: www.smartgen.com.cn/
www.smartgen.cn/

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Note
2019-10-15	1.0	Original release.
2020-08-10	1.1	Added related descriptions of ACC7100A.
2021-03-30	1.2	1. Modified the CAN sign in wiring diagram; 2. Added new function description.
2021-08-19	1.3	1. Deleted the related descriptions of ACC7100; 2. Modified the installation diagram of fixing clips; 3. Added the new function description.
2022-08-06	1.4	Update company log and manual format.
2025-08-04	1.5	1. Modify the preface description; 2. Add descriptions of new functions.

Table 2 Notation Clarification

Sign	Instruction
 NOTE	Highlights an essential element of a procedure to ensure correctness.
 CAUTION!	Indicates a procedure or practice, which, if not strictly observed, could result in damage or destruction of equipment.
 WARNING!	Indicates a procedure or practice, which could result in injury to personnel or loss of life if not followed correctly.

SmartGen

CONTENT

1 OVERVIEW	6
2 PERFORMANCE AND CHARACTERISTICS	7
3 SPECIFICATION	8
4 OPERATION	9
4.1 KEY FUNCTION DESCRIPTION	9
4.2 CONTROLLER PANEL	10
4.3 START/STOP OPERATION	10
4.3.1 START SEQUENCE	10
4.3.2 STOP SEQUENCE	11
4.4 START OPERATION FOR FUEL PRE-SUPPLY OUTPUT SETTING	11
4.5 EMERGENCY START	11
4.6 ONLOAD/UNLOAD SPEED REGULATION PROCESS OF AIR COMPRESSOR	12
5 MANUAL DPF REGENERATION	12
5.1 ILLUSTRATION	12
5.2 PANEL ICON DESCRIPTION OF DPF REGENERATION	13
5.3 DPF MANUAL REGENERATION OPERATION	13
6 PROTECTION	15
6.1 WARNING	15
6.2 SHUTDOWN	17
7 WIRE CONNECTION	20
8 CONFIGURATION PARAMETER RANGE AND DEFINITION	22
8.1 PARAMETER RANGE AND DEFINITION	22
8.2 DEFINED CONTENTS OF AUXILIARY OUTPUT PORTS 1-6	50
8.2.1 DEFINED CONTENTS TABLE OF AUXILIARY OUTPUT PORTS 1-6	50
8.2.2 CUSTOM PERIOD OUTPUT	55
8.2.3 DEFINED COMBINATION OUTPUT	56
8.3 DEFINED CONTENTS OF DIGITAL INPUT PORTS	56
8.4 SELECTION OF SENSORS	58
8.5 CONDITIONS OF CRANK DISCONNECT SELECTION	60
8.6 MAINTENANCE SETTING	60
9 PARAMETERS SETTING	61
10 SENSOR SETTING	63
11 COMMISSIONING	64
12 TYPICAL APPLICATION	65
13 INSTALLATION	66
13.1 ACC7100A CLIPS INSTALLATION	66
13.2 OVERALL & CUTOUT DIMENSIONS	66
14 CONNECTIONS OF CONTROLLER WITH J1939 ENGINE	68
14.1 CUMMINS ISB/ISBE	68
14.2 CUMMINS QSL9	68
14.3 CUMMINS QSM11 (IMPORT)	68
14.4 CUMMINS QSX15-CM570	69

14.5 CUMMINS GCS-MODBUS	69
14.6 CUMMINS QSM11	70
14.7 CUMMINS QSZ13	70
14.8 DETROIT DIESEL DDEC III / IV	70
14.9 DEUTZ EMR2	71
14.10 JOHN DEERE	71
14.11 MTU MDEC	71
14.12 MTU ADEC (SMART MODULE)	72
14.13 MTU ADEC (SAM MODULE)	72
14.14 PERKINS	72
14.15 SCANIA	73
14.16 VOLVO EDC3	73
14.17 VOLVO EDC4	73
14.18 VOLVO-EMS2	74
14.19 YUCHAI	74
14.20 WEICHAI	74
15 TROUBLE SHOOTING	75

SmartGen

1 OVERVIEW

ACC7100A Diesel Air Compressor Controller is used for air compressor with diesel-driven engine in order to realize functions of compressor start/stop, data measurement, maintenance, alarm protection and “three remotes”. It has speed regulator function, and CANBUS (SAE J1939) port, which can control various ECU or non-ECU diesel-driven air compressors. It also applies heated liquid crystal and electronic components resistant to high and low temperature, which are suitable for extremely low or high temperature environments (-40°C~+70°C), so that controller can work reliably under the condition of extreme temperature.

ACC7100A Diesel Air Compressor Controller applies 32-bit ARM micro-processor technology, which can realize functions of precise measurement for many parameters, set-point adjustment, timing and threshold setting etc. A majority of parameters can be adjusted from the control panel. All parameters can be adjusted and monitored on PC by RS485 or USB port. It can be widely used for diesel-driven air compressor control system with compact structure, simple wiring, and high reliability.

ACC7100A has higher protection level with IP60 and the front panel even reaches to IP65, which the rear housing is of fully sealed structure. The high level protection can effectively prevent dust and other substance from coming into the controller inside and prevent water seepage and condensation seeping into the controller cabinet. The reliable protection for the circuit board make the controller run stably and reliably. Therefore, it is more suitable for the field, mine, urban construction and other application scenarios with serious dust and complex working conditions.

2 PERFORMANCE AND CHARACTERISTICS

Main characteristics are as follows:

- 132x64 LCD display with backlight; Heated under low temperature; Optional Chinese, English and other languages; Simple operation interface;
- Operation temperature range (-40°C~+70°C), applicable for tough environment occasions;
- with optimized structure, the overall protection can reach to IP60;
- RS485 communication port realizes "three remotes" function by MODBUS protocol;
- CANBUS port can monitor ECU common data (speed, water temperature, load rate, fuel consumption etc.).
- DPF regeneration function, which meets Euro V emission standard.
- 8 ways of analog sensors, 2 ways of fixed resistance type, 2 ways of fixed current type, and 4 ways of flexible resistance/current/voltage type, which can precisely detect data of water temperature, oil pressure, fuel level, air compressor venting pressure, and venting temperature etc.
- Multiple temperature, pressure, and level sensor curves can be used directly, and custom sensor curve is also available.
- Can precisely collect all kinds of parameters of air compressor, which provides high water temperature, low oil pressure, over speed protection, and venting pressure high, venting temperature high protection etc. with complete protection functions.
- Speed regulator function can automatically adjust speed to make it steady according to venting pressure of the air compressor.
- All outputs are relay outputs.
- Parameter setting function allows users to change and set the parameters, and at the same time they are stored in internal EEPROM memory and will not get lost at outage.
- Crank disconnect conditions (speed, oil pressure) are optional.
- Wide operating voltage range DC (8~35V), which can suit different battery voltage environment.
- Event log, real-time clock display functions, which can record cyclically 200 data (including engine speed, water temperature, oil pressure, fuel level, battery voltage, compressor discharge pressure, discharge temperature, loading status information);
- Black box recording function, which can record cyclically 5 events, 60 data between previous 50s and afterward 10s for every event (including engine speed, water temperature, oil pressure, fuel level, battery voltage, compressor venting pressure, venting temperature, loading status information);
- Heater, cooler and fuel pump control functions;
- Maintenance function; maintenance type can be real time clock, running time or real time clock + running time; maintenance time due action can be set (indication (only for PC software), warning or shutdown alarm);
- All parameters apply digital adjustment, getting rid of common potentiometer's analog regulation method, and improving reliability and stability of the whole device.
- Sealing gasket is designed for enclosure with IP65 protection class.
- Metal clips are used to fix the controller, and they are especially outstanding under high temperature environment.
- Modular design, anti-flaming ABS plastic shell, pluggable terminals, built-in mounting, compact structure and easy installation.

3 SPECIFICATION

Table 3 Technical Parameters

Items	Contents
Operating Voltage	DC (8~35)V
Power Consumption	LCD not heat: <6W (Standby mode: ≤2W) LCD heat: <10W (Standby mode: ≤6W)
Speed Sensor Voltage	1.0V~24.0V (RMS)
Speed Sensor Frequency	Max. 10,000Hz
Starting Relay Output	16A DC24V DC supply output
Programmable Output 1	16A DC24V DC supply output
Programmable Output 2~8	8A AC250V/DC30V volt free output
Analog Sensor	2-ways fixed resistance type (discharge temperature, programmable sensor 5); 2-way fixed current type (programmable sensor 1, programmable sensor 2); 4-way flexible resistance/current/voltage type (fuel level, discharge pressure, programmable sensor 3, programmable sensor 4);
Case Dimensions	209mm x 166mm x 46mm
Panel Cutout	186mm x 141mm
Working Temperature	(-40~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-45~+80)°C
Protection Level	Front panel: IP65 Back Panel: IP60
Insulation Intensity	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal and the leakage current is not more than 3mA within 1min.
Weight	0.73kg

4 OPERATION

4.1 KEY FUNCTION DESCRIPTION

Table 4 Key Description

Icon	Buttons	Function Description
	Start	Makes the air compressor start under stop state.
	Stop	Stop the running air compressor at start mode; Press it for 3s or longer, test whether panel indicators are normal (lamp test) under stop status; Press it again in stop process and controller can be stopped quickly.
	Maintenance	Press it and it enters maintenance page; press it again and exit from the page; press it longer at this page, it enters password interface; input password and maintenance setting is entered.
	Reset	Press it and it enters alarm page fast; press it again and alarm is removed; after alarm reset, press it again and exit from alarm page.
	Onload	At idle speed state, press it and when speed reaches loading speed, load control relay outputs.
	Unload	At loading state, press it and controller shall unload and load control relay stops outputting.
	Up/Increase	1. Scroll up; 2. Move up cursor or increase the value in setting menu.
	Down/Decrease	1. Scroll down; 2. Move down cursor or decrease the value in setting menu.
	Set/Confirm	1. In main screen, press it and it enters parameter setting menu; 2. Confirm set information in parameter settings.
	Home/Return	1. Return to first page in main interface; 2. Return to last interface in parameter setting interface.

▲NOTE: Press any key to do alarm mute in main interface.

4.2 CONTROLLER PANEL



Fig.1 Front Panel Description

NOTE: Description for parts of the indicators:

Alarm Indicator: slow flash (once per second) for warning alarm; quick flash (5 times per second) for stop alarm; light off for none alarms;

Status Indicator: it illuminates always after air compressor starts successfully.

Onload Indicator: After air compressor is started successfully, engine icon is lightened; press Onload key, and when speed is up to load, onload control outputs and arrow indicators are enlightened; press Unload key, onload control output is stopped and arrow indicators are off.

4.3 START/STOP OPERATION

4.3.1 START SEQUENCE

- Press  and start air compressor;
- If pre-heat time is configured, then pre-heat relay outputs (if configured); LCD displays "Pre-heat Delay xx";
- After pre-heat delay is over, fuel relay outputs the pre-set fuel time before start (default: 1s), then start relay outputs; If air compressor crank disconnect fails during "Start Time", then fuel relay and start relay stop outputting, and enter "Crank Rest Time", waiting for next start;
- After the pre-set start attempts, if air compressor doesn't succeed to start, then controller issues failed to start signal and stops, and meanwhile LCD alarm page displays "Failed to Start" alarm;
- During the start attempts, if crank disconnect is fulfilled, then it enters "Safety On Delay", during which oil pressure low, water temperature high, under speed, and charge alt fail alarms are all inactive; after safety on delay it enters "Start Idle Time" (if configured);
- After start idle time, idle running is initiated; if onload key is pressed, it enters "Warming up delay" (if configured); when speed is up to load, load control outputs;
- When warming up time is ended, if speed is not up to load speed, controller displays "Wait for Load"; if speed is up to the load speed, onload control outputs, and controller displays "Normal

Running”; compressor enters normal running status (it shall adjust speed automatically based on discharge pressure); if shutdown alarm occurs, controller shall issue an alarm and stop (LCD alarm page displays alarm information).

4.3.2 STOP SEQUENCE

- a) Press , and stop the running air compressor; before stop if load control outputs, then load control shall be disconnected;
- b) If “Cooling Time” is configured, then “Cooling Time” starts; when cooling delay is over, it enters “Stop Idle Time”;
- c) When it enters stop idle time (if configured), then idle relay is energized to output;
- d) It enters “ETS Solenoid Hold”, and ETS relay is energized to output; fuel relay output is disconnected;
- e) It enters “Wait Stop Time”, and automatically judges whether it stops completely;
- f) When air compressor stops completely, it enters “After Stop Time”; Otherwise controller enters stop failure and issues “Failed to Stop” warning (after the alarm, if air compressor stops completely, then it enters “After Stop Time”, and meanwhile Failed to Stop alarm is removed automatically);
- g) When “After Stop Time” over, it enters standby status.

4.4 START OPERATION FOR FUEL PRE-SUPPLY OUTPUT SETTING

When output port is configured to “Fuel Pre-supply Output”, and press  to start the air compressor:

If the set pre-supply time is less than or equal to pre-heat time, LCD displays “Pre-heat Delay xx”, pre-heat relay outputs (if configured) and pre-supply relay outputs (output for the set pre-supply time); after pre-heat delay is over, fuel relay outputs the set fuel time (default: 1s) before start, then start relay outputs; the following start process is the same as the START OPERATION (for start process please see 4.3.1, d)~g)).

If the set pre-supply time is more than the pre-heat time, pre-supply relay outputs in pre-heat delay phase; after pre-heat delay is over, the following pre-supply time enters pre-supply phase, and LCD displays “Fuel Pre-supply Time xx” and pre-supply relay outputs; after pre-supply delay is over, fuel relay outputs the pre-set fuel time (default: 1s) before start; then start relay outputs; the following start process is the same as the START OPERATION (for start process please see 4.3.1, d)~g)).

If output port is configured to “Fuel Pre-supply Output”, air compressor stays at standby status and it outputs cyclically according to the pre-set “Fuel Pre-supply Rest Time” and “Fuel Pre-supply Time”; If the pre-set “Fuel Pre-supply Rest Time” is 0h, then pre-supply doesn't output.

4.5 EMERGENCY START

▲NOTE: Press  and  simultaneously and air compressor can be started forcibly. At this time controller doesn't detect unit crank disconnect by crank conditions. Starter's disconnect is controlled by the operator. When operator observes unit has started, then releases the buttons. The starter stops outputting and controller enters Safety On Delay.

4.6 ONLOAD/UNLOAD SPEED REGULATION PROCESS OF AIR COMPRESSOR

Under the state of idle running, press  and controller enters “wait for onload”. When speed is up to load, load control relay outputs. Controller also enters normal running. If current venting pressure is less than unloading action pressure, then engine speed goes up to rated speed. If current venting pressure is larger than target pressure, engine speed will decrease to unloading speed. Between target pressure and unloading action pressure, speed decreases as pressure increases. Under normal running state, press  and load control relay disconnects and it enters idle speed running. Engine speed returns to rated idle value.

For example:

- Engine rated speed: 2200r/min
- Engine idle speed value: 60% (1320r/min)
- Air Compressor onload speed: 70% (1540r/min)
- Air Compressor unloading speed: 70% (1540r/min)
- Air Compressor target pressure: 700kPa
- Air Compressor unloading action pressure: 600kPa

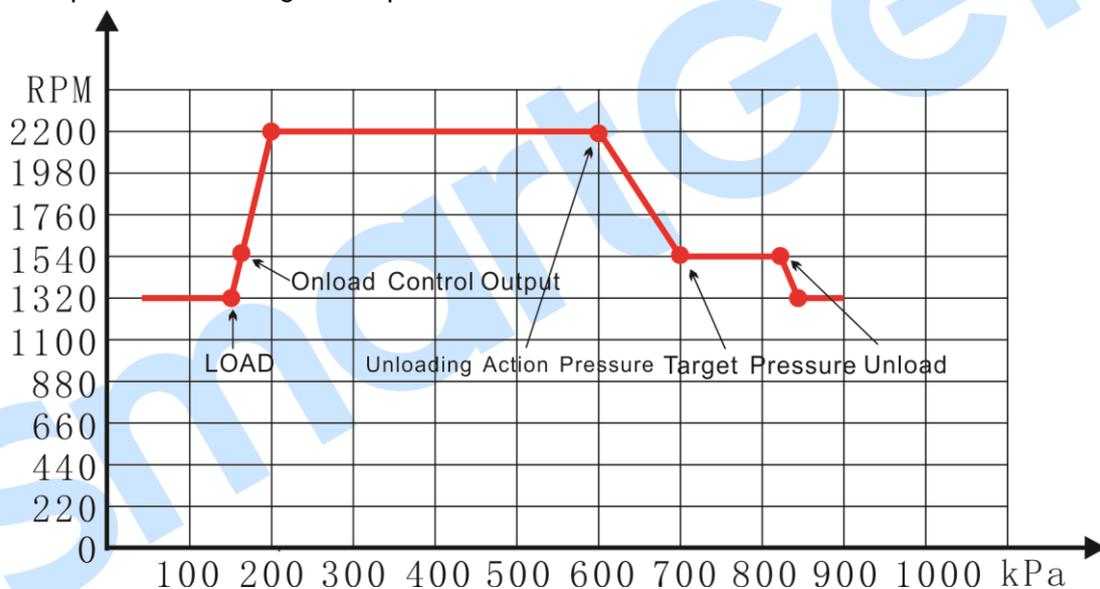


Fig.2 Speed – Venting Pressure Curve Diagram

5 MANUAL DPF REGENERATION

5.1 ILLUSTRATION

For engines meeting Euro V Standard, they all have DPF regeneration function.

Usually engine can clear the particulates in DPF by automatic regeneration function. However, engine usually is at short-time state, no-load running or low load speed running state, automatic regeneration cannot completely clear out the DPF particulates, and there may appear particulate block, beyond the limitation. Under this circumstance, manual DPF regeneration operation is needed.

Controller supports manual regeneration function, which meets the requirements Euro V engine has for controller. It can realize manual DPF regeneration operation.

5.2 PANEL ICON DESCRIPTION OF DPF REGENERATION

Table 5 DPF Regeneration Panel Icon Description

Icon	Description
	Engine fault indicator
	NCD state indicator
	DPF discharge temperature indicator
	DPF manual regeneration request indicator
	DPF regeneration inhibition indicator
	DPF regeneration response indicator

NOTE: DPF: Diesel Particulate Filter;
NCD: NO_x Diagnosis.

5.3 DPF MANUAL REGENERATION OPERATION

Configure an input port and set it to “DPF Manual Request”, and connect a button (not self-lock) externally.

Press  on controller panel and enter parameter setting menu. Press  and select “DPF Regeneration”, and press  again to enter DPF regeneration. Controller display is as Fig.3:

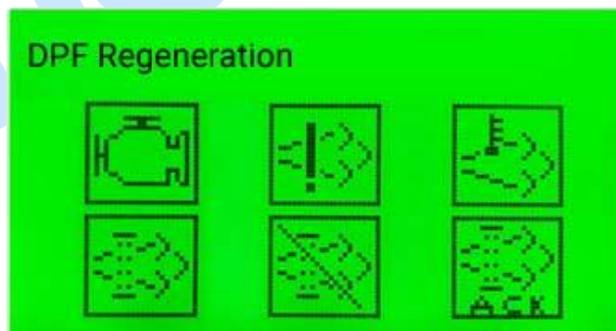


Fig.3 DPF Regeneration Panel

When manual regeneration is needed, press “DPF Manual Request” button. On DPF panel DPF response indicator is on, and it enters DPF regeneration preparation status. When request indicator is always illuminated on the panel, and response indicator flashes at the same time (once per second), it means that regeneration preparation is well. Controller display is as Fig.4:

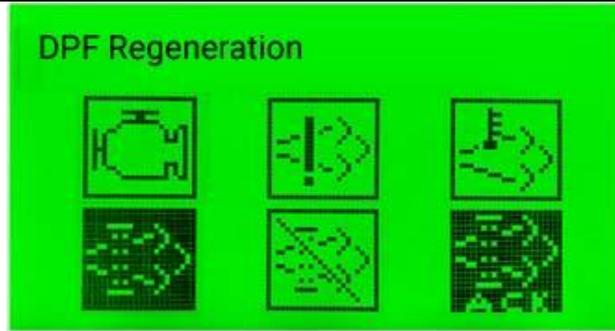


Fig.4 DPF Preparation is Ready

Press “DPF Manual Request” again, and manual regeneration starts. DPF request indicator is light off, DPF response indicator is always light on and DPF discharge temperature indicator is always light on. Controller screen is as Fig.5:

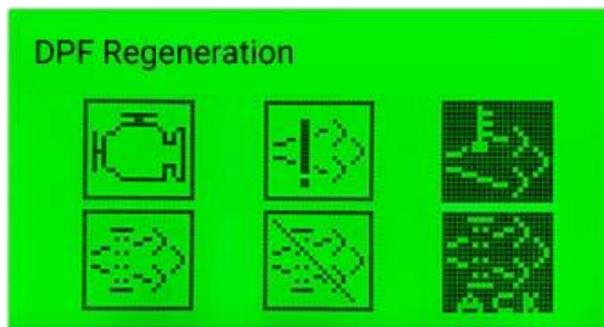


Fig.5 DPF Regeneration Start

When manual regeneration is completed, DPF response indicator is light off, and DPF venting temperature indicator is light off. Controller screen display is as Fig.3 shows.

6 PROTECTION

6.1 WARNING

When controller detects warning signal, it only issues warning, not shutdown. When alarm is removed, warning alarm is cleared automatically.

Table 6 Warning Alarms

No.	Type	Description
1	Over Speed Warn	When controller detects speed is above the pre-set over speed warning threshold, it issues warning signal.
2	Loss of Speed Signal	When controller detects speed is 0, and speed signal loss action is selected "Warning", it issues warning signal.
3	Failed to Stop	When engine stop delay is over and engine doesn't stop completely, controller issues warning signal.
4	Charge Alt Fail	When controller detects engine charger voltage is less than pre-set threshold, it issues warning alarm signal.
5	Battery Overvoltage	When controller detects engine battery voltage is larger than pre-set threshold, it issues warning alarm signal.
6	Battery Undervoltage	When controller detects engine battery voltage is less than pre-set threshold, it issues warning alarm signal.
7	Manual Regeneration Required	When controller receives a regeneration request signal from the engine via J1939, it issues a warning signal.
8	AIN8 Comm. Failure	When controller detects an AIN8 communication failure, it issues a warning signal
9	Low Discharge Temp. Inhibit Load	When the discharge temperature falls below the set loading prohibition threshold (active from start idle to stop idle), a warning signal is issued and loading is prohibited.
10	Urea Level Low Warn	When controller detects engine urea level is less than pre-set warning threshold, it issues warning alarm signal.
11	ECU Warn	When controller receives warning signal of engine by J1939, it issues warning signal.
12	Oil Separator Difference Warn	After loading, when the discharge temperature is higher than the set lower limit value and the speed exceeds the set lower limit value, if the oil separation pressure difference is greater than the set value for high warning, the controller will issue a warning alarm signal.
13	Oil Separator Difference Input Warn	After loading, when the discharge temperature is higher than the set lower limit value and the speed exceeds the set lower limit value, if the warning of oil separation pressure difference input is active, the controller will issue a warning alarm signal.
14	Oil Filter Difference Input Warn	After loading, when the discharge temperature is higher than the set lower limit value and the speed exceeds the set lower limit, if the warning of oil filter pressure difference input is active, the controller will issue a warning alarm signal.

No.	Type	Description
15	Temp Sensor Open Warn	When controller detects temperature sensor is open and action type is selected "Warning", it issues warning signal.
16	High Temp Warn	When controller detects temperature is higher than pre-set high temp warning value, it issues warning signal.
17	Low Temp Warn	When controller detects temperature is lower than pre-set low temp warning value, it issues warning signal.
18	OP Sensor Open Warn	When controller detects oil pressure sensor is open, and action type is selected "Warning", it issues warning signal.
19	Low OP Warn	When controller detects oil pressure value is below pre-set oil pressure warning value, it issues warning signal.
20	Fuel Level Open Warn	When controller detects fuel level sensor is open and action type is selected "Warning", it issues warning signal.
21	Low Fuel Level Warn	When controller detects level value is below pre-set fuel level warning value, it issues warning signal.
22	Discharge Pressure Open	When controller detects discharge sensor is open and action type is selected "Warning", it issues warning signal.
23	High Discharge Press Warn	When controller detects discharge pressure value is above pre-set pressure warning value, it issues warning signal.
24	Low Discharge Press Warn	When controller detects discharge pressure value is below pre-set pressure warning value, it issues warning signal.
25	Discharge Temperature Open	When controller detects discharge sensor is open and action type is selected "Warning", it issues warning signal.
26	High Discharge Temp.	When controller detects discharge temp. value is above pre-set temp. warning value, it issues warning signal.
27	Low Discharge Temp.	When controller detects discharge temp. value is below pre-set temp. warning value, it issues warning signal.
28	Flexible Sensor 1-5 Open	When controller detects sensor is open, and action type is selected "Warning", it issues warning signal.
29	Flexible Sensor 1-5 High	When controller detects sensor value is above pre-set upper limit of warning values, it issues warning signal.
30	Flexible Sensor 1-5 Low	When controller detects sensor value is below pre-set lower limit of warning values, it issues warning signal.
31	Input 1-6 Warn	When digital input port is configured to "Warning", and when it is active, it issues corresponding input warning signal.
32	End of Mandate Time	When controller time reaches mandate time, and mandate time due action is selected "Warning", it issues warning signal.
33	Louver Open Failure	When the input port is configured for the "Louver fully Open input," if the open position signal is not detected within the opening time, the controller will issue a warning signal.
34	Louver Close Failure	When the input port is configured for the "Louver fully Close input," if the close position signal is not detected within the closing time, the controller will issue a warning signal.
35	Oil Filter Time Over	When timing method is set to "Unit Running Time", maintenance timing is due, and action type is selected "Warning", it issues
36	Oil Separator Time Over	

No.	Type	Description
37	Air Filter Time Over	warning signal.
38	Lubrication Time Over	When timing method is set to "Real Time Clock", maintenance countdown goes to 0, and action type is selected "Warning", it issues warning signal.
39	Engine Oil Filter Over	
40	Fuel Filter Time Over	
41	Engine Lubrication Time Over	
42	Maintenance 8 Time Over	
43	Maintenance 9 Time Over	
44	Maintenance 10 Time Over	

6.2 SHUTDOWN

When controller detects shutdown alarm signal, it immediately stops. When engine stops completely, it needs to press manually Alarm Reset button to remove alarms.


Table 7 Shutdown Alarms

No.	Type	Description
1	Emergency Stop	When controller detects emergency stop alarm signal, it issues emergency stop alarm signal.
2	Engine Overspeed Shut	When controller detects engine speed is over preset over speed stop threshold, it issues shutdown alarm signal.
3	Loss of Speed Signal	When controller detects speed is 0, and speed signal loss action is selected "Shutdown", it issues shutdown alarm signal.
4	Failed to Start	When engine fails to start during pre-set start attempts, controller issues failed to start alarm signal.
5	ECU Shutdown	When controller receives shutdown alarm signal via J1939, it issues shutdown alarm signal.
6	Urea Level Low Shutdown	When controller detects engine urea level is less than the pre-set shutdown threshold, it issues shutdown alarm signal.
7	High Temp. Shutdown	When controller input port is set to High Temp Shutdown Input and if it is active, it issues alarm signal.
8	Low Oil Press Shutdown	When controller input port is set to Low Oil Pressure Shutdown Input and if it is active, it issues alarm signal.
9	ECU Comm. Failure Shutdown	When engine start is completed, but controller doesn't receive data via J1939, controller issues communication failure signal.
10	AIN Comm. Failure	When controller detects an AIN8 communication failure, it issues alarm signal.
11	Low Coolant Level Input Shutdown	When the controller's input port is configured as low coolant level and it is active, controller issues shutdown alarm signal.
12	Oil Separator Difference Shutdown	After loading, when the discharge temperature is higher than the set lower limit value and the speed exceeds the set lower limit value, if the oil separation pressure difference is greater than the set value for high shutdown input, the controller will issue

No.	Type	Description
		shutdown alarm signal.
13	Oil Separator Difference Input Shutdown	After loading, when the discharge temperature is higher than the set lower limit value and the speed exceeds the set lower limit value, if the oil separation pressure difference is greater than the high shutdown input, the controller will issue shutdown alarm signal.
14	Oil Filter Difference Input Shutdown	After loading, when the discharge temperature is higher than the set lower limit value and the speed exceeds the set lower limit, if the oil filter pressure difference is greater than the high shutdown input, the controller will issue shutdown alarm signal.
15	Temp Sensor Open Shut	When controller detects sensor open, and action type is selected "Shutdown", it issues shutdown alarm signal.
16	High Temp Shutdown	When controller detects temperature value is above pre-set shutdown value, it issues shutdown alarm signal.
17	OP Sensor Open Shut	When controller detects sensor is open and action type is selected "Shutdown", it issues shutdown alarm signal.
18	Low OP Shutdown	When controller detects oil pressure is below pre-set shutdown value, it issues shutdown alarm signal.
19	Fuel Level Open Shut	When controller detects sensor is open, and action type is "Shutdown", it issues shutdown alarm signal.
20	Low Fuel Level Shutdown	When controller detects level is below pre-set fuel level shutdown value, it issues shutdown alarm signal.
21	Discharge Pressure Open	When controller detects pressure sensor is open, and action type is selected "Shutdown", it issues shutdown alarm signal.
22	High Discharge Press Shut	When controller detects sensor is above pre-set pressure shutdown value, it issues shutdown alarm signal.
23	Low Discharge Press Shut	When controller detects sensor is below pre-set pressure shutdown value, it issues shutdown alarm signal.
24	Discharge Temp. Open	When controller detects discharge temp. sensor is open, and action type is selected "Shutdown", it will issue shutdown alarm signal.
25	Discharge Temp. High	When controller detects discharge temp. sensor is above pre-set discharge temp. shutdown value, it will issue shutdown signal.
26	Discharge Temp. Low	When controller detects discharge temp. sensor is below pre-set discharge temp. shutdown value, it will issue shutdown signal.
27	Flexible Sensor 1-5 Open	When controller detects sensor is open, and action type is selected "Shutdown", it issues shutdown alarm signal.
28	Flexible Sensor 1-5 High	When controller detects sensor value is above pre-set upper shutdown limit value, it issues shutdown alarm signal.
29	Flexible Sensor 1-5 Low	When controller detects sensor value is below pre-set lower shutdown limit value, it issues shutdown alarm signal.
30	Input 1-6 Shutdown	When digital input is configured to shutdown alarm, and if it is active, it issues corresponding input shutdown alarm signal.
31	End of Mandate Time	When controller time reaches mandate time, and mandate time due action is selected "Warning", it issues warning signal.

No.	Type	Description
32	Oil Filter Time Over	<p>When timing method is set to "Unit Running Time", maintenance timing is due, and action type is selected "Shutdown", it issues shutdown signal.</p> <p>When timing method is set to "Real Time Clock", maintenance countdown goes to 0, and action type is selected "Shutdown", it issues shutdown signal.</p>
33	Oil Separator Time Over	
34	Air Filter Time Over	
35	Lubrication Time Over	
36	Engine Oil Filter Time Over	
37	Fuel Filter Time Over	
38	Engine Lubrication Time Over	
39	Maintenance 8 Time Over	
40	Maintenance 9 Time Over	
41	Maintenance 10 Time Over	

▲NOTE: For ECU Warning and ECU Shutdown alarms, if detailed information is displayed, check the engine according to the information; Otherwise refer to engine user manual to obtain information according to SPN alarm code.

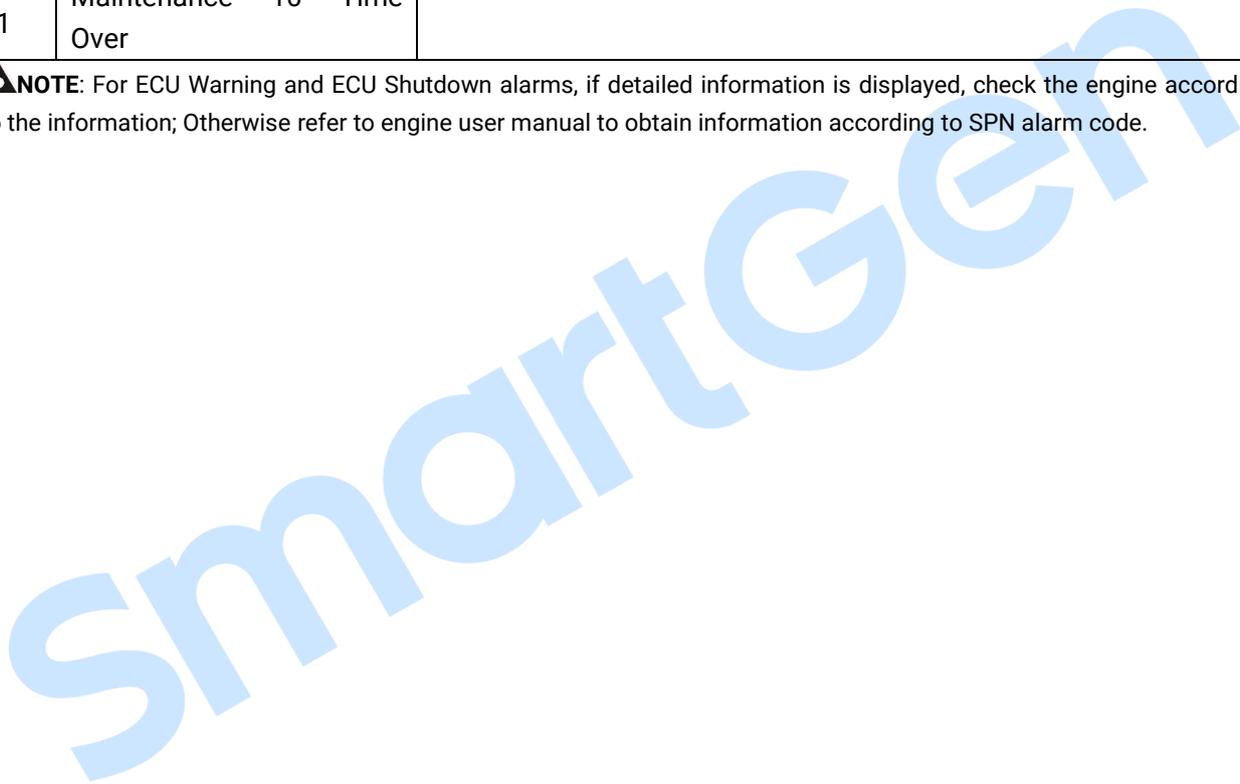

7 WIRE CONNECTION

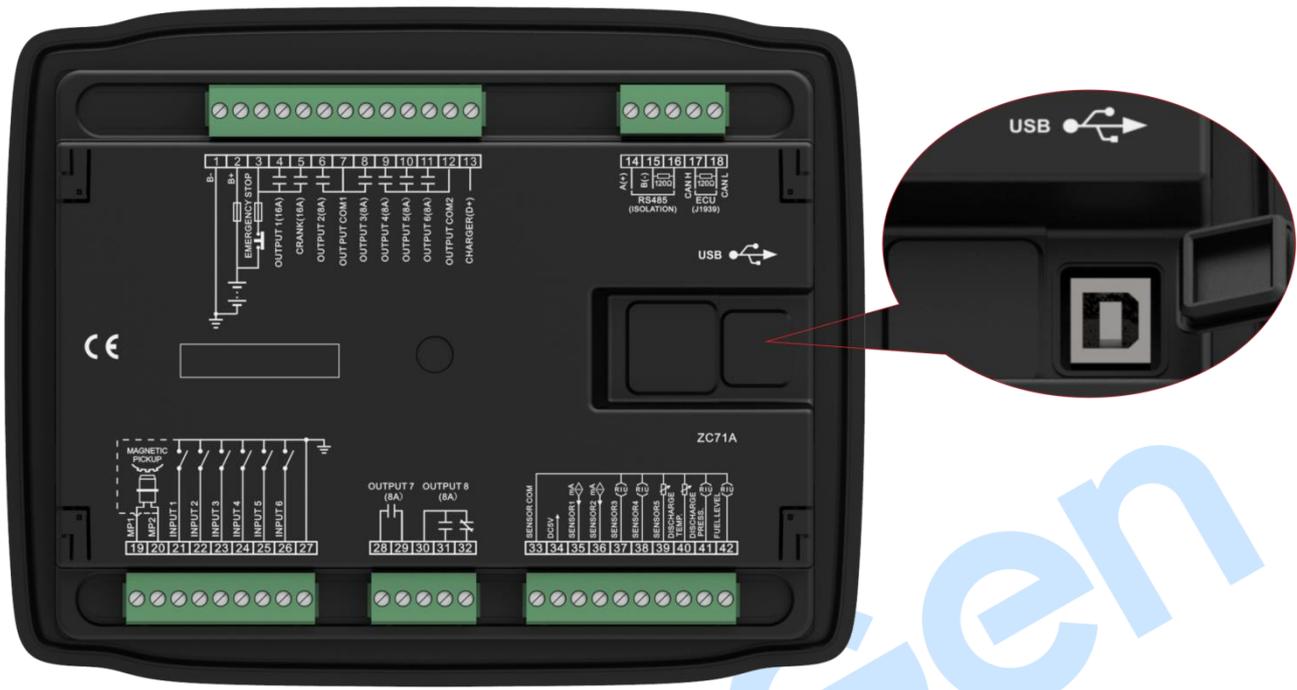


Fig.6 Controller Back Panel

Table 8 Connection Terminal Description

No.	Function	Cable Size	Remark	
1	DC Power Input B-	2.5mm ²	Connects starter battery negative.	
2	DC Power Input B+	2.5mm ²	Connects starter battery positive; if wire is over 30m, make double in parallel; max. 10A fuse is recommended.	
3	Emergency Stop	2.5mm ²	Connects B+ via Emergency Stop button.	
4	AUX. Output 1	2.5mm ²	B+ is supplied by point 3, rated 16A.	See Table 10 for setting items.
5	Crank Relay Output	2.5mm ²	B+ is supplied by point 3, rated 16A; Connects starter coil.	
6	AUX. Output 2	1.5mm ²	Connects COM1 output, rated 8A.	Please see Table 10 for setting items.
7	COM1 Relay	1.5mm ²		
8	AUX. Output 3	1.5mm ²		
9	AUX. Output 4	1.5mm ²		
10	AUX. Output 5	1.5mm ²		
11	AUX. Output 6	1.5mm ²		
12	COM2 Relay	1.5mm ²	Connects COM2 output, rated 8A.	
13	Charger D+ Input	1.0mm ²	Connects Charger D+(WL) terminal; if it doesn't exist, then hung it up.	
14	RS485 A(+)	0.5mm ²	Resistance 120Ω shielding wire is recommended, with	

No.	Function	Cable Size	Remark
15	RS485 B(-)	0.5mm ²	single end ground connected; for terminal 16 and 14 short connected, please put 120Ω resistor in.
16	Terminal Resistor (120Ω)	0.5mm ²	
17	ECU CAN H	0.5mm ²	Resistance 120Ω shielding wire is recommended; single end is ground connected. 120Ω resistor is already connected in the controller between CAN L and CAN H.
18	ECU CAN L	0.5mm ²	
19	MP1 Speed Sensor Input	0.5mm ²	Connects engine speed sensor; shielding wire is recommended.
20	MP2 Speed Sensor Input; Connected with battery negative already internally.	0.5mm ²	
21	AUX. Input 1	1.0mm ²	Connects input COM.
22	AUX. Input 2	1.0mm ²	Connects input COM.
23	AUX. Input 3	1.0mm ²	Connects input COM.
24	AUX. Input 4	1.0mm ²	Connects input COM.
25	AUX. Input 5	1.0mm ²	Connects input COM.
26	AUX. Input 6	1.0mm ²	Connects input COM.
27	Input COM	1.0mm ²	Input COM, connects with battery negative already inside.
28	AUX. Relay Output 7	1.5mm ²	N/O output, rated 8A.
29		1.5mm ²	Relay COM.
30	AUX. Relay Output 8	1.5mm ²	Relay COM.
31		1.5mm ²	N/O output, rated 8A.
32		1.5mm ²	N/C output, rated 8A.
33	Sensor COM	1.0mm ²	Sensor COM, connects with B- already inside
34	DC5V	1.0mm ²	Power supply for voltage sensor.
35	Flexible Sensor 1	1.0mm ²	Users configurable (current).
36	Flexible Sensor 2	1.0mm ²	Users configurable (current).
37	Flexible Sensor 3	1.0mm ²	Users configurable (current/resistor/voltage).
38	Flexible Sensor 4	1.0mm ²	Users configurable (current/resistor/voltage).
39	Flexible Sensor 5	1.0mm ²	Users configurable (resistor).
40	Discharge Temp. Sensor	1.0mm ²	Connects compressor discharge temp. sensor (resistor).
41	Discharge Pressure Sensor	1.0mm ²	Connects compressor discharge pressure sensor (resistor/current/voltage).
42	Fuel Level Sensor	1.0mm ²	Connects engine fuel level sensor (resistor/current/voltage).
	USB	/	Communication with PC monitoring software.

Please see Table 11 for setting items.

Please see Table 10 for setting items.

Please see Table 12 for setting items.

8 CONFIGURATION PARAMETER RANGE AND DEFINITION

8.1 PARAMETER RANGE AND DEFINITION

Table 9 Parameter Setting Contents and Range List

No	Item	Range	Default	Description
Language				
1	Language	(0-1)	0	0: Simplified Chinese 1: English 2: Others 3: Korean; 4: Russian; 5: Portuguese; 6: Spanish; 7: Italian; 8: French; 9: Turkey
Override Mode				
1	Override Mode	(0-1)	0	0: Disable 1: Enable
LCD Backlight				
1	Contrast Ratio	(0-10)	5	Set LCD contrast ratio.
2	Brightness	(0-5)	5	Set LCD backlight brightness.
3	Delay	(0-3600)min	5	Backlight is always on when delay is set to 0min.
Compressor Lock Setting				
1	Lock Password Set	(0-9999)	1234	This password is used for entering Lock Set. ⚠ CAUTION! Default factory password is 1234; operator can change it to prevent others changing lock status randomly; Please remember the password after the change, contact factory personnel in case of forgetting it.
2	Lock Set	(0-1)	0	0: Unlock 1: Lock ⚠ CAUTION! After lock, controller displays Lock Mode and compressor cannot be started.
3	Speed Limit Enable Set	(0-1)	0	0: Disable 1: Enable If configured as Disabled, the user's engine speed settings will not be restricted.

No	Item	Range	Default	Description
				If configured as Enabled, the maximum speed set by the user will be restricted.
4	Default Configured Max. Speed	(0-6000)	2200	Limit the maximum value of corresponding configuration items respectively. For example: if the default configured maximum speed is set to 3000 and the speed limit enable setting is set to Enabled, the user will not be allowed to set a value exceeding 3000 when configuring the engine's rated speed.
5	Selective Configuration 1 Max. Speed	(0-6000)	2200	
6	Selective Configuration 2 Max. Speed	(0-6000)	2200	
7	Selective Configuration 3 Max. Speed	(0-6000)	2200	
Module Setting				
1	Module Address	(1-254)	1	Controller address for remote monitoring.
2	Comm. Stop Bit	(0-1)	0	0: 2-bit Stop Bit 1: 1-bit Stop Bit (PC software settings)
3	Password	(0-9999)	1234	It used for advanced parameter setting; ⚠ CAUTION!: Default password is "1234"; it can be changed by operator for purpose of preventing others changing controller advanced configurations. If password is changed, please remember clearly. If it is forgotten, please contact company service.
4	Date and Time			Users can calibrate date and time.
5	Main Interface Theme	(0-1)	0	Theme selection of main interface.
6	Bottom Right Corner Display	(0-7)	0	0: Discharge Temperature; 1: Battery Voltage; 2: Urea Level;

No	Item	Range	Default	Description	
				3: Flex. Sensor 1 4: Flex. Sensor 2 5: Flex. Sensor 3 6: Flex. Sensor 4 7: Flex. Sensor 5	
7	Running Time Select	(0-1)	0	0: Controller Record Time 1: ECU Record Time	
8	Displacement Display Enable Setting	Enable	(0-1)	0	0: Disable 1: Enable
		Flow-to-RPM Ratio	(0-9.999)	1.000	Set the ratio of displacement to speed.
Timer Setting					
1	Start Delay	(0-3600)s	1	Time from remote start signal is active to compressor is started.	
2	Stop Delay	(0-3600)s	1	Time from remote start signal is inactive to compressor is stopped.	
3	Preheat Delay	(0-3600)s	0	Time for pre-heating plug to be energized before starter is energized.	
4	Prestart Fuel Time	(0-3600)s	1	Time for fuel relay output every time before starter is energized.	
5	Cranking Time	(3-60)s	8	Time for starter to be energized every time.	
6	Crank Rest Time	(3-60)s	10	Waiting time before second energization when engine fails to start.	
7	Safety On Delay	(0-3600)s	10	During this time oil pressure low, temp. high, under speed, under frequency, under voltage, and charge alt failure alarms are all inactive.	
8	Start Idle Time	(0-3600)s	10	Time for engine idle running in start process.	
9	Warming Up Time	(0-3600)s	0	Warming up time for engine before normal	

No	Item	Range	Default	Description
				running after high speed running.
10	Cooling Time	(0-3600)s	0	Cooling time before stop.
11	Stop Idle Time	(0-3600)s	10	Time for engine idle running in stop process.
12	ETS Solenoid Hold	(0-3600)s	20	Time for ETS to be energized before stop.
13	Wait Stop Time	(0-3600)s	0	Time after idle running delay before complete stop when "ETS Output Time" is set 0; When "ETS Output Time" is not 0, it is time after ETS delay before complete stop.
14	After Stop Time	(0-3600)s	0	Time from complete stop to standby status.
15	Fuel Pre-supply Rest Time	(0-12)h	2	Interval time from this pre-supply is completed to next pre-supply is outputted when output is configured to fuel pre-supply in standby state; when it is set to 0, pre-supply will not output in standby state.
16	Fuel Pre-supply Time	(3-30)s	5	Time for pre-supply output when output is configured to fuel pre-supply.
17	Urea Sensor Detection Delay	(0-3600) s	60	After the set time is reached, start checking the urea level; if the level is low, an alarm is issued.
18	Louver Open Time	(0-3600)s	0	If the louver open position input is not configured, the preheating stage begins after the louver opening time is due.
19	Louver Close Time	(0-3600)s	0	If the louver close position input is not

No	Item	Range	Default	Description
				configured, the stop mode begins after the louver closing time is due.
20	Louver Waiting-to-Close Time	(0-3600)s	0	After the stop phase, the louvers will close once the waiting time is due.
21	Manual Preheat Time	(0-3600)s	0	During standby, when the manual preheat input is activated, the manual preheat output duration is initiated.
Engine Setting				
1	Engine Type	(0-39)	34	Default: 34: GTSC1.
2	Enable ECU Alarm Shut	(0-1)	1	0: Disable 1: Enable NOTE: When engine detects red light alarm it will stop when it is enabled.
3	Flywheel Teeth	(1.0-300.0)	118.0	Flywheel teeth of engine, used for starter disconnect conditions and engine speed detection; please refer to the below installation.
4	Engine Rated Speed	(0-6000)r/min	2200	Provide standard for over speed, under speed and load speed detection.
5	Engine Idle Set	(0-100.0)%	64.0	Rated speed percentage; if idle running is needed, it can make speed steady at the set value.
6	Start Attempts	(1-10) Times	3	Maximum start times in case of failed start; when this number is reached, controller shall issue Failed to Start signal.
7	Crank Disconnect Connections	(0-2)	2	Please refer to Table 13. There are two kinds of disconnect conditions for engine and starter. They can be used

No	Item	Range	Default	Description	
				independently or together and the purpose is to separate starter motor and engine as soon as possible;	
8	Disconnect Speed	(0-200)%	24	Set value is the percentage of rated speed; when speed is above the set value, starter shall disconnect; Please refer to the rear installation.	
9	Disconnect OP	(0-1000)kPa	200	When OP is above pre-set value, starter shall disconnect. Please refer to the rear installation.	
10	Overspeed Warn	Set	(0-200.0)%	110.0	Set value is the percentage of rated speed; Return value and delay value can also be set.
		Return	(0-200.0)%	108.0	
		Delay	(0-3600)s	5	
11	Overspeed Shutdown	Set	(0-200.0)%	114.0	Set value is the percentage of rated speed; Delay value can also be set.
		Delay	(0-3600)s	2	
12	Loss of Speed Signal Delay	(0-3600)s	5	Time from detecting speed is 0 to confirm the action.	
13	Loss of Speed Signal Action	(0-1)	0	0: Warning 1: Shutdown	
14	Battery Rated Voltage	(0-60.0)V	24.0	Provide standard for battery over/under voltage detection.	
15	Battery Overvolt Warn	Set	(0-200)%	120	Set value is the percentage of battery rated voltage; Return value and delay value can also be set.
		Return	(0-200)%	115	
		Delay	(0-3600)s	60	
16	Battery Undervolt Warn	Set	(0-200)%	85	Return value and delay value can also be set.
		Return	(0-200)%	90	
		Delay	(0-3600)s	60	
17	Charge Alt Fail	Set	(0-60.0)V	8.0	During engine normal running process, when
		Return	(0-60.0)V	10.0	

No	Item	Range	Default	Description	
		Delay	(0-3600)s	10	charger D+ voltage is below this value, controller issues charge alt fail warning.
18	Urea Level Low Shutdown	Set	(0-100)%	10	Set value is urea level; Return value and delay value can also be set.
		Delay	(0-3600)s	5	
19	Urea Level Low Warning	Set	(0-100)%	20	
		Return	(0-100)%	30	
		Delay	(0-3600)s	5	
20	CAN Data Upload Enable	(0-1)	0	0: Disable; 1: Enable	
21	Set Speed Output	Set	(0-3600)r/min	1500	When the speed exceeds the set value, the configured output port for the set speed is activated. When the speed falls below the set value, the output port is deactivated after a delay.
		Delay	(0-3600)s	5	
22	Air Preheating	Enable	(0-1)	0	0: Disable; 1: Enable Sensor Correlates: 0: Engine Temperature; 1: Engine Oil Temperature; 2: Flex. Sensor 1; 3: Flex. Sensor 2; 4: Flex. Sensor 3; 5: Flex. Sensor 4; 6: Flex. Sensor 5; When enabled, before successful startup, if the temperature is below the set temperature, the air preheating output activates. The output deactivates once the temperature reaches the set value. If the temperature reaches the set value during the preheating phase, the preheating phase is skipped.
		Sensor Correlates	(0-6)	0	
		Set Value	(0-100)°C	10	

No	Item	Range	Default	Description	
23	Smart Water Jacket Preheating	Enable	(0-1)	0	0: Disable; 1: Enable Sensor Correlates: 0: Engine Temp; 1: Engine Oil Temp. 2: Flex. Sensor 1; 3: Flex. Sensor 2; 4: Flex. Sensor 3; 5: Flex. Sensor 4; 6: Flex. Sensor 5; Range: 0: Before safe on running; 1: Always. When enabled, if the reference temperature is below the opening temperature, the water jacket preheating output activates. The output deactivates when the temperature exceeds the closing temperature or when the maximum opening time is reached.
		Open	(0-100) °C	0	
		Close	(0-100)°C	25	
		Max. Open Time	(0-3600) min	60	
		Range	(0-1)	1	
		Sensor Correlates	(0-6)	0	
24	Stall Detection Set	Enable	(0-1)	1	0:Disable; 1: Enable When enabled, during the startup phase, if no speed is detected after the set delay time is due, a stall is reported and the system shuts down
		Detection Time	(0-5) s	2	
Air Compressor Setting					
1	Air Com. Onload Speed	(0-100)%	64.0	Set value is the percentage of rated speed; press onload key and when speed is up to load, load control outputs.	
2	Air Com. Unload Speed	(0-100)%	64.0	Set value is the percentage of rated speed; when discharge pressure reaches rated pressure after load, make speed steady at the set value.	

No	Item	Range	Default	Description	
3	Air Com. Target Pressure	(0-30000)kPa	700	Adjust speed at corresponding upper limit pressure value after load.	
4	Air Com. Unload Act Press	(0-30000)kPa	600	Adjust speed at corresponding lower limit pressure value after load.	
5	Raise Speed Rate Set	(30-500)r/s	150	Increased number of turns per second.	
6	Drop Speed Rate Set	(30-500)r/s	30	Reduced number of turns per second.	
7	Auto Load Control Set	(0-1)	0	0: Disable 1: Enable (only ordinary units are available)	
8	Auto Drain Control Set	Enable	(0-1)	0	0: Disable 1: Enable. When enabled and air compressor takes load, "Auto Drain Control" outputs as pre-set output time and interval time.
		Output Time	(0-3600)s	20	
		Interval Time	(0-36000)s	150	
9	Overload Protect Set	Set Value	(0-200)%	90	Set value is engine load rate; return and delay values can also be set.
		Return	(0-200)%	70	
		Delay	(0-3600)s	5	
10	Overload Drop Speed	(3-500)r/s	30	Decreased rotation number per second.	
11	Overload Maint. Speed	(0-100.0)%	70.0	Rated speed percentage. After protection for overload, compressor will slow down; when it goes to maint. speed, it will maintain at the speed.	
12	OverPress Auto Unload	Set Value	(0-200)%	120	Set value is compressor target pressure percentage; return value and delay value can also be set.
		Return	(0-200)%	110	
		Delay	(0-3600)s	5	
13	Bypass Valve Control	Enable	(0-1)	0	0: Enable; 1: Enable When enabled, during safe on running and start idle phases, when
		Bypass Speed	(0-6000)r/min	1300	
		Bypass	(0-30000)kPa	300	

No	Item	Range	Default	Description	
	Pressure	a		the engine speed exceeds the set bypass speed and the discharge pressure is lower than the set bypass pressure, the bypass valve opens after a delay. The running speed at which the bypass valve opens during the start idle phase.	
	Delay	(0-3600)s	5		
	Running Speed	(0-6000) rpm	1450		
14	Auto Onload Enable	(0-1)	0	0: Enable; 1: Enable	
15	High Discharge Pressure Start Inhibit	Enable	(0-1)	0	0: Enable; 1: Enable Start inhibited when discharge pressure is higher than this value.
		Discharge Pressure	(0-1000)	50kpa	
16	Low Discharge Temp. Inhibit Load	Enable	(0-1)	0	0: Enable; 1: Enable Loading is prohibited when the discharge temperature is below this value.
		Set Value	(0-1000)	50kpa	
17	Auto Drain 2 Control Set	Enable	(0-1)	0	0: Disable 1: Enable. When enabled, once the air compressor is loaded, the output port "Auto Drain Valve 2 Control Output" will activate according to the set output duration and interval time.
		Output Time	(0-3600)s	20	
		Interval Time	(0-36000)s	150	
18	Auto Drain 3 Control Set	Enable	(0-1)	0	0: Disable 1: Enable. When enabled, once the air compressor is loaded, the output port "Auto Drain Valve 3 Control Output" will activate according to the set output duration and interval time.
		Output Time	(0-3600)s	20	
		Interval Time	(0-36000)s	150	
19	Auto Standby Setting	Enable	0-1	0	0: Disable 1: Enable. 0: Discharge Pressure Sensor;
		Standby Delay	(0-3600) s	1800	
		Start Pressure	(0-200) %	110	

No	Item	Range	Default	Description	
20	Auto Stop Pressure Setting	Delay	(0-3600) s	3	1: Flex. Sensor 1; 2: Flex. Sensor 2; 3: Flex. Sensor 3; 4: Flex. Sensor 4; 5: Flex. Sensor 5; When enabled, if the pressure (Sensor Correlate value) > set stop pressure, it enters standby delay. Once the delay time is due, the engine shuts down and enters automatic standby mode. If the pressure (Sensor Correlate value) < set startup pressure, it enters startup delay. Once the delay time is due, the engine starts.
		Sensors Correlates	0-5	0	
		Stop Pressure	(0-200) %	120	
21	Target Pressure Compensation	Enable	0-1	0	0: Disable 1: Enable.
		Compensation Factor	0-10.0	1.0	After pressure compensation is enabled, if the discharge pressure still fails to reach the rated pressure within 30s in this stage, the speed will automatically increase. The maximum speed increase is calculated as: Rated Speed - Unload Speed. The rate of speed increase is determined by the formula: $(\text{Target Pressure} - \text{Current Pressure}) \times \text{Compensation Factor} / 1000$.
22	Discharge Pressure Difference Set	(0-30000)KPa	0	When the set value is > 0, the unload pressure = target pressure - the discharge	

No	Item	Range	Default	Description	
				pressure difference.	
23	Rated Speed Smart Set	Enable	0-1	0	0: Disable 1: Enable. When enabled and the selective configuration is not active, the engine's rated speed is the value calculated based on the rated pressure within the set linear segment. That is: Rated Speed = Speed at Lower Pressure Limit + (Rated Pressure - Lower Pressure Limit) * (Speed at Upper Pressure Limit - Speed at Lower Pressure Limit) / (Upper Pressure Limit - Lower Pressure Limit).
		Upper Pressure Limit	(0-30000)kPa	600	
		Speed at Upper Pressure Limit	(0-6000) r/min	2200	
		Lower Pressure Limit	(0-30000)kPa	600	
		Speed at Lower Pressure Limit	(0-6000) r/min	2200	
24	Pressure Rise Curve Setting	Pressure 1~6	(0-30000)kPa	0	When the set value is >0, during the pressure increasing process, the engine speed operates according to the set pressure-speed curve. Settings are configured sequentially from Point 6 to Point 5 and beyond (pressure settings are arranged from high to low).
		Speed 1~6	(0-6000)rpm	0	
25	Start Idle Delay Correlates Temp.	Enable	0-1	0	0: Disable 1: Enable. 0: Engine Temperature; 1: Engine Oil Temperature 2: Flex. Sensor 1; 3: Flex. Sensor 2; 4: Flex. Sensor 3; 5: Flex. Sensor 4; 6: Flex. Sensor 5; When enabled, during the start idle phase, it will exit the start idle delay period when the
		Sensor Correlates	0-6	0	
		Set Value	(0-100)°C	40	

No	Item	Range	Default	Description	
				temperature (value from the associated sensor) exceeds the set value.	
26	Engine Speed Control Select	(0-1)	0	0: Discharge Pressure; 1: Capacity Adjust Pressure	
27	Capacity Adjust Curve Setting	Pressure 1~6	(0-30000)KPa	0,10,100,150, 210,300	When engine speed control is set to capacity adjust pressure, the engine speed is adjusted based on the capacity adjust pressure according to the speed settings corresponding to each pressure point. Intermediate values are regulated linearly (overpressure automatic loading/unloading, overpressure warning, and overpressure shutdown still reference the target pressure).
		Speed 1~6	(0-6000)rpm	1800, 1800, 1700, 1600, 1400, 1400	
28	Vent Valve Setting	Enable	(0-1)	0	0: Disable 1: Enable. During the shutdown process, if the discharge pressure is greater than the vent valve's minimum opening pressure, the vent valve output activates. If the discharge pressure remains below the minimum opening pressure for a delay of 1s, the output deactivates.
		Mini. Opening Pressure	(0-9000) kPa	800	
Analog Sensor Setting					
Engine Temperature Setting					
1	Curve Type	(0-15)	9	SGD; see Table 12.	
2	Open Action	(0-2)	0	0: Warning; 1: Shutdown; 2: None	
3	Display Unit	(0-1)	0	0: °C; 1: °F	

No	Item	Range	Default	Description
4	Over Shutdown	((-50)-300)°C	98	When temp. sensor value is larger than this value, controller issues temp. over shutdown alarm; This value is detected only after safety on delay. Delay value can be set.
5	Over Warn	((-50)-300)°C	95	When temp. sensor value is over this value, controller issues temp. over shutdown alarm; This value is detected only after safety on delay. Return and delay value can be set.
6	Under Warn	((-50)-300)°C	70	When temp. sensor value is less than this value, controller issues temp. low warning alarm; This value is detected always. Delay value and return value can be set.
7	Onload Inhibit Under Temp.	(0-300)°C	30	When temp. sensor value is less than this value, onload is inhibited for compressor. Enable set can be done.
8	Heater Control	((-50)-300)°C	50	When temp. sensor value is less than this value, heater control outputs. Delay value and return value can be set.
9	Cooler Control	((-50)-300)°C	80	When temp. sensor value is larger than this value, cooler control outputs. Delay value and return value can be set.
10	Custom Curve			When custom resistor/voltage/current is chosen in the curve type, corresponding curve shall be set.

No	Item	Range	Default	Description
Engine Oil Pressure Setting				
1	Curve Type	(0-15)	9	SGD; see Table 12.
2	Open Action	(0-2)	0	0: Warning; 1: Shutdown; 2: None
3	Display Unit	(0-2)	0	0: kPa; 1: bar; 2: psi
4	OP Low Shutdown	(0-1000)kPa	103	When oil pressure sensor value is less than this value, controller issues OP low shutdown alarm. This value is detected only after safety on delay. Delay value can be set.
5	OP Low Warn	(0-1000)kPa	124	When oil pressure sensor value is less than this value, controller issues OP low warning alarm. This value is detected only after safety on delay. Delay value and return value can be set.
6	Custom Curve			When custom resistor/voltage/current is chosen in the curve type, corresponding curve shall be set.
Fuel Level Sensor Setting				
1	Curve Type	(0-15)	4	SGD; For details please refer to Table 12.
2	Open Action	(0-2)	0	0: Warning; 1: Shutdown; 2: None
3	Display Unit	(0-1)	0	0: %; 1: L
4	Under Shutdown	(0-300)%	10	When external sensor value is less than this value, controller issues shutdown alarm; Alarm enable and delay value can be set.
5	Under Warn	(0-300)%	20	When external sensor value is less than this value, controller issues

No	Item	Range	Default	Description
				warning alarm; Alarm enable, return and delay value can be set.
6	Fuel Pump Control	(0-300)%	10	When external fuel level sensor value is less than this value, fuel pump control outputs; Close value and opening time can also be set.
7	Fuel Tank Capacity Set	(0-10000)L	1000	
8	Custom Curve			When custom resistor/voltage/current is chosen in the curve type, corresponding curve shall be set.
Discharge Pressure Sensor Setting				
1	Curve Type	(0-15)	2	Custom 4-20mA curve; Please refer to Table 12 for details.
2	Open Action	(0-2)	0	0: Warning; 1: Shutdown; 2: None
3	Display Unit	(0-2)	0	0: kPa; 1: bar; 2: psi
4	Over Shutdown	(0-30000)kPa	2500	When external sensor value is larger than this value, controller issues shutdown alarm; Alarm enable and delay value can be set.
5	Under Shutdown	(0-30000)kPa	100	When external sensor value is less than this value, controller issues shutdown alarm; alarm enable and delay value can be set.
6	Over Warn	(0-30000)kPa	2000	When external sensor value is larger than this value, controller issues warning alarm; alarm enable, return and delay values can be set.
7	Under Warn	(0-30000)kPa	200	When external sensor value is less than this value, controller issues

No	Item	Range	Default	Description	
				warning alarm; alarm enable, return and delay values can be set.	
8	Target Percentage of Over Shutdown	Enable	(0-1)	0	0: Disable 1: Enable After it is enabled, when the external sensor value is greater than the percentage set by target pressure, it will send shutdown alarm.
		Setting Value	(0-300.0)%	120.0	
		Delay	(0-3600)s	5	
9	Target Percentage of Over Warn	Enable	(0-1)	0	0: Disable 1: Enable After it is enabled, when the external sensor value is greater than the percentage set by target pressure, it will send warning alarm. After the warning, when the pressure value is lower than the return value, the warning alarm will be automatically eliminated.
		Setting Value	(0-300.0)%	120.0	
		Delay	(0-3600)s	5	
10	Custom Curve			When custom resistance/current/voltage types are selected; related curve needs to be set.	
Discharge Temperature Sensor Setting					
1	Curve Type	(0-15)	9	SGD; For details see Table 12.	
2	Open Action	(0-2)	0	0: Warning; 1: Shutdown; 2: None	
3	Display Unit	(0-1)	0	0: °C; 1: °F	
4	Over Shutdown	(0-9000)°C	100	When external sensor value is over this value, controller issues shutdown alarm; alarm enable and delay can be set.	
5	Under Shutdown	(0-9000)°C	10	When external sensor value is less than this value, controller issues	

No	Item	Range	Default	Description	
				shutdown alarm; alarm enable and delay can be set.	
6	Over Warn	(0-9000)°C	90	When external sensor value is over this value, controller issues warning alarm; alarm enable, delay and return can be set.	
7	Under Warn	(0-9000)°C	20	When external sensor value is less than this value, controller issues warning alarm; alarm enable, delay and return can be set.	
8	Screw Oil Cooler Control 1	Enable	(0-1)	0	0: Disable; 1: Enable. After enabled, when the external discharge temperature sensor value is higher than the open value, cooler will output; when it is lower than the close value, cooler not output. When the max. open time set as 0, output port works according to the open and close values, not limited by the max. open time.
		Open	(0-300)°C	80	
		Close	(0-300)°C	75	
		Max. Open Time	(0-3600)min	0	
9	Screw Oil Cooler Control 2	Enable	(0-1)	0	0: Disable; 1: Enable. After enabled, when the external discharge temperature sensor value is higher than the open value, cooler will output; when it is lower than the close value, cooler not output. When the max. open time set as 0, output port works according to the open and close values, not limited by the
		Open	(0-300)°C	80	
		Close	(0-300)°C	75	
		Max. Open Time	(0-3600)min	0	

No	Item	Range	Default	Description
				max. open time.
10	Custom Curve			If custom resistance type is chosen, related curve shall be set.
Flexible Sensor 1-5 Setting				
1	Sensor Type	(0-3)	0	0: Not Used 1: Temperature Sensor 2: Oil Pressure Sensor 3: Level Sensor
2	Curve Type			Changes according to sensor types.
3	Open Action	(0-2)	0	0: Warning; 1: Shutdown; 2: None
4	Display Unit	(0-1)	0	0: °C; 1: °F NOTE: Unit is different for different sensor.
5	Over Shutdown	(0-9000)	100	When external sensor value is larger than this value, controller issues shutdown alarm; Alarm enable and delay value can be set.
6	Under Shutdown	(0-9000)	10	When external sensor value is less than this value, controller issues shutdown alarm; alarm enable and delay value can be set.
7	Over Warn	(0-9000)	90	When external sensor value is larger than this value, controller issues warning alarm; alarm enable, return and delay values can be set.
8	Under Warn	(0-9000)	20	When external sensor value is less than this value, controller issues warning alarm; alarm enable, return and delay values can be set.
9	Custom Curve			When custom resistance/current/voltage types are selected; related curve needs to

No	Item	Range	Default	Description	
				be set.	
Engine Temperature Related Setting					
1	Sensor Correlate Set	(0-5)	0	0: Not Used 1: Flexible Sensor 1 2: Flexible Sensor 2 3: Flexible Sensor 3 4: Flexible Sensor 4 5: Flexible Sensor 5	
Engine Oil Pressure Related Setting					
1	Sensor Correlate Set	(0-5)	0	0: Not Used 1: Flexible Sensor 1 2: Flexible Sensor 2 3: Flexible Sensor 3 4: Flexible Sensor 4 5: Flexible Sensor 5	
Oil Differential Pressure Setting					
1	Enable	(0-1)	0	0: Disable; 1: Enable.	
2	Oil Separator Inlet Sensor Selection	(0-8)	0	0: Not Used 1: Flexible Sensor 1 2: Flexible Sensor 2 3: Flexible Sensor 3 4: Flexible Sensor 4 5: Flexible Sensor 5	
3	Oil Separator Outlet Sensor Selection	(0-5)	0	0: Not Used 1: Flexible Sensor 1 2: Flexible Sensor 2 3: Flexible Sensor 3 4: Flexible Sensor 4 5: Flexible Sensor 5	
4	Display Unit	(0-4)	0	0: kPa; 1: bar; 2: psi; 3: MPa (x100); 4: MPa Option 3: MPa (x100): The scale is amplified by a factor of 100.	
5	High Shutdown Set	Enable	(0-1)	0	Alarm Detection Conditions: 1. Loaded; 2. Discharge temperature is greater than the set value of the lower limit of the effective detection range (for discharge temperature); 3: Speed is greater than the set value of the lower limit of the effective detection
		Set Value	(0-9000)kPa	300	
		Delay	(0-3600)s	5	
6	High Warning Set	Enable	(0-1)	0	
		Set Value	(0-9000)kPa	200	
		Return	(0-9000)kPa	190	
		Delay	(0-3600)s	5	
7	Effective Differential Pressure Detection Range	Lower Limit of Discharge Temp.	(0-100)°C	40	
		Lower Limit of Speed	(0-6000)rpm	1500	

No	Item	Range	Default	Description
				range (for speed).
Capacity Adjust Pressure Setting				
1	Sensor Correlates	(0-5)	0	0: Not Used 1: Flexible Sensor 1 2: Flexible Sensor 2 3: Flexible Sensor 3 4: Flexible Sensor 4 5: Flexible Sensor 5
Digital Input Ports				
Digital Input 1				
1	Contents Setting	(0-53)	3	Alarm Reset; Please refer to Table 11 for details.
2	Active Type	(0-1)	0	0: Active for Close 1: Active for Open
Digital Input 2				
1	Contents Setting	(0-53)	26	High Temp. Shutdown Input; Please refer to Table 11 for details.
2	Active Type	(0-1)	0	0: Active for Close 1: Active for Open
Digital Input 3				
1	Contents Setting	(0-53)	27	Low Oil Pressure Shutdown Input; Please refer to Table 11 for details.
2	Active Type	(0-1)	0	0: Active for Close 1: Active for Open
Digital Input 4				
1	Contents Setting	(0-53)	0	Users defined; Please refer to Table 11 for details.
2	Active Type	(0-1)	0	0: Active for Close 1: Active for Open
3	Active Range	(0-3)	2	0: From Safety On 1: From Crank 2: Always 3: Never
4	Active Action	(0-2)	0	0: Warning 1: Shutdown 2: Indication
5	Active Delay	(0-20.0)s	2.0	Time from detecting

No	Item	Range	Default	Description
				input is active to confirm.
6	Input Description			Users defined.
Digital Input 5				
1	Contents Setting	(0-53)	0	Users defined; Please refer to Table 11 for details.
2	Active Type	(0-1)	0	0: Active for Close 1: Active for Open
3	Active Range	(0-3)	2	0: From Safety On 1: From Crank 2: Always 3: Never
4	Active Action	(0-2)	0	0: Warning 1: Shutdown 2: Indication
5	Active Delay	(0-20.0)s	2.0	Time from detecting input is active to confirm.
6	Input Description			Users defined.
Digital Input 6				
1	Contents Setting	(0-53)	0	Users defined; For details see Table 11.
2	Active Type	(0-1)	0	0: Active for Close 1: Active for Open
3	Active Range	(0-3)	2	0: From Safety On 1: From Crank 2: Always 3: Never
4	Active Action	(0-2)	0	0: Warning 1: Shutdown 2: Indication
5	Active Delay	(0-20.0)s	2.0	Time from detecting input is active to confirm.
6	Input Description			Users defined.
Auxiliary Outputs				
Auxiliary Output 1				
1	Contents Setting	(0-129)	29	Fuel relay output; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close

No	Item	Range	Default	Description
Auxiliary Output 2				
1	Contents Setting	(0-129)	28	Start relay output. Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Auxiliary Output 3				
1	Contents Setting	(0-129)	30	Idle speed control; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Auxiliary Output 4				
1	Contents Setting	(0-129)	26	Load control; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Auxiliary Output 5				
1	Contents Setting	(0-129)	39	Normal running output; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Auxiliary Output 6				
1	Contents Setting	(0-129)	42	Common alarm; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Auxiliary Output 7				
1	Contents Setting	(0-129)	0	Not Used; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Auxiliary Output 8				
1	Contents Setting	(0-129)	0	Not Used; Please refer to Table 10 for details.
2	Output Type	(0-1)	0	0: Normally Open 1: Normally Close
Alternate Configuration Setting				

No	Item	Range	Default	Description	
Alternate Configuration 1					
1	Enable Choose	(0-1)	0	0: Disable 1: Enable	
2	Engine Rated Speed	(0-6000)r/min	2200	When this is enabled, if input is configured to "Alt Config. 1 Active", and if input is active, speed shall be adjusted according to alternate configuration settings after load.	
3	Engine Idle Speed	(0-100.0)%	64.0		
4	Air Com. Onload Speed	(0-100.0)%	64.0		
5	Engine Unload Speed	(0-100.0)%	70.0		
6	Air Com. Target Pressure	(0-30000)kPa	700		
7	Air Com. Unload Act Press	(0-30000)kPa	600		
8	Load Output Selection	(0-3)	1	0: Load Control; 1: Load Control 1 2: Load Control 2 3: Load Control 3	
9	Overload Maint. Speed	(0-100.0)%	70.0	Alt Config. 1 Rated Speed percentage; After overload protection, air compressor will slow down, and when it goes to maint. speed, it will keep the speed.	
10	Pressure Rise Curve Setting	Pressure 1~6	(0-30000)kPa	0	Optional Configuration 1 - Boosting Curve: When the set value is >0, during the pressure rising process, the engine speed operates according to the configured pressure-speed curve. Settings are applied sequentially from Point 6 to Point 5 and beyond (pressure values are set from high to low).
		Speed 1~6	(0-6000)rpm	0	
11	Capacity Adjust Curve Setting	Pressure 1~6	(0-30000)kPa	0,10,100,150,210,300	Optional Configuration 1 - Capacity Adjust Curve: When engine speed regulation is set to capacity adjust pressure, the engine speed is adjusted based
		Speed 1~6	(0-6000)rpm	1800, 1800, 1700, 1600,	

No	Item		Range	Default	Description
				1400, 1400	on the capacity adjust pressure according to the predefined speed values corresponding to each pressure point. Intermediate values are regulated linearly. (Actions such as over pressure automatic loading/unloading, over pressure warnings, and over pressure shutdown still reference the target pressure (not the capacity adjust pressure)).
Alternate Configuration 2					
1	Enable Choose		(0-1)	0	0: Disable 1: Enable
2	Engine Rated Speed		(0-6000) r/min	2200	When this is enabled, if input is configured to "Alt Config. 2 Active", and if input is active, speed shall be adjusted according to alternate configuration settings after load.
3	Engine Idle Speed		(0-100.0)%	64.0	
4	Air Com. Onload Speed		(0-100.0)%	64.0	
5	Engine Unload Speed		(0-100.0)%	70.0	
6	Air Com. Rated Pressure		(0-30000)kPa	700	
7	Air Com. Unload Act Press		(0-30000)kPa	600	
8	Load Output Selection		(0-3)	2	0: Load Control; 1: Load Control 1 2: Load Control 2 3: Load Control 3
9	Overload Maint. Speed		(0-100.0)%	70.0	Alt Config. 2 Rated Speed percentage; After overload protection, air compressor will slow down, and when it goes to maint. speed, it will keep the speed.
10	Pressure Rise Curve Setting	Pressure 1~6	(0-30000)kPa	0	Optional Configuration 2 - Boosting Curve: When the set value is >0, during the pressure rising process, the
		Speed 1~6	(0-6000)rpm	0	

No	Item	Range	Default	Description	
				engine speed operates according to the configured pressure-speed curve. Settings are applied sequentially from Point 6 to Point 5 and beyond (pressure values are set from high to low).	
11	Capacity Adjust Curve Setting	Pressure 1~6	(0-30000)kPa	0,10,100,150,210,300	Optional Configuration 2 - Capacity Adjust Curve: When engine speed regulation is set to capacity adjust pressure, the engine speed is adjusted based on the capacity adjust pressure according to the predefined speed values corresponding to each pressure point. Intermediate values are regulated linearly. (Actions such as over pressure automatic loading/unloading, over pressure warnings, and over pressure shutdown still reference the target pressure (not the capacity adjust pressure)).
		Speed 1~6	(0-6000)rpm	1800, 1800, 1700, 1600, 1400, 1400	
Alternate Configuration 3					
1	Enable Choose	(0-1)	0	0: Disable 1: Enable	
2	Engine Rated Speed	(0-6000) r/min	2200	When this is enabled, if input is configured to "Alt Config. 3 Active", and if input is active, speed shall be adjusted according to alternate configuration settings after load.	
3	Engine Idle Speed	(0-100.0)%	64.0		
4	Air Com. Onload Speed	(0-100.0)%	64.0		
5	Engine Unload Speed	(0-100.0)%	70.0		
6	Air Com. Rated Pressure	(0-30000)kPa	700		
7	Air Com. Unload Act Press	(0-30000)kPa	600		
8	Load Output Selection	(0-3)	2		0: Load Control;

No	Item	Range	Default	Description	
				1: Load Control 1 2: Load Control 2 3: Load Control 3	
9	Overload Maint. Speed	(0-100.0)%	70.0	Alt Config. 3 Rated Speed percentage; After overload protection, air compressor will slow down, and when it goes to maint. speed, it will keep the speed.	
10	Pressure Rise Curve Setting	Pressure 1~6	(0-30000)KPa	0	Optional Configuration 3- Boosting Curve: When the set value is >0, during the pressure rising process, the engine speed operates according to the configured pressure-speed curve. Settings are applied sequentially from Point 6 to Point 5 and beyond (pressure values are set from high to low).
		Speed 1~6	(0-6000)rpm	0	
11	Capacity Adjust Curve Setting	Pressure 1~6	(0-30000)KPa	0,10,100,150,210,300	Optional Configuration 3 - Capacity Adjust Curve: When engine speed regulation is set to capacity adjust pressure, the engine speed is adjusted based on the capacity adjust pressure according to the predefined speed values corresponding to each pressure point. Intermediate values are regulated linearly. (Actions such as over pressure automatic loading/unloading, over pressure warnings, and over pressure shutdown
		Speed 1~6	(0-6000)rpm	1800, 1800, 1700, 1600, 1400, 1400	

No	Item	Range	Default	Description
				still reference the target pressure (not the capacity adjust pressure).
Maintenance Setting				
1	Oil Filter Set	(0-1)	0	0: Disable 1: Enable Maintenance time, maintenance time due action, maintenance timing method, maintenance time reset can also be set at the same time; After maintenance, maintenance time due alarm can be removed by resetting maintenance time; Please refer to Table 14 for details.
2	Oil Separator Set	(0-1)	0	
3	Air Filter Set	(0-1)	0	
4	Lubrication Set	(0-1)	0	
5	Engine Oil Filter Set	(0-1)	0	
6	Engine Fuel Filter Set	(0-1)	0	
7	Engine Lubrication Set	(0-1)	0	
8	Maintenance 8 Set	(0-1)	0	
9	Maintenance 9 Set	(0-1)	0	
10	Maintenance 10 Set	(0-1)	0	
ECU Info Display Set				
1	ECU Info Smart Display	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> ECU unissued data does not display; <input type="checkbox"/> ECU unissued data displays "###"; Default: <input checked="" type="checkbox"/>
2	D+ Voltage	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> D+ data is obtained by ECU; <input type="checkbox"/> D+ data is obtained by analog sampling; Default: <input checked="" type="checkbox"/>
3	Oil Temp	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Related data is displayed in the main interface; <input type="checkbox"/> Related data is not displayed in the main interface; Default: <input checked="" type="checkbox"/>
4	Fuel Temp	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
5	Fuel Press	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
6	Inlet Temp	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
7	Discharge Temp	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
8	Turbo Press	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
9	Coolant Press	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
10	Coolant Level	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
11	Fuel Used	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
12	Sum Fuel Used	<input type="checkbox"/> - <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

No	Item	Range	Default	Description
13	Load Ratio	(□-☑)	☑	
14	Torque Percent	(□-☑)	☑	
15	Water In Fuel	(□-☑)	☑	
16	Urea Level	(□-☑)	☑	
17	DPF Smoke and Dust Load Rate	(□-☑)	☑	
18	SCR Inlet Temp	(□-☑)	☑	
19	SCR Outlet Temp	(□-☑)	☑	

▲NOTES:

- After ACC7100A using USB, the USB protective rubber cap shall be restored to its original state, so as to achieve better dust-proof and water-proof effect.
- Regarding parameter setting on PC software, it isn't needed to input default factory password "1234" if it is not changed; if it is the first time to do configuration on PC, then it is needed to input module password in password screen.
- After correct password is inputted, there is no need to input again within 5 minutes and parameter setting can be entered directly;
- Digital input ports cannot be set the same item, otherwise function shall not work correctly; Output ports can be set the same item.
- Engine temperature related settings: if it is ordinary engine and engine temperature is needed, engine temperature related sensor shall be set; choose corresponding digital sensor channel, and the channel can lead to engine temp. sensor, and engine temperature shall be displayed at this time.
- Engine oil pressure related settings: if it is ordinary engine and it is needed to use engine oil pressure to judge crank disconnect, engine oil pressure related sensor shall be set; choose corresponding flexible sensor channel and this channel can lead to engine oil pressure sensor, engine oil pressure shall be displayed at this time, as one of the conditions of crank disconnection.

8.2 DEFINED CONTENTS OF AUXILIARY OUTPUT PORTS 1-6

8.2.1 DEFINED CONTENTS TABLE OF AUXILIARY OUTPUT PORTS 1-6

Table 10 Defined Contents Table of Auxiliary Output Ports 1-6

No.	Type	Function Description
0	Not Used	
1	Custom Period 1	Please refer to the following contents for function details.
2	Custom Period 2	
3	Custom Period 3	
4	Custom Period 4	
5	Custom Period 5	
6	Custom Period 6	
7	Custom Combined 1	
8	Custom Combined 2	
9	Custom Combined 3	
10	Custom Combined 4	
11	Custom Combined 5	

No.	Type	Function Description
12	Custom Combined 6	
13	Set Speed Output	When speed exceeds the set speed, the output port is activated; when the speed falls below the set speed, the output port is deactivated after a delay.
14	Reserved	
15	Air Flap Control	Act at the time of over speed shutdown alarm and emergency stop; Air flap can be closed to realize fast stop.
16	Audible Alarm	Act at the time of warning and shutdown alarms; Annunciator can be connected externally; It can be inhibited to output when input port "Alarm Mute" is active or any button is pressed; When there is new warning or shutdown alarm, it outputs again.
17	Louver Control	Act at the time of engine start; Disconnect after engine stop.
18	Fuel Pump Control	Act by fuel level sensor of fuel pump controlling the upper and lower limits;
19	Heater Control	Act by temp. sensor of heater control controlling the upper and lower limits;
20	Cooler Control	Act by temp. sensor of cooler control controlling the upper and lower limits;
21	Fuel Pre-supply	Under standby state, fuel pre-supply output port is active and it outputs circularly according to pre-set "Fuel Pre-supply Rest Time" and "Fuel Pre-supply Time"; If "Fuel Pre-supply Rest Time" is 0h, then it doesn't output; Before start, pre-set pre-supply time is outputted; If pre-heat time is not configured, pre-supply outputs; If pre-heat time is configured, then pre-heat phase outputs;
22	Screw Oil Cooler Control 1	When the external discharge temperature sensor value is higher than the open value, cooler will output; when it is lower than the close value, cooler not output. When the max. open time set as 0, output port works according to the open and close values, not limited by the max. open time.
23	Pre-lubricate	Act at the phase of pre-heating, fuel, start, and start rest time.
24	Remote Control	Controlled by communication port RS485.
25	Screw Oil Cooler Control 2	When the external discharge temperature sensor value is higher than the open value, cooler will output; when it is lower than the close value, cooler not output. When the max. open time set as 0, output port works according to the open and close values, not limited by the max. open time.
26	Load Control	Onload button is pressed or load control input is active, speed reaches load speed, then load control outputs; If unload button is pressed again or load input is inactive, then load control stops outputting.
27	Min. Pressure Valve Control	When the input is active and in load status, min. pressure valve outputs; if in unload status, input is inactive or engine stops, min. pressure valve not output.

No.	Type	Function Description
28	Start Relay	Act at engine start; and disconnect after successful start.
29	Fuel Relay	Act at engine start; and disconnect at ETS stop.
30	Idle Control	Used for engine with idle speed; Pull in before start, and disconnect at entering warming up time; Pull in at the process of stop idle speed, and disconnect when engine stops completely.
31	Speed Raise Output	Act in warming up period, and controlled by speed regulator in normal running period.
32	Speed Drop Output	Act from stop idle speed to waiting for stop period and controlled by speed regulator in normal running period.
33	Energize to Stop	Used for engine with stop ETS; Pull in when stop idle speed is over, and disconnect when pre-set "ETS Solenoid Hold" is over.
34	Run Key Switch Control	Used for checking ECU data once at power on; it outputs once it is power on; it stops outputting the signal at "ETS hold time" and "failed to stop" time.
35	ECU Stop	Applicable for engine supporting ECU, and used to control ECU stop.
36	ECU Power	Applicable for engine supporting ECU, and used to control ECU power.
37	After-treatment Power	When fuel outputs, the after-treatment output port works, it doesn't work until the end of "After stop" delay. Under standby status, if there is alarm shutdown and enters "ETS hold time", it doesn't work.
38	Crank Success	Pull in when it detects crank success signal.
39	Normal Running	Pull in and output when it is in normal running period.
40	Jacket Water Preheating Output	The preheating output is activated when the reference temperature is below the turn-on temperature, and deactivates if the temperature exceeds the turn-off temperature or the maximum turn-on time is reached.
41	Reserved	
42	Common Alarm	Act at the time of common alarm and common shutdown.
43	Common Shutdown	Act at the time of common shutdown.
44	Common Warning	Act at the time of common warning.
45	Manual Preheating	The output is activated when the manual preheat input is active during standby mode.
46	Battery Overvolt	Act when battery voltage high warning occurs.
47	Battery Undervolt	Act when battery voltage low warning occurs.
48	Failed to Charge	Act when failed to charge warning occurs.
49	Reserved	
50	ECU Warning	ECU issued a warning alarm signal.
51	ECU Shutdown	ECU issued a shutdown alarm signal.
52	ECU Comm. Fail	Controller cannot communicate with ECU.
53	Air Preheating	The output is activated before a successful start if the reference temperature is below the set temperature. The preheating phase is skipped once the temperature reaches the set value during the

No.	Type	Function Description
		preheating stage.
54	NCD Lamp Output	Related lamp outputs of Euro V engine DPF.
55	Regen Req Lamp	
56	Regen Inhibit Lamp	
57	Discharge Temp Lamp	
58	Regen Resp. Lamp	
59	Input 1 Active	Act when input 1 is active.
60	Input 2 Active	Act when input 2 is active.
61	Input 3 Active	Act when input 3 is active.
62	Input 4 Active	Act when input 4 is active.
63	Input 5 Active	Act when input 5 is active.
64	Input 6 Active	Act when input 6 is active.
65	Oil Differential Pressure Shutdown	This output is activated when the alarm for high differential pressure of the oil separator triggers a shutdown alarm.
66	Oil Differential Pressure Warning	This output is activated when the alarm for high differential pressure of the oil separator triggers a warning alarm.
67	Emergency Stop	Act when emergency stop alarm occurs.
68	Failed to Start	Act when failed to start alarm occurs.
69	Failed to Stop	Act when failed to stop alarm occurs.
70	Auto Drain Valve 2 Control	When enabled and the air compressor is loaded, the output port will cycle according to the set output duration and interval time. If the interval time is set to 0, this port remains active continuously. If the output duration is set to 0, this port is disabled.
71	Auto Drain Valve 3 Control	When enabled and the air compressor is loaded, the output port will cycle according to the set output duration and interval time. If the interval time is set to 0, this port remains active continuously. If the output duration is set to 0, this port is disabled.
72	Over Speed Warn	Act when engine over speed warning occurs.
73	Over Speed Shutdown	Act when engine over speed shutdown occurs.
74	Unload Valve Output	During the shutdown process, the unload valve output is activated if the discharge pressure is greater than the valve's minimum opening pressure. The output deactivates after a 1s delay once the discharge pressure falls below the minimum opening pressure.
75	Auto Drain Control	When auto drain function is enabled and air compressor is loaded, output port outputs based on the settings of output time and interval time cyclically; if interval is 0, then this port outputs continuously, if output time is 0, then this port does not output.
76	Load Control 1	When "Alt Config. 1 Active" is active, under normal running state, load control 1 outputs.
77	Load Control 2	When "Alt Config. 2 Active" is active, under normal running state, load control 2 outputs.
78	Load Control 3	When "Alt Config. 3 Active" is active, under normal running state, load control 3 outputs.

No.	Type	Function Description
79	High Temp Warning	Act when high temp. warning alarm occurs.
80	Low Temp Warning	Act when low temp. warning alarm occurs.
81	High Temp Shutdown	Act when high temp. shutdown alarm occurs.
82	Startup Alarm	The output is activated during the startup delay period when remote starts.
83	Engine Low OP Warn	Act when low oil pressure warning occurs.
84	Engine Low OP Shut	Act when low oil pressure shutdown occurs.
85	Engine OP Sensor Open	Act when low oil pressure is open circuit.
86	Reserved	
87	Reserved	
88	Low Fuel Level Warn	Act when low fuel level warning occurs.
89	Reserved	
90	Low Fuel Level Shut	Act when low fuel level shutdown occurs.
91	Reserved	
92	Reserved	
93	High Discharge Pressure Warn	Act when discharge pressure high warning occurs.
94	Low Discharge Pressure Warn	Act when discharge pressure low warning occurs.
95	High Discharge Pressure Shut	Act when discharge pressure high shutdown occurs.
96	Low Discharge Pressure Shut	Act when discharge pressure low shutdown occurs.
97	High Discharge Temp. Warn	Act when discharge temp. high warning occurs.
98	Low Discharge Temp. Warn	Act when discharge temp. low warning occurs.
99	High Discharge Temp. Shut	Act when discharge temp. high shutdown occurs.
100	Low Discharge Temp. Shut	Act when discharge temp. low shutdown occurs.
101	Flexible Sensor 1 High Warn	Act when sensor 1 high warning occurs.
102	Flexible Sensor 1 Low Warn	Act when sensor 1 low warning occurs.
103	Flexible Sensor 1 High Shut	Act when sensor 1 high shutdown occurs.
104	Flexible Sensor 1 Low Shut	Act when sensor 1 low shutdown occurs.
105	Flexible Sensor 2 High Warn	Act when sensor 2 high warning occurs.
106	Flexible Sensor 2 Low Warn	Act when sensor 2 low warning occurs.
107	Flexible Sensor 2 High Shut	Act when sensor 2 high shutdown occurs.
108	Flexible Sensor 2 Low Shut	Act when sensor 2 low shutdown occurs.
109	Flexible Sensor 3 High Warn	Act when sensor 3 high warning occurs.
110	Flexible Sensor 3 Low Warn	Act when sensor 3 low warning occurs.
111	Flexible Sensor 3 High Shut	Act when sensor 3 high shutdown occurs.
112	Flexible Sensor 3 Low Shut	Act when sensor 3 low shutdown occurs.
113	Flexible Sensor 4 High Warn	Act when sensor 4 high warning occurs.
114	Flexible Sensor 4 Low Warn	Act when sensor 4 low warning occurs.
115	Flexible Sensor 4 High Shut	Act when sensor 4 high shutdown occurs.
116	Flexible Sensor 4 Low Shut	Act when sensor 4 low shutdown occurs.
117	Flexible Sensor 5 High Warn	Act when sensor 5 high warning occurs.

No.	Type	Function Description
118	Flexible Sensor 5 Low Warn	Act when sensor 5 low warning occurs.
119	Flexible Sensor 5 High Shut	Act when sensor 5 high shutdown occurs.
120	Flexible Sensor 5 Low Shut	Act when sensor 5 low shutdown occurs.
121	Flexible Sensor 1 Control	The output is activated when the value of sensor 1 exceeds the set value, and deactivates once the value falls below the return value.
122	Flexible Sensor 2 Control	The output is activated when the value of sensor 2 exceeds the set value, and deactivates once the value falls below the return value.
123	Flexible Sensor 3 Control	The output is activated when the value of sensor 3 exceeds the set value, and deactivates once the value falls below the return value.
124	Flexible Sensor 4 Control	The output is activated when the value of sensor 4 exceeds the set value, and deactivates once the value falls below the return value.
125	Urea Level Low Warning	Act when urea level low warning occurs.
126	Urea Level Low Shutdown	Act when urea level low shutdown occurs.
127	Flexible Sensor 5 Control	The output is activated when the value of sensor 5 exceeds the set value, and deactivates once the value falls below the return value.
128	Louver Open	An output port for louver opening is configured, along with a defined louver opening time. It enters the louver opening phase (prior to the preheating phase) and activates the louver opening output.
129	Louver Close	An output port for louver closing is configured, along with a defined louver closing wait time. It enters the louver closing wait phase (following the system stop completion phase) and subsequently activates the louver closing output.

8.2.2 CUSTOM PERIOD OUTPUT

Defined period output is composed by 2 parts: period output S1 and condition output S2.



S1 and S2 both are true, then it outputs; S1 or S2 is false, it doesn't output;

Period output S1 can be configured randomly to one, or several period outputs; Delay time and output time after entering period can be set;

Condition output S2 can be any contents of output settings.

▲NOTE: When period output S1 delay time and output time are both 0, configurations of period output S1 are both true.

Output period: Start

Delay output time: 2s

Output time: 3s

Condition output contents: Input 1 is active;


Condition output active/inactive close; close when active (disconnect when inactive)

When input port 1 is active, and it enters start time and delays for 2s, custom period output starts to output, after outputting for 3s, it stops outputting;

When input port 1 is inactive, custom output doesn't output.

8.2.3 DEFINED COMBINATION OUTPUT

Defined combination output is composed by 3 parts: OR conditional output S1, OR conditional output S2, AND conditional output S3.

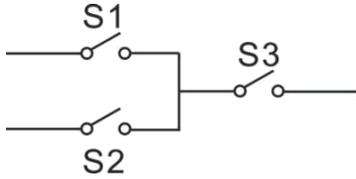

S1 or S2 is true, and S3 is true, then combination output outputs;

S1 and S2 both are false, or S3 is false, then combination output doesn't output.

▲NOTE: S1, S2 and S3 can be any contents except itself defined combination output of the output settings.

▲NOTE: S1, S2 and S3 cannot include or recursively include itself.

Contents of OR condition output S1: input port 1 is active;

Close when OR condition output S1 is active/inactive: close when active (disconnect when inactive);

Contents of OR condition output S2, input port 2 is active;

Close when OR condition output S2 is active/inactive: close when active (disconnect when inactive);

Contents of AND condition output S3: input port 3 is active;

Close when AND condition output S3 is active/inactive: close when active (disconnect when inactive);

When input port 1 is active or input port 2 is active, if input port 3 is active, defined combination output is outputting; If input port 3 is inactive, defined combination output is not outputting;

When input port 1 is inactive and port 2 is inactive, no matter port 3 is active or not, defined combination output is not outputting.

8.3 DEFINED CONTENTS OF DIGITAL INPUT PORTS

Table 11 Defined Contents of Digital Input Ports

No.	Type	Description
0	Users Configured	Users can define the following functions: Indication: indicate only, not warning or shutdown. Warning: warning only, not shutdown. Shutdown: alarm and shutdown immediately Never: input is inactive. Always: input is active all the time. From crank: start to detect at the time of start. From safety on: start to detect after safety on run delay.
1	Reserved	
2	Alarm Mute	Can prohibit buzzer and output configurations "Audible Alarm" outputs when input is active.
3	Alarm Reset	Can reset shutdown alarm when input is active.
4	Emergency Stop	When it is active, controller enters emergency stop.
5	Lamp Test	All LED indicators are illuminated when input is active.
6	Panel Lock	All buttons in panel is inactive except UP/DOWN/CONFIRM buttons. Parameters cannot be configured. But users can set language, check event log

No.	Type	Description
		and controller information. There is  in the bottom right corner on LCD when input is active.
7	Crank Success Input	When this function is active, it means the engine is started successfully. If this function is configured, the speed and oil pressure start success conditions will be invalid.
8	Min. Pressure Valve Control	It controls the output of min. pressure valve.
9	ECU Test Mode	When the input is active, power can be supplied to the ECU via the fuel relay.
10	Remote Start Inhibit	Inhibits remote start when it is active.
11	Speed Control Inhibit	When the input is active, speed control is disabled, and no speed control commands are issued to the engine.
12	High Oil Separator Differential Pressure Shutdown	When the input is active, the alarm output is triggered if all detection conditions are met.
13	High Oil Separator Differential Pressure Warning	Alarm Detection Conditions: 1. Loaded; 2. Discharge temperature exceeds the set value of the lower limit of the effective detection range (for discharge temperature); 3. Speed exceeds the set value of the lower limit of the effective detection range (for speed).
14	High Oil Filter Differential Pressure Shutdown	
15	High Oil Filter Differential Pressure Warning	
16	DPF Manual Request	A button can be connected externally (not self-lock); For engine with Euro V standard, if PDF regeneration is needed, press the button and controller shall issue manual request command to ECU.
17	DPF Inhibit	For engine with Euro V standard, if DPF Inhibit is needed, so when input is active, controller issues inhibition command to ECU.
18	DPF Test Mode	CUMMINS_QSG12 model: When the input port is active, it enters DPF regeneration test mode.
19	Reserved	
20	Reserved	
21	Alarm Stop Inhibit	All shutdown alarms are inhibited except emergency stop and over speed shutdown. (Override mode)
22	Instrument Mode	All outputs are inhibited in this mode.
23	Reserved	
24	Reserved	
25	External Charge Fail	When input is active, failed to charge warning alarm occurs.
26	High Temp Shutdown	Connects to sensor digital input.
27	Low OP Shutdown	Connects to sensor digital input.
28	Remote Start	When input is active, engine can start automatically. When input is inactive, engine can stop automatically.
29	Low Coolant Level	Connects to sensor digital input.

No.	Type	Description
30	Reserved	
31	Reserved	
32	Reserved	
33	Reserved	
34	Simulate Stop key	An external button (not self-lock) can be connected and pressed as simulate panel.
35	Simulate Load key	
36	Simulate Unload key	
37	Simulate Start key	
38	Simulate Maintenance key	
39	Simulate Reset key	
40	Reserved	
41	Reserved	
42	Alt Config. 1 Active	When input port is active, configuration is active; Different parameters can be set for it, making convenience for users to choose current configuration by input port.
43	Alt Config. 2 Active	
44	Alt Config. 3 Active	
45	Reserved	
46	Reserved	
47	Load Input	Act between start idle speed and stop idle speed; When it is active, speed reaches load speed, load control outputs; When it is inactive, load control stops outputting.
48	Louver Fully Open	The signal of louver fully open position.
49	Louver Fully Close	The signal of louver fully close position.
50	Manual Preheat	During standby mode, the manual preheat output is activated when the input signal is active.
51	Screen Off Mode	When the input port is active, the LED indicators and LCD backlight remain off, and the buzzer is silenced.
52	Reserved	
53	Reserved	

8.4 SELECTION OF SENSORS

Table 12 Sensors Selection

No.	Type	Description	Remark
1	Temperature Sensor	0 Not used 1 Custom Res Curve 2 Custom (4-20)mA Curve 3 Custom Volt Curve 4 VDO 5 CURTIS 6 VOLVO-EC 7 DATCON 8 SGX 9 SGD	Defined resistance's range is (0~1)kΩ, default is Not Used; Users can select corresponding curve by themselves; If pre-set sensor channel doesn't support current, and voltage type, then curve type item 2 and 3 display "Reserved".

No.		Description	Remark
		10 SGH 11 PT100 12 Cu50 13-15 Reserved	
2	Pressure Sensor	0 Not used 1 Custom Res Curve 2 Custom (4-20)mA Curve 3 Custom Volt Curve 4 VDO 10bar 5 CURTIS 6 VOLVO-EC 7 DATCON 10bar 8 SGX 9 SGD 10 SGH 11 -15 Reserved	Defined resistance's range is (0~1)kΩ, default is Not Used; Users can select corresponding curve by themselves; If pre-set sensor channel doesn't support current, and voltage type, then curve type item 2 and 3 display "Reserved".
3	Fuel Level Sensor	0 Not used 1 Custom Res Curve 2 Custom (4-20)mA Curve 3 Custom Volt Curve 4 SGD 5 SGH 6 -15 Reserved	Defined resistance's range is (0~1)kΩ, default is Not Used; Users can select corresponding curve by themselves; If pre-set sensor channel doesn't support current, and voltage type, then curve type item 2 and 3 display "Reserved".

8.5 CONDITIONS OF CRANK DISCONNECT SELECTION

Table 13 Crank Disconnect Conditions

No.	Setting Description
0	Engine Speed
1	Oil pressure
2	Oil pressure + Engine Speed

NOTES:

- There are 2 conditions to make starter disconnected with engine. Engine speed and oil pressure can be used separately. We recommend that oil pressure should be used with speed sensor together, in order to make the starter motor separate with engine immediately and can check crank disconnect exactly.
- Speed sensor is the magnetic equipment installed in starter for detecting flywheel teeth.
- When set it speed sensor, users must ensure that the number of flywheel teeth is the same as settings, otherwise, “over speed shutdown” or “under speed shutdown” may be caused.
- If unit doesn't have speed sensor please don't select corresponding items, otherwise, “start fail” or “loss speed signal” may be caused.
- If unit doesn't have oil pressure sensor, please don't select corresponding items.

8.6 MAINTENANCE SETTING

Table 14 Maintenance Setting

Item	Content	Description
Enable Choose	0: Disabled, 1: Enabled	Set maintenance function active or not;
Maintenance Time	(0-30000)h	It is the number of hours from the time the maintenance is enabled to when maintenance is required.
Maintenance Due Action	0: No Action; 1: Warning; 2: Shutdown; 3: Indication.	Alarm action when maintenance left time is 0.
Maint. Pre-Alarm Time	(0-30000)h	Hours after maintenance enabled to maintenance is needed;
Maint. Pre-Alarm Due Action	0: None 1: Warning 2: Shutdown 3: Indication	Alarm action for maintenance counting is due
Maint. Timing Method	0: Running Time 1: Real Time Clock 2: Running + Real Time	The timing of maintenance.
Reset Maintenance		After maintenance completion, through this item reset maintenance time.
Maintenance Description		Maintenance 8, 9 and 10 can set maintenance description character strings, like Change Engine Oil.

9 PARAMETERS SETTING

Press key and enter into setting menu after controller is power on. The menu list is as below:

- >Return
- >Parameters Set
- >Lock Set
- >Override Mode
- >DPF Regeneration
- >Language
- >LCD Backlight
- >Event Log
- >Black Box
- >Module Info

Select "Parameters Set" and input correct password (default: 1234) to enter setting interface.

Parameter setting process is as below:

Parameters Set >Return >Module Set >>Timers Set >Engine Set	Screen 1: Enter setting, press to change settings, press to enter setting (Screen 2), press to return. Or select "Return" by pressing and and press button to go back to previous screen.
Timers Set >Return >>Start Delay >Stop Delay >Preheat Delay	Screen 2: Press to change settings, press to enter setting (Screen 3), press to return (Screen 1). Or select "Return" by pressing and and press button to go back to the previous screen1.
Start Delay 00000s	Screen 3: Press and move cursor, select the value and press to modify. Press to save your modification. Then press to return (Screen 2).
Timers Set >Return >>Start Delay >>Stop Delay >>Preheat Delay	Screen 4: Press , select and modify the value (it is the same method as Screen 2 and Screen 3).
Over Shutdown Enable Choose: Enabled Set Val: +00098 Delay 00003s	Screen 5: Set temp. sensor shutdown parameters. Select >Over Shutdown , press to enter setting, then press again to enter Screen 5, press to select settings, then press to save and meanwhile the cursor will move down (as Screen 6).

Over Shutdown Enable Choose: Enabled Set Val: 00098 Delay 00003s	Screen 6: Press to change plus or minus, then press to next bit. After setting finished, press to enter delay setting. If it is not need to modify, press to return.
--	---

▲NOTES:

- Please modify parameters (eg: Crank Disconnect, Programmable Input/Output Configuration, Delay, etc) in standby status, otherwise it probably shutdowns or faults may occur.
- Over high threshold must be greater than lower threshold, otherwise over high and over low circumstances may occur simultaneously.
- Please set return value correctly when warning alarm is set, otherwise the controller can't alarm normally. When over warning is set, the return value should be set lower than set value; when low warning is set, return value should be set greater than set value.
- Programmable inputs can't be set the same item, otherwise it won't arise valid function. But programmable outputs can be set the same.

SmartGen

10 SENSOR SETTING

- If a sensor is needed to change again, the sensor curve will be transferred into the standard value. For example, if the default temperature sensor is SGD at default, the sensor curve is SGD curve; if it is set SGX, the temperature sensor curve is SGX curve.
- If there is difference between standard sensor curve and the used sensor, users can choose "defined sensor", and input "defined sensor curve".
- At the time of inputting the sensor curve, X value must be inputted from small to large, otherwise, some mistake may occur.
- If sensor is selected to "Not Used", then sensor curve doesn't work.
- If corresponding sensor only has alarm switch, then it is a must that set the sensor "Not Used", otherwise shutdown alarm or warning may occur.
- It is applicable to set the headmost and backmost values in the vertical coordinate as the same as the Figure 7.

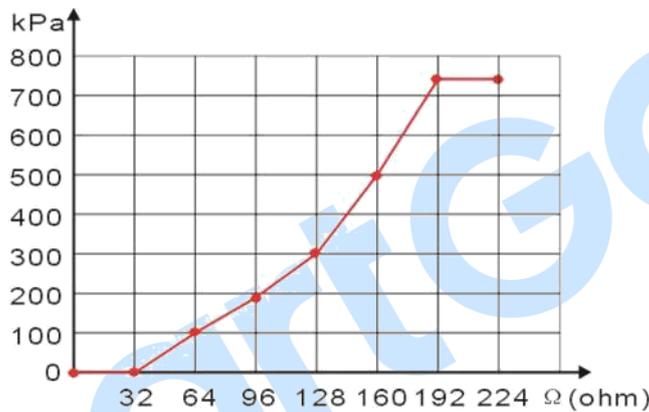


Fig.7 Sensor Curve Setting

Table 15 Common Pressure Unit Conversion Table

Item	N/m ² (pa)	kgf/cm ²	bar	(p/in ² .psi)
1Pa	1	1.02x10 ⁻⁵	1x10 ⁻⁵	1.45x10 ⁻⁴
1kgf/cm ²	9.8x10 ⁴	1	0.98	14.2
1bar	1x10 ⁵	1.02	1	14.5
1psi	6.89x10 ³	7.03x10 ⁻²	6.89x10 ⁻²	1

11 COMMISSIONING

It is suggested to do the following examination before formal system operation:

- a) Check all the connections are correct and wire diameter is suitable.
- b) Ensure that controller DC power has fuse, controller's positive and negative are correctly connected to starting battery.
- c) Take proper action to prevent engine from crank disconnect (e. g. Remove the connection wire of fuel valve). If everything is OK, make the starting battery power on and controller will execute routine.
- d) Press "start" button, engine will start. After pre-set start times, controller will send failed to start signal; then press "stop" to reset controller.
- e) Recover the action of stop engine start (e. g. Connect wire of fuel valve), and press start button again, then engine will start. If everything goes well, engine will go to normal running after idle speed (if idle running is set). During this time, please observe engine's running situation.
- f) If there is any other question, please contact SmartGen's service.

SmartGen

12 TYPICAL APPLICATION

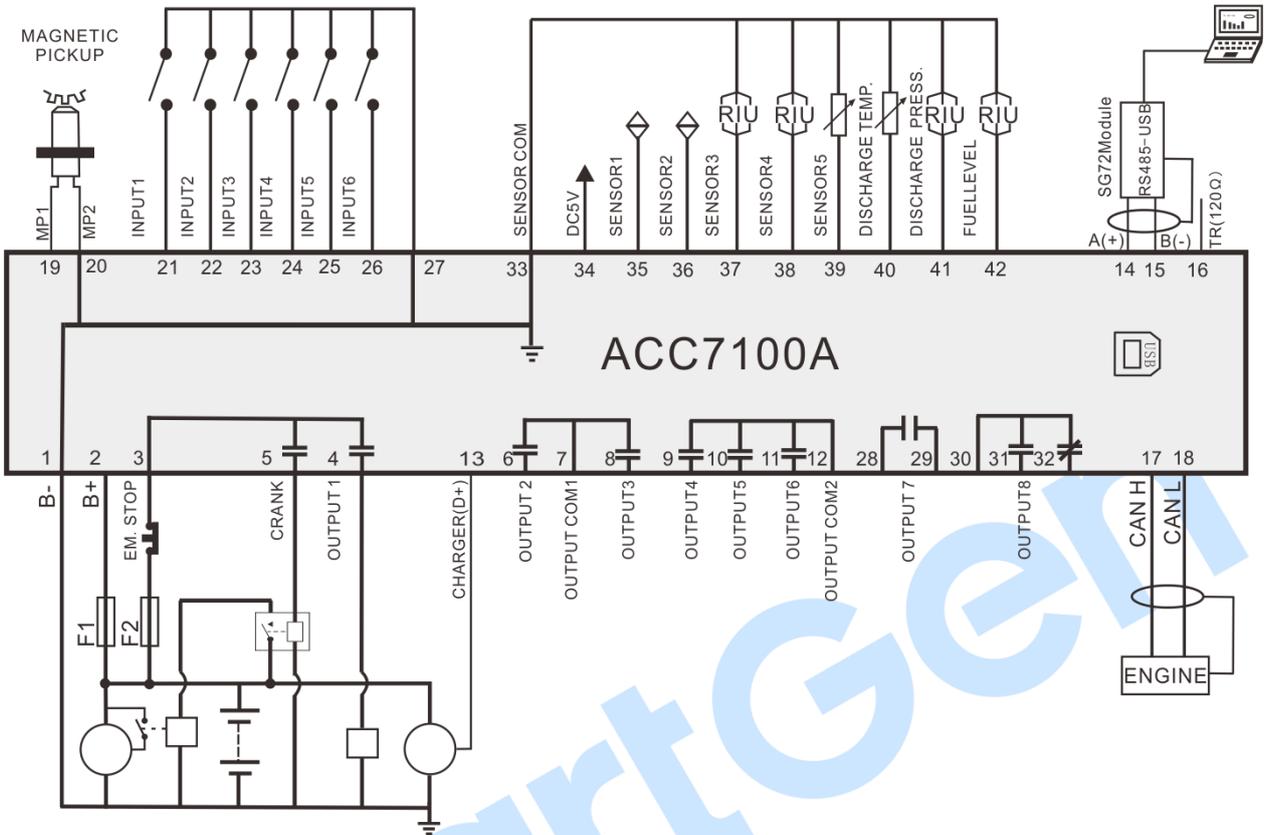


Fig.8 ACC7100A Typical Application Diagram

13 INSTALLATION

13.1 ACC7100A CLIPS INSTALLATION

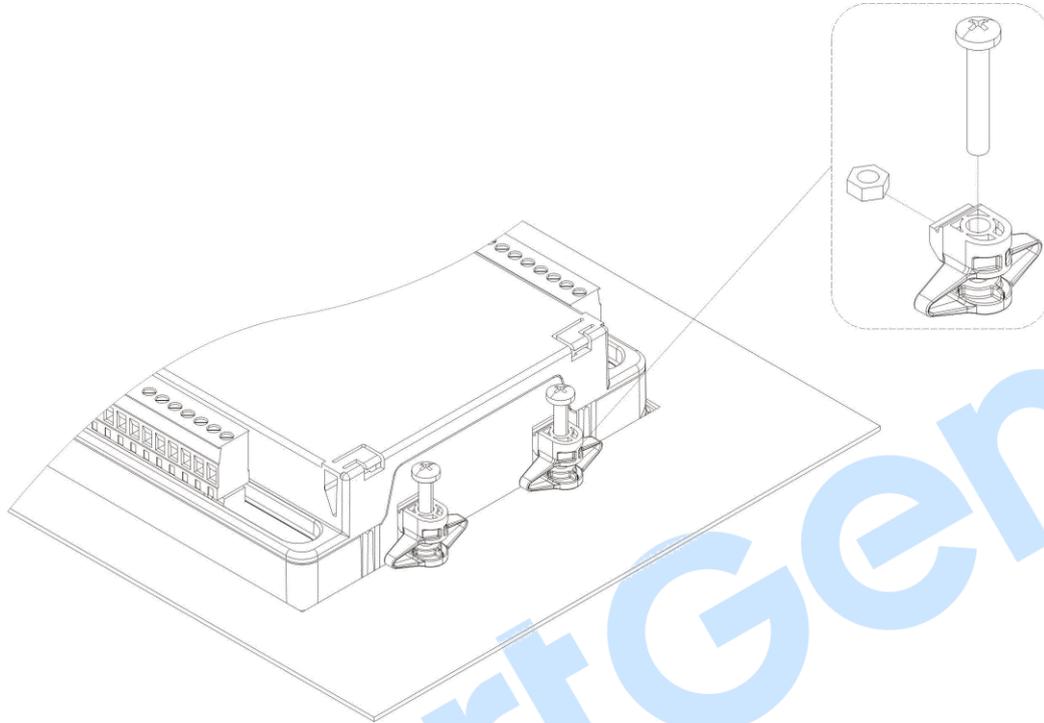


Fig.9 ACC7100A Clips Installation Diagram

- Assemble the four clips parts in turns and put them into the groove of the front shell of the one by one.
- Tighten the four screws in turns by a flat-blade screwdriver.

13.2 OVERALL & CUTOUT DIMENSIONS

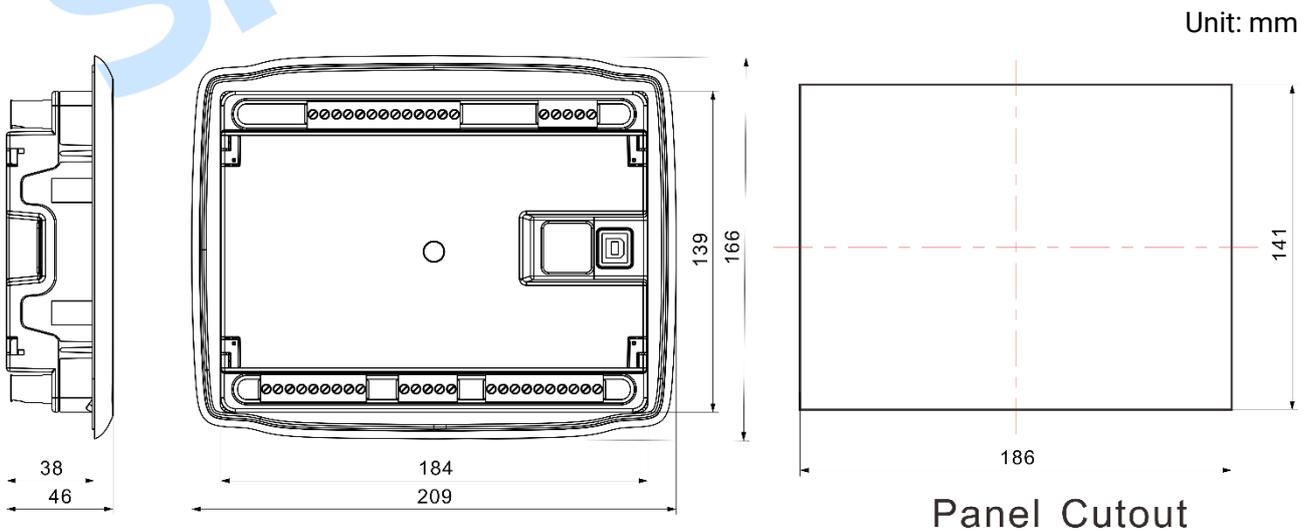


Fig.10 Overall & Cutout Dimensions

- **BATTERY VOLTAGE INPUT:** ACC7100A controller can suit battery voltage environment of

DC(8~35)V. Negative of battery must be connected with the engine shell. Diameter of wire which connects power supply B+ and B- with battery positive and negative must be over 2.5mm². If floating charger is installed, please firstly connect output wires of the charger to battery's positive and negative directly, then connect wires from battery's positive and negative to controller's positive and negative input ports in order to prevent charger disturbing the controller's normal working.

- **SPEED SENSOR INPUT:** Speed sensor is the magnetic equipment installed in the starter for detecting flywheel teeth. The connection wires with controller should apply 2-core shielding line. The shielding layer should be connected to No. 20 terminal in the controller and another side is hanging up in the air. The other two signal wires are connected to No. 19 and No. 20 terminals. The output voltage of speed sensor should be within AC (1~24)V (effective value) during the full speed range. AC12V is recommended (at rated speed). When speed sensor is installed, let the sensor spun to contacting flywheel first, then, port out 1/3 lap, and lock the nuts of sensor at last.
- **OUTPUT AND EXPAND RELAYS:** All controller outputs are relay contact output type. If expansion relay is needed, please add freewheel diode to both ends of expansion relay's coils (when relay coils have DC current) or, increase resistance-capacitance return circuit (when relay coils have AC current), in order to prevent disturbance to the controller or other equipment.

SmartGen

14 CONNECTIONS OF CONTROLLER WITH J1939 ENGINE

14.1 CUMMINS ISB/ISBE

Engine type: Cummins ISB.

Table 16 Connector B

Terminals of controller	Connector B	Remark
Fuel relay output	39	
Starting relay output	-	Connect with starter coil directly.
Auxiliary output 1	Extended 30A relay, providing battery voltage for 01, 07, 12, 13 terminals;	ECU power; Set auxiliary output 1 as "ECU power".

Table 17 9-pin Connector

Terminals of controller	9 pins connector	Remark
-	SAE J1939 shield	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	SAE J1939 signal	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return	Using impedance 120Ω connecting line.

14.2 CUMMINS QSL9

Suitable for CM850 engine control module. Engine type: Cummins-CM850.

Table 18 50-pin Connector

Terminals of controller	50 pins connector	Remark
Fuel relay output	39	
Starting relay output	-	Connect to starter coil directly.

Table 19 9-pin Connector

Terminals of controller	9 pins connector	Remark
-	SAE J1939 shield-E	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	SAE J1939 signal-C	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return-D	Using impedance 120Ω connecting line.

14.3 CUMMINS QSM11 (IMPORT)

Suitable for CM570 engine control module. Engine type is QSM11 G1, QSM11 G2. Engine type: Cummins ISB.

Table 20 C1-pin Connector

Terminals of controller	C1 connector	Remark
Fuel relay output	5&8	Outside extended relay, make port 5 and port 8 of C1 connected at fuel output.
Starting relay output	-	Connect to starter coil directly.

Table 21 3-pin Data Link Connector

Terminals of controller	3 pins data link connector	Remark
-	C	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	A	Using impedance 120Ω connecting line.
CAN(L)	B	Using impedance 120Ω connecting line.

14.4 CUMMINS QSX15-CM570

Suitable for CM570 engine control module. Engine type is QSX15 etc. Engine type: Cummins QSX15-CM570.

Table 22 50-pin Connector

Terminals of controller	50 pins connector	Remark
Fuel relay output	38	Oil spout switch.
Starting relay output	-	Connect to starter coil directly.

Table 23 9-pin Connector

Terminals of controller	9 pins connector	Remark
-	SAE J1939 shield-E	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	SAE J1939 signal-C	Using impedance 120Ω connecting line.
CAN(L)	SAE J1939 return-D	Using impedance 120Ω connecting line.

14.5 CUMMINS GCS-MODBUS

Suitable for GCS engine control module; Use RS485-MODBUS to read information of engine. Engine types are QSX15, QST30, QSK23/45/60/78 and so on.

Engine type: Cummins QSK-Modbus, Cummins QST-Modbus, Cummins QSX-Modbus.

Table 24 D-SUB Connector 06

Terminals of controller	D-SUB connector 06	Remark
Fuel relay output	5&8	Outside extended relay, make port 5 and 8 of connector 06 connected at fuel output.
Starting relay output	-	Connect to starter coil directly.

Table 25 D-SUB Connector 06

Terminals of controller	D-SUB connector 06	Remark
-	20	Communication shielding line (connect with ECU terminal only).
RS485+	21	Using impedance 120Ω connecting line.
RS485-	18	Using impedance 120Ω connecting line.

14.6 CUMMINS QSM11

Engine type: Common J1939.

Table 26 Engine OEM Connector

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	38	
Starting relay output	-	Connect with starter coil directly.
CAN(H)	46	Using impedance 120Ω connecting line.
CAN(L)	37	Using impedance 120Ω connecting line.

14.7 CUMMINS QSZ13

Engine type: Cummins-QSZ13; Speed governing can be realized.

Table 27 Engine OEM Connector

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	45	
Starting relay output	-	Connect to starter coil directly.
Auxiliary output 1	16&41	Idle speed control, normally close output. Make 16 connected with 41 during high-speed running via external extended relay.
Auxiliary output 2	19&41	Pulse speed raising control, normally open output. Make 19 connected with 41 for 0.1s during warming up via external extended relay.
CAN(H)	1	Using impedance 120Ω connecting line.
CAN(L)	21	Using impedance 120Ω connecting line.

14.8 DETROIT DIESEL DDEC III / IV

Engine type: Common J1939.

Table 28 Engine CAN Connector

Terminals of controller	CAN port of engine	Remark
Fuel relay output	Extended 30A relay, providing battery voltage for ECU.	
Starting relay output	-	Connect to starter coil directly.
CAN(H)	CAN(H)	Using impedance 120Ω connecting line.
CAN(L)	CAN(L)	Using impedance 120Ω connecting line.

14.9 DEUTZ EMR2

Engine type: Volvo-EDC4.

Table 29 F Connector

Terminals of controller	F connector	Remark
Fuel relay output	Extended 30A relay, providing battery voltage for 14; Fuse is 16A.	
Starting relay output	-	Connect to starter coil directly.
-	1	Connect to battery negative pole.
CAN(H)	12	Impedance 120Ω connecting line is recommended.
CAN(L)	13	Impedance 120Ω connecting line is recommended.

14.10 JOHN DEERE

Engine type: John Deere.

Table 30 21-pin Connector

Terminals of controller	21 pins connector	Remark
Fuel relay output	G, J	
Starting relay output	D	
CAN(H)	V	Using impedance 120Ω connecting line.
CAN(L)	U	Using impedance 120Ω connecting line.

14.11 MTU MDEC

Suitable for MTU engines, 2000 series, 4000 series. Engine type: mtu-MDEC-303.

Table 31 X1 Connector

Terminals of controller	X1 connector	Remark
Fuel relay output	BE1	
Starting relay output	BE9	
-	E	Communication shielding line (connect with one terminal only).
CAN(H)	G	Using impedance 120Ω connecting line.
CAN(L)	F	Using impedance 120Ω connecting line.

14.12 MTU ADEC (SMART MODULE)

Suitable for MTU engine with ADEC (ECU8) and SMART module. Engine type: mtu-ADEC.

Table 32 ADEC (X1 Port)

Terminals of controller	ADEC (X1 port)	Remark
Fuel relay output	X1 10	X1 Terminal 9 connected to negative of battery.
Starting relay output	X1 34	X1 Terminal 33 connected to negative of battery.

Table 33 ADEC (X4 Port)

Terminals of controller	SMART (X4 port)	Remark
CAN(H)	X4 1	Using impedance 120Ω connecting line.
CAN(L)	X4 2	Using impedance 120Ω connecting line.

14.13 MTU ADEC (SAM MODULE)

Suitable for MTU engine with ADEC (ECU7) and SAM module. Engine type: Common J1939.

Table 34 ADEC (X1 Port)

Terminals of controller	ADEC (X1 port)	Remark
Fuel relay output	X1 43	X1 Terminal 28 connected to negative of battery.
Starting relay output	X1 37	X1 Terminal 22 connected to negative of battery.

Table 35 SAM (X23 Port)

Terminals of controller	SAM (X23 port)	Remark
CAN(H)	X23 2	Using impedance 120Ω connecting line.
CAN(L)	X23 1	Using impedance 120Ω connecting line.

14.14 PERKINS

Suitable for ADEM3/ ADEM4 engine control module. Engine model is 2306, 2506, 1106, and 2806. Engine type: Perkins.

Table 36 Connector

Terminals of controller	Connector	Remark
Fuel relay output	1, 10, 15, 33, 34	
Starting relay output	-	Connect to starter coil directly.
CAN(H)	31	Using impedance 120Ω connecting line.
CAN(L)	32	Using impedance 120Ω connecting line.

14.15 SCANIA

Suitable for S6 engine control module; Engine model is DC9, DC12, and DC16. Engine type: Scania.

Table 37 B1 Connector

Terminals of controller	B1 connector	Remark
Fuel relay output	3	
Starting relay output	-	Connect to starter coil directly.
CAN(H)	9	Using impedance 120Ω connecting line.
CAN(L)	10	Using impedance 120Ω connecting line.

14.16 VOLVO EDC3

Suitable engine control mode is TAD1240, TAD1241, and TAD1242; Engine type: Volvo.

Table 38 "Stand alone" Connector

Terminals of controller	"Stand alone" connector	Remark
Fuel relay output	H	
Starting relay output	E	
Auxiliary output 1	P	ECU power; Set auxiliary output 1 as "ECU power".

Table 39 "Data Bus" Connector

Terminals of controller	"Data bus" connector	Remark
CAN(H)	1	Using impedance 120Ω connecting line.
CAN(L)	2	Using impedance 120Ω connecting line.

▲NOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

14.17 VOLVO EDC4

Suitable engine models are TD520, TAD520 (optional), TD720, TAD720 (optional), TAD721, TAD722, and TAD732. Engine type: Volvo-EDC4.

Table 40 Connector

Terminals of controller	Connector	Remark
Fuel relay output	Extended 30A relay, providing battery voltage for terminal 14; Fuse is 16A.	
Starting relay output	-	Connect to starter coil directly.
	1	Connected to negative of battery.
CAN(H)	12	Using impedance 120Ω connecting line.
CAN(L)	13	Using impedance 120Ω connecting line.

14.18 VOLVO-EMS2

Volvo Engine models are TAD734, TAD940, TAD941, TAD1640, TAD1641, and TAD1642. Engine type: Volvo-EMS2; and speed regulating can be realized.

Table 41 Engine CAN Port

Terminals of controller	Engine's CAN port	Remark
Auxiliary output 1	6	ECU stop; Set auxiliary output 1 as "ECU stop".
Auxiliary output 2	5	ECU power; Set auxiliary output 2 as "ECU power".
	3	Negative power.
	4	Positive power.
CAN(H)	1(Hi)	Using impedance 120Ω connecting line.
CAN(L)	2(Lo)	Using impedance 120Ω connecting line.

▲NOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

14.19 YUCHAI

Suitable for BOSCH common rail electronic-controlled engine. Engine type: BOSCH; and speed regulating can be realized.

Table 42 Engine 42-pin Port

Terminals of controller	Engine 42 pins port	Remark
Fuel relay output	1.40	Connect to engine ignition lock
Starting relay output	-	Connect to starter coil directly
CAN(H)	1.35	Using impedance 120Ω connecting line
CAN(L)	1.34	Using impedance 120Ω connecting line

Table 43 Engine 2-pin Port

Battery	Engine 2 pins port	Remark
Battery negative	1	Wire diameter 2.5mm ² .
Battery positive	2	Wire diameter 2.5mm ² .

14.20 WEICHAI

Suitable for Weichai BOSCH common rail electronic-controlled engine. Engine type: GTSC1; and speed regulating can be realized.

Table 44 Engine Port

Terminals of controller	Engine port	Remark
Fuel relay output	1.40	Connect to engine ignition switch.
Starting relay output	1.61	
CAN(H)	1.35	Using impedance 120Ω connecting line.
CAN(L)	1.34	Using impedance 120Ω connecting line.

▲NOTE: If there is any question of connection between controller and ECU communication, please feel free to contact SmartGen's service.

15 TROUBLE SHOOTING

Table 45 Troubleshooting

Symptoms	Possible Solutions
Controller no response with power	Check starting battery; Check controller wirings; Check DC fuse.
Engine stop	Check water/cylinder temperature is too high; Check DC fuse.
Controller emergency stop	Check emergency stop button function is right or not; Check wire connection is open circuit or not.
Oil pressure low alarm after crank disconnection	Check oil pressure and its wire connections.
Water temperature high alarm after crank disconnection	Check water temperature sensor and its wire connections.
Shutdown alarm in running	Check related switch and wirings according to LCD information; Check programmable input ports.
Crank disconnect failure	Check fuel circuit and related wirings; Check starting battery; Check speed sensor and its wire connections; Refer to engine manual.
None response for starter	Check starter wire connections; Check starting battery.
RS485 communication is abnormal	Check RS485 wire connections; Check RS485 COM port settings are correct or not; Check RS485 A and B are connected reversely or not; Check RS485 transfer module is damaged or not; Check PC communication port is damaged or not.
ECU communication failure	Check wire CAN high and CAN low polarity; Check 120Ω resistor is connected correctly or not; Check engine type is selected right or not; Check wire connection between controller and engine is right or not; output port settings are right or not.
ECU warning or shutdown	Refer to alarm screen to obtain information; If there is detailed alarm information, then check engine according to it; If there is not, refer to engine manual to obtain information according to SPN alarm code.