




**AIN8**  
**ANALOG INPUT MODULE**  
**CANBUS COMMUNICATION PROTOCOL**

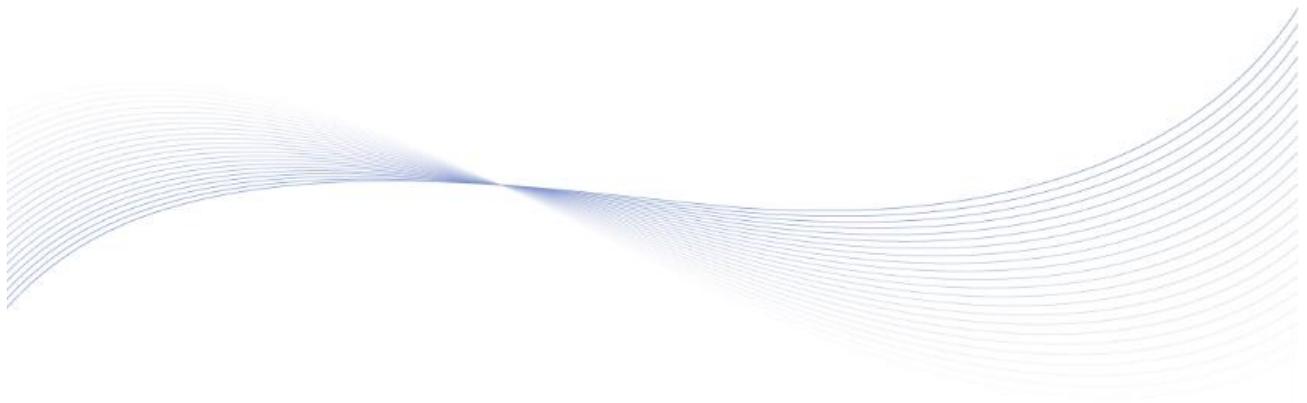

## SmartGen Registered trademark

No. 28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: [www.smartgen.com.cn/](http://www.smartgen.com.cn/)

[www.smartgen.cn/](http://www.smartgen.cn/)

Email: [sales@smartgen.cn](mailto:sales@smartgen.cn)

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

**Table 1 Software Version**

Date	Version	Content
2025-06-24	V1.0	Original release.

## CONTENTS

1 DESCRIPTION .....	4
2 INSTRUCTION OF PROTOCOL AND DIP SWITCH .....	4
3 THE DEFINITION OF PROTOCOL FRAME.....	5
3.1 MODULE UPLOAD DATA TO MASTER CONTROLLER .....	5
3.2 MASTER CONTROLLER SENDS COMMAND TO MODULE .....	6
4 SOLUTIONS FOR COMMUNICATION FAILURE.....	6

SmartGen

## 1 DESCRIPTION

The protocol describes the definition of AIN8Z module CAN port communication data frame to help users collect data and execute control command.

## 2 INSTRUCTION OF PROTOCOL AND DIP SWITCH

The protocol employs the 29-bit identifier (ID) of CAN extended frame, and the baud rate is 250kbps.

The module address can be set by the Switch 1 of DIP switch (12-side: 1, ON-side: 2). The BOOT mode can be set by the Switch 2 DIP switch (12-side: Non-BOOT mode, ON-side: BOOT mode). See detail in Table 2.

**Table 2 DIP Switch Setting**

DIP Switch Setting		
Function	Module Address	BOOT Mode
DIP Switch No.	1	2
Meaning of DIP Switch ON/OFF	OFF-side: 1	OFF-side: Non-BOOT Mode
	ON-side: 2	ON-side: BOOT Mode
NOTE: BOOT mode is for software update only, please be careful when operation!		

3 THE DEFINITION OF PROTOCOL FRAME

3.1 MODULE UPLOAD DATA TO MASTER CONTROLLER

3.1.1 formation\_1: 【ID: 0x18000800+0x10\*add】

Table 3 Module Data Frame 1

Transmit: Module		Receive: Master Controller	Frame Format: Extended Frame	Reporting Period: 200ms
ID: 0x18000800+0x10*add (When module address is set as 1, add=0; When module address is set as 2, add=1)				
Length				
8				
Data				
BYTE	Data Name	Ratio	Valid Value/Remark	
0	Sensor 1 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V	
1	Sensor 1 Data (High 8 Bits)			
2	Sensor 2 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V	
3	Sensor 2 Data (High 8 Bits)			
4	Sensor 3 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V	
5	Sensor 3 Data (High 8 Bits)			
6	Sensor 4 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V	
7	Sensor 4 Data (High 8 Bits)			

3.1.2 formation\_2: 【ID: 0x18000801+0x10\*add】

Table 4 Module Data Frame 2

Transmit: Module		Receive: Master Controller	Frame Format: Extended Frame	Reporting Period: 200ms
ID: 0x18000801+0x10*add				
Length				
8				
Data				
BYTE	Data Name	Ratio	Valid Value/Remark	
0	Sensor 5 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V	
1	Sensor 5 Data (High 8 Bits)			
2	Sensor 6 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V	
3	Sensor 6 Data (High 8 Bits)			

4	Sensor 7 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V
5	Sensor 7 Data (High 8 Bits)		
6	Sensor 8 Data (Low 8 Bits)	Resistance: 0.1 Current: 0.01 Voltage: 0.01	Unit Resistance: Ω Current: mA Voltage: V
7	Sensor 8 Data (High 8 Bits)		

**3.2 MASTER CONTROLLER SENDS COMMAND TO MODULE**

**Table 5 Master Controller Command Frame**

Transmit: Master Controller		Receive: Module		Frame Format: Extended Frame		Transmission Period: None	
ID: 0x18000850+0x10*add (When module address is set as 1, add=0; When module address is set as 2, add=1)							
Length							
8							
Data							
BYTE	Data Name	Ratio	Valid Value/Remark				
0	Sensor 1 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
1	Sensor 2 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
2	Sensor 3 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
3	Sensor 4 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
4	Sensor 5 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
5	Sensor 6 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
6	Sensor 7 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				
7	Sensor 8 Type	1	0: Resistance Type, 1: Current Type, 2: Voltage Type				

**4 SOLUTIONS FOR COMMUNICATION FAILURE**

- 1) Check the module wiring connection is correct or not;
- 2) Check the setting of CAN communication baud rate is correct or not;
- 3) It is recommended to download third-party communication test software to verify whether the communication is normal, such as CANTest.